

USER MANUAL

Z-8AI

SENECA s.r.l.

Via Austria, 26 – 35127 – PADOVA – ITALY

Tel. +39.049.8705355 – 8705359 Fax. +39.049.8706287

Web site: www.seneca.it

Technical assistance: supporto@seneca.it (IT), support@seneca.it (Other)

Commercial reference: commerciale@seneca.it (IT), sales@seneca.it (Other)



This document is property of SENECA srl. Duplication and reproduction of its are forbidden (though partial), if not authorized. Contents of present documentation refers to products and technologies described in it. Though we strive for reach perfection continually, all technical data contained in this document may be modified or added due to technical and commercial needs; it's impossible eliminate mismatches and discordances completely. Contents of present documentation is anyhow subjected to periodical revision. If you have any questions don't hesitate to contact our structure or to write us to e-mail addresses as above mentioned.

Seneca Z-PC Line module: Z-8AI


The Z-8AI module acquires up to 8 single-ended input signals (voltage or current type) and it converts them to a digital format (normalized measure).

General characteristics

- It is possible to choose if each input is voltage or current type
- It is possible to enable/disable each input
- It is possible to change: the electrical start/end scale between $\pm 10\text{ V}$, $\pm 20\text{ mA}$, the normalized start/end scale between ± 32000
- Configuration of the module (node) address and baud-rate by Dip-Switches
- It is possible to add/remove the module to/from RS485-bus without disconnecting the communication or power supply
- It is possible to switch automatically RS485 to RS232 or vice versa

Features

| INPUT | |
|-----------------------------------|---|
| Number | 8 |
| Resolution | 16 bits (15+1 sign). If Electrical End-Scale (E.E.S.) $<2.5\text{V}$, resolution= $80\mu\text{V}$; se $2.5\text{V}<\text{E.E.S.}<10\text{V}$, resolution= $300\mu\text{V}$ |
| Sampling time | Configurable between: 10, 20, 40 or 120 ms |
| Accuracy | Initial: 0.1% of E.E.S.. If $\text{E.E.S.}<2.5\text{V}$, accuracy= 2.5mV ; if $2.5\text{V}<\text{E.E.S.}<10\text{V}$, accuracy= 10mV |
| | Linearity: 0.03% of E.E.S. (see initial accuracy) |
| | Zero: 0.05% of E.E.S. (see initial accuracy) |
| | Thermal stability: $< 100\text{ ppm}/^\circ\text{K}$ |
| EMI: $< 1\%$ | |
| Protection | $\pm 30\text{Vdc}$ and 25mA |
| Voltage-type IN | Bipolar with E.S.S./E.E.S.(Electrical Start/End Scale) configurable between: $\pm 10\text{Vdc}$. Input impedance: $> 100\text{ k}\Omega$ |
| Current-type IN | Bipolar with E.S.S./E.E.S. configurable between: $\pm 20\text{mA}$. Internal shunt: 50Ω . To enable these shunts, use the «Analog inputs» Dip-Switches |
| Internal supply Vaux | The #4 and #7 screw terminals: power 13V to max 180mA (figure10) |
| CONNECTIONS | |
| RS485 interface | IDC10 connector |
| RS232 interface | Jack stereo 3.5mm connector: plugs into COM port |
| 1500 Vac ISOLATIONS | |
| | Between: power supply, ModBUS RS485, analog inputs |

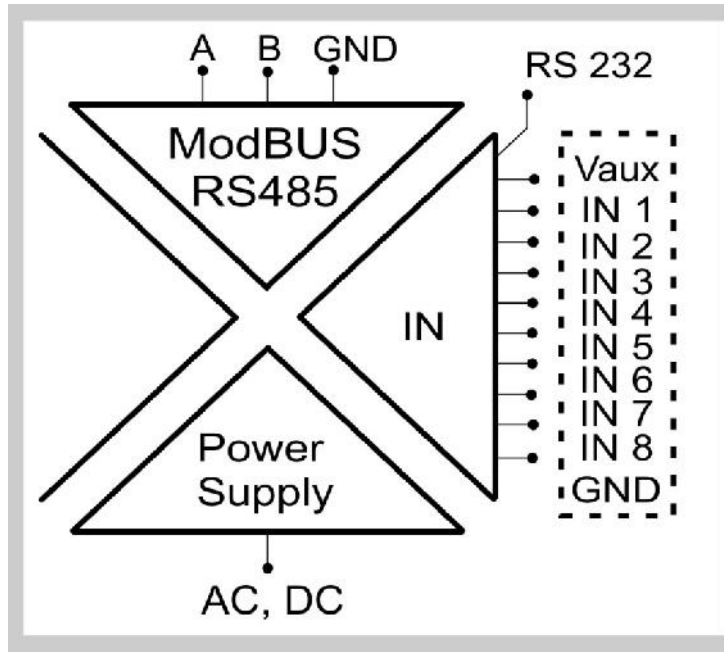

| POWER SUPPLY | |
|-------------------|--|
| Supply voltage | 10 – 40 Vdc or 19 – 28 Vac (50Hz - 60Hz) |
| Power consumption | Min: 0.5W; Max: 3.5W (to power 8 current loop) |


The power supply transformer necessary to supply the module must comply with EN60742 (Isolated transformers and safety transformers requirements). To protect the power supply, it is recommended to install a fuse.

Input connections

It is possible to connect to the Z-8AI module two types of sensors:

- **passive sensors**, indicated with “S” label (these sensors have to be supplied: by a module external voltage V_{ext} or by the module internal voltage V_{aux});
- **active sensors**, indicated with “voltage generator” or “current generator” label (these sensors have already been supplied).

In the following figure are shown five possible sensor connections.

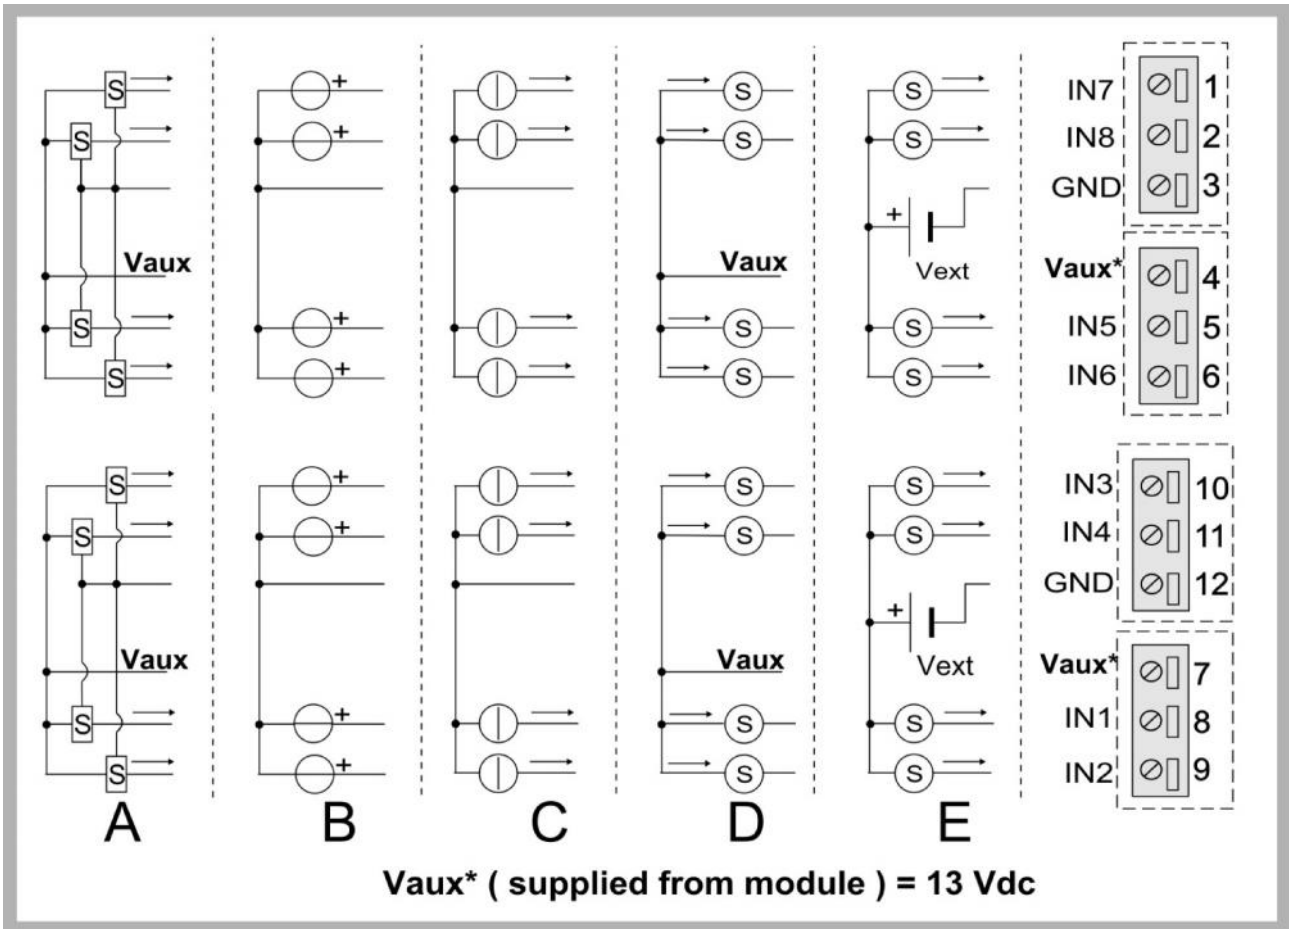

| | Acquired signal | Up to | Connection modality | Sensors power supply |
|----------|-------------------------|--------------------------------|---------------------|---------------------------|
| A | Voltage or current type | 8 passive sensors | 3-wire | Vaux (*) |
| B | Voltage type | 8 sensors as voltage generator | 2-wire | / |
| C | Current type | 8 sensors as current generator | 2-wire | / |
| D | Current-active type | 8 passive sensors | 2-wire | Vaux (*) |
| E | Current-passive type | 8 passive sensors | 2-wire | Vext (connect "-" to GND) |



(*) A and D connections are possible only if the absorbed currents sum from all sensors: <180mA.

Dip-switches table



In the following tables: box without circle means Dip-Switch=0 (OFF state); box with circle means Dip-Switch=1 (ON state).

| BAUD-RATE (Dip-Switches: DIP-SWITCH STATUS) | | | | | | |
|--|----|---------------------------|---|---|---|--|
| 1 | 2 | Meaning | | | | |
| | | Baud-rate=9600 Baud | | | | |
| | ● | Baud-rate=19200 Baud | | | | |
| ● | | Baud-rate=38400 Baud | | | | |
| ● | ● | Baud-rate=57600 Baud | | | | |
| ADDRESS (Dip-Switches: DIP-SWITCH STATUS) | | | | | | |
| 3 | 4 | 5 | 6 | 7 | 8 | Meaning |
| | | | | | | Address and Baud-Rate are acquired from memory(EEPROM) |
| | | | | | ● | Address=1 |
| | | | | ● | | Address=2 |
| | | | | ● | ● | Address=3 |
| | | | ● | | | Address=4 |
| X | X | X | X | X | X | |
| ● | ● | ● | ● | ● | ● | Address=63 |
| RS485 TERMINATOR (Dip-Switches: DIP-SWITCH STATUS) | | | | | | |
| 9 | 10 | Meaning | | | | |
| | | RS485 terminator disabled | | | | |
| | ● | RS485 terminator enabled | | | | |

| INPUT TYPE (Dip-Switches: ANALOG INPUTS) | | | | | | | | |
|--|---|---|---|---|---|---|---|--------------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | Meaning |
| | | | | | | | | IN 1=voltage |
| ● | | | | | | | | IN 1=current |
| | ● | | | | | | | IN 2=voltage |
| | | ● | | | | | | IN 2=current |
| | | | ● | | | | | IN 3=voltage |
| | | | | ● | | | | IN 3=current |
| | | | | | ● | | | IN 4=voltage |
| | | | | | | ● | | IN 4=current |

| INPUT TYPE (Dip-Switches: ANALOG INPUTS) | | | | | | | | |
|--|---|---|---|---|---|---|---|--------------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | Meaning |
| | | | | | | | | IN 5=voltage |
| | | | | ● | | | | IN 5=current |
| | | | | | | | | IN 6=voltage |
| | | | | | ● | | | IN 6=current |
| | | | | | | | | IN 7=voltage |
| | | | | | | ● | | IN 7=current |
| | | | | | | | | IN 8=voltage |
| | | | | | | | ● | IN 8=current |

RS485 Register table

| Name | Range | Interpretation of register | R/W | Default | Address |
|----------------|---|----------------------------|-----|---------|------------|
| MachineID | / | MSB, LSB | R | | 40001 |
| | Id_Code (Module ID) | | | 0x0E | Bit [15:8] |
| | Ext_Rev (Module version) | | | | Bit [7:0] |
| FWREV | / | Word | R | | 40062 |
| | Firmware Code | | | | |
| Status | / | Bit | R/W | | 40002 |
| | Generic error: 0=there isn't; 1=there is | | | / | Bit 15 |
| | Configuration error: 0=there isn't; 1=there is | | | / | Bit 14 |
| | Memory error (EEPROM): 0=there isn't; 1=there is | | | / | Bit 13 |
| | Save configuration in memory (EEPROM): 0=deactivated; 1=activated | | | / | Bit 12 |
| | These bits aren't used | | | / | Bit [11:9] |
| | Reset of module: 0=deactivated; 1=activated | | | / | Bit 8 |
| | These bits aren't used | | | / | Bit [7:0] |
| Errors | / | Bit | R | | 40063 |
| | These bits aren't used | | | / | Bit[15:10] |
| | Setting error (in memory): 0=there isn't; 1=there is | | | / | Bit 9 |
| | Calibration error (in memory): 0=there isn't; 1=there is | | | / | Bit 8 |
| | These bits aren't used | | | / | Bit [7:1] |
| | ADC error: 0=there isn't; 1=there is | | | / | Bit 0 |
| Address Parity | / | MSB, LSB | R/W | | 40012 |
| | Address for RS485 (address of module/node if parameters are configured by memory modality): from 0x01=1 to 0xFF=255 | | | 1 | Bit [15:8] |
| | Parity for RS485: 0=there isn't; 1=even parity; 2=odd parity | | | 0 | Bit [7:0] |
| Baudrate Delay | / | MSB, LSB | R/W | | 40013 |
| | Baud-rate for RS485 (baud-rate of module/node if parameters are configured by memory modality): 0=4800; 1=9600; 2=19200; 3=38400; 4=57600; 5=115200; 6=1200; 7=2400 | | | 38400 | Bit [15:8] |
| | Delay for RS485 (delay of communication response: it represents the number of the pauses(*) between the end of Rx message and the start of Tx message): from 0x00=0 to 0xFF=255 (*)1 pause=6 characters | | | 0 | Bit [7:0] |
| INPUT 1 | | | | | |
| IN1 | Between: IN 1-NSS, IN 1-NES | Word | R | | 40003 |
| | Normalized measure of input 1 | | | / | |
| IN 1-ESS | ±10000 [mV] (if voltage), ±20000 [µA] (if current) | Word | R/W | | 40014 |
| | Electrical Start Scale (E.S.S.) of input 1 [mV or µA] | | | 0 [mV] | |

| | | | | | |
|----------------|--|------|-----|------------|------------|
| IN 1-EES | ±10000 [mV] (if voltage), ±20000 [µA] (if current) | Word | R/W | | 40015 |
| | Electrical End Scale (E.E.S.) of input 1 [mV or µA] | | | 10000 [mV] | |
| IN 1-NSS | ±32000 | Word | R/W | | 40016 |
| | Normalized Start Scale (N.S.S.) of input 1 | | | 0 | |
| IN 1-NES | ±32000 | Word | R/W | | 40017 |
| | Normalized End Scale (N.E.S.) of input 1 | | | 10000 | |
| IN 1-FLAGS | / | Bit | R/W | | 40019 |
| | These bits aren't used | | | / | Bit [15:8] |
| | Input enabling: 0=deactivated; 1=activated | | | 1 | Bit 7 |
| | These bits aren't used | | | / | Bit [6:4] |
| | Sampling time: 0b00=10 ms; 0b01=30 ms; 0b10=40 ms; 0b11=120 ms | | | 10 [ms] | Bit [3:2] |
| | This bit isn't used | | | / | Bit 1 |
| | Acquired-input type: 0=voltage; 1=current | | | 0 | Bit 0 |
| INPUT 2 | | | | | |
| IN 2 | Between: IN 2-NSS, IN 2-NES | Word | R | | 40004 |
| | Normalized measure of input 2 | | | / | |
| IN 2-ESS | ±10000 [mV] (if voltage), ±20000 [µA] (if current) | Word | R/W | | 40020 |
| | Electrical Start Scale (E.S.S.) of input 2 [mV or µA] | | | 0 [mV] | |
| IN 2-EES | ±10000 [mV] (if voltage), ±20000 [µA] (if current) | Word | R/W | | 40021 |
| | Electrical End Scale (E.E.S.) of input 2 [mV or µA] | | | 10000 [mV] | |
| IN 2-NSS | ±32000 | Word | R/W | | 40022 |
| | Normalized Start Scale (N.S.S.) of input 2 | | | 0 | |
| IN 2-NES | ±32000 | Word | R/W | | 40023 |
| | Normalized End Scale (N.E.S.) of input 2 | | | 10000 | |
| IN 2-FLAGS | / | Bit | R/W | | 40025 |
| | See IN 1-FLAGS register (40019) | | | / | |
| INPUT 3 | | | | | |
| IN 3 | Between: IN 3-NSS, IN 3-NES | Word | R | | 40005 |
| | Normalized measure of input 3 | | | / | |
| IN 3-ESS | ±10000 [mV] (if voltage), ±20000 [µA] (if current) | Word | R/W | | 40026 |
| | Electrical Start Scale (E.S.S.) of input 3 [mV or µA] | | | 0 [mV] | |
| IN 3-EES | ±10000 [mV] (if voltage), ±20000 [µA] (if current) | Word | R/W | | 40027 |
| | Electrical End Scale (E.E.S.) of input 3 [mV or µA] | | | 10000 [mV] | |
| IN 3-NSS | ±32000 | Word | R/W | | 40028 |
| | Normalized Start Scale (N.S.S.) of input 3 | | | 0 | |
| IN 3-NES | ±32000 | Word | R/W | | 40029 |
| | Normalized End Scale (N.E.S.) of input 3 | | | 10000 | |
| IN 3-FLAGS | / | Bit | R/W | | 40031 |
| | See IN 1-FLAGS register (40019) | | | / | |
| INPUT 4 | | | | | |
| IN 4 | Between: IN 4-NSS, IN 4-NES | Word | R | | 40006 |
| | Normalized measure of input 4 | | | / | |
| IN 4-ESS | ±10000 [mV] (if voltage), ±20000 [µA] (if current) | Word | R/W | | 40032 |

| | | | | | |
|----------------|---|------|-----|------------|-------|
| | Electrical Start Scale (E.S.S.) of input 4 [mV or μ A] | | R/W | 0 [mV] | |
| IN 4-EES | ± 10000 [mV] (if voltage), ± 20000 [μ A] (if current) | Word | R/W | | 40033 |
| | Electrical End Scale (E.E.S.) of input 4 [mV or μ A] | | | 10000 [mV] | |
| IN 4-NSS | ± 32000 | Word | R/W | | 40034 |
| | Normalized Start Scale (N.S.S.) of input 4 | | | 0 | |
| IN 4-NES | ± 32000 | Word | R/W | | 40035 |
| | Normalized End Scale (N.E.S.) of input 4 | | | 10000 | |
| IN 4-FLAGS | / | Bit | R/W | | 40037 |
| | See IN 1-FLAGS register (40019) | | | / | |
| INPUT 5 | | | | | |
| IN 5 | Between: IN 5-NSS, IN 5-NES | Word | R | | 40007 |
| | Normalized measure of input 5 | | | / | |
| IN 5-ESS | ± 10000 [mV] (if voltage), ± 20000 [μ A] (if current) | Word | R/W | | 40038 |
| | Electrical Start Scale (E.S.S.) of input 5 [mV or μ A] | | | 0 [mV] | |
| IN 5-EES | ± 10000 [mV] (if voltage), ± 20000 [μ A] (if current) | Word | R/W | | 40039 |
| | Electrical End Scale (E.E.S.) of input 5 [mV or μ A] | | | 10000 [mV] | |
| IN 5-NSS | ± 32000 | Word | R/W | | 40040 |
| | Normalized Start Scale (N.S.S.) of input 5 | | | 0 | |
| IN 5-NES | ± 32000 | Word | R/W | | 40041 |
| | Normalized End Scale (N.E.S.) of input 5 | | | 10000 | |
| IN 5-FLAGS | / | Bit | R/W | | 40043 |
| | See IN 1-FLAGS register (40019) | | | / | |
| INPUT 6 | | | | | |
| IN 6 | Between: IN 6-NSS, IN 6-NES | Word | R | | 40008 |
| | Normalized measure of input 6 | | | / | |
| IN 6-ESS | ± 10000 [mV] (if voltage), ± 20000 [μ A] (if current) | Word | R/W | | 40044 |
| | Electrical Start Scale (E.S.S.) of input 6 [mV or μ A] | | | 0 [mV] | |
| IN 6-EES | ± 10000 [mV] (if voltage), ± 20000 [μ A] (if current) | Word | R/W | | 40045 |
| | Electrical End Scale (E.E.S.) of input 6 [mV or μ A] | | | 10000 [mV] | |
| IN 6-NSS | ± 32000 | Word | R/W | | 40046 |
| | Normalized Start Scale (N.S.S.) of input 6 | | | 0 | |
| IN 6-NES | ± 32000 | Word | R/W | | 40047 |
| | Normalized End Scale (N.E.S.) of input 6 | | | 10000 | |
| IN 6-FLAGS | / | Bit | R/W | | 40049 |
| | See IN 1-FLAGS register (40019) | | | / | |
| INPUT 7 | | | | | |
| IN 7 | Between: IN 7-NSS, IN 7-NES | Word | R | | 40009 |
| | Normalized measure of input 7 | | | / | |
| IN 7-ESS | ± 10000 [mV] (if voltage), ± 20000 [μ A] (if current) | Word | R/W | | 40050 |
| | Electrical Start Scale (E.S.S.) of input 7 [mV or μ A] | | | 0 [mV] | |
| IN 7-EES | ± 10000 [mV] (if voltage), ± 20000 [μ A] (if current) | Word | R/W | | 40051 |
| | Electrical End Scale (E.E.S.) of input 7 [mV or μ A] | | | 10000 [mV] | |

| | | | | | |
|----------------|---|------|-----|------------|-------|
| IN 7-NSS | ±32000 | Word | R/W | | 40052 |
| | Normalized Start Scale (N.S.S.) of input 7 | | | 0 | |
| IN 7-NES | ±32000 | Word | R/W | | 40053 |
| | Normalized End Scale (N.E.S.) of input 7 | | | 10000 | |
| IN 7-FLAGS | / | Bit | R/W | | 40055 |
| | See IN 1-FLAGS register (40019) | | | / | |
| INPUT 8 | | | | | |
| IN 8 | Between: IN 8-NSS, IN 8-NES | Word | R | | 40010 |
| | Normalized measure of input 8 | | | / | |
| IN 8-ESS | ±10000 [mV] (if voltage), ±20000 [µA] (if current) | Word | R/W | | 40056 |
| | Electrical Start Scale (E.S.S.) of input 8 [mV or µA] | | | 0 [mV] | |
| IN 8-EES | ±10000 [mV] (if voltage), ±20000 [µA] (if current) | Word | R/W | | 40057 |
| | Electrical End Scale (E.E.S.) of input 8 [mV or µA] | | | 10000 [mV] | |
| IN 8-NSS | ±32000 | Word | R/W | | 40058 |
| | Normalized Start Scale (N.S.S.) of input 8 | | | 0 | |
| IN 8-NES | ±32000 | Word | R/W | | 40059 |
| | Normalized End Scale (N.E.S.) of input 8 | | | 10000 | |
| IN 8-FLAGS | / | Bit | R/W | | 40061 |
| | See IN 1-FLAGS register (40019) | | | / | |

LEDs for signalling

In the front-side panel there are 4 LEDs and their state refers to important operating conditions of the module.

| LED | LED status | Meaning |
|-----|----------------|--|
| PWR | Constant light | The power is on |
| ERR | Blinking light | The module has at least one of the errors described in RS485 Registers table |
| RX | Constant light | Verify if the bus connection is corrected |
| | Blinking light | The module received a data packet |
| TX | Blinking light | The module sent a data packet |

Easy-SETUP

To configure the Seneca Z-PC Line modules, it is possible to use Easy-SETUP software,

Free-downloadable from the www.seneca.it; the configuration can be performed by RS232 or RS485 bus communication.