






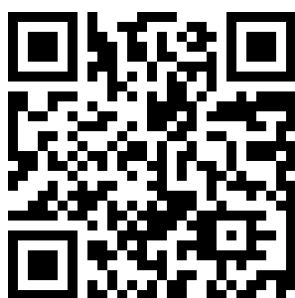
INSTALLATION MANUAL

Z-4RTD2-SI

PRELIMINARY WARNINGS

The word **WARNING** preceded by the symbol  indicates conditions or actions that put the user's safety at risk. The word **ATTENTION** preceded by the symbol  indicates conditions or actions that might damage the instrument or the connected equipment. The warranty shall become null and void in the event of improper use or tampering with the module or devices supplied by the manufacturer as necessary for its correct operation, and if the instructions contained in this manual are not followed.

	WARNING: The full content of this manual must be read before any operation. The module must only be used by qualified electricians. Specific documentation is available via QR-CODE shown on page 1.
	The module must be repaired and damaged parts replaced by the Manufacturer. The product is sensitive to electrostatic discharges. Take appropriate measures during any operation.
	Electrical and electronic waste disposal (applicable in the European Union and other countries with recycling). The symbol on the product or its packaging shows the product must be surrendered to a collection centre authorized to recycle electrical and electronic waste.



DOCUMENTATION
Z-4RTD2-SI




SENECA s.r.l.; Via Austria, 26 – 35127 – PADOVA – ITALY; Tel. +39.049.8705359 - Fax +39.049.8706287

CONTACT INFORMATION

Technical support	support@seneca.it	Product information	sales@seneca.it
-------------------	-------------------	---------------------	-----------------

This document is the property of SENECA srl. Copies and reproduction are prohibited unless authorised. The content of this document corresponds to the described products and technologies. Stated data may be modified or supplemented for technical and/or sales purposes.

MODULE LAYOUT

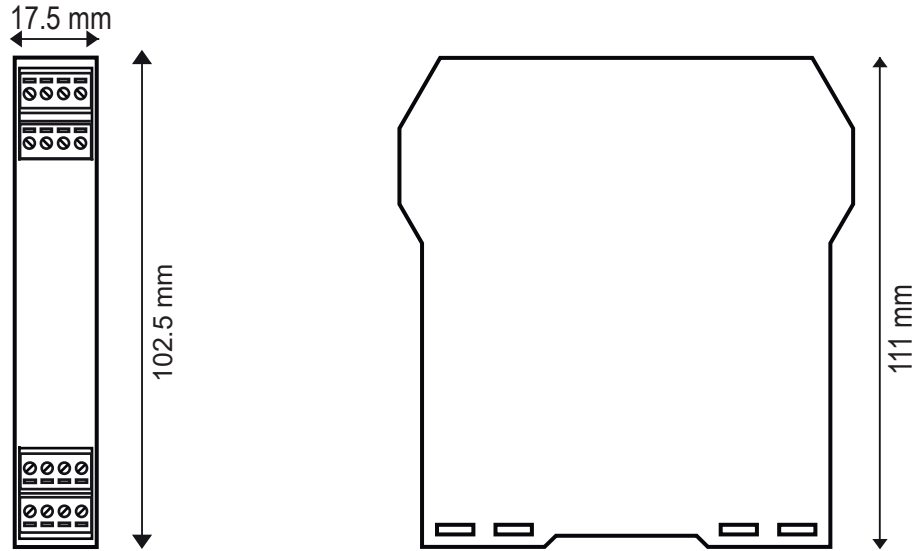

Dimensions: 17.5 x 102.5 x 111 mm




Weight: 100 g

Container: PA6, black

SIGNALS VIA LED ON FRONT PANEL

LED	STATUS	LED meaning
PWR	ON	The device is powered correctly
FAIL	ON	Instrument in error state
RX	Flashing	Data receipt on port #1 RS485
TX	Flashing	Data transmission on port #1 RS485

TECHNICAL SPECIFICATIONS

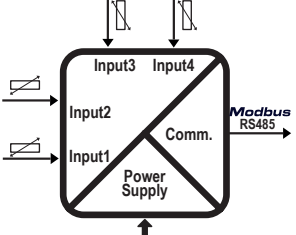CERTIFICATIONS	  https://www.seneca.it/products/z-4rtd2-si/doc/CE_declaration
POWER SUPPLY	10 ÷ 40Vdc; 19 ÷ 28Vac; 50-60Hz; Max 0.8W
ENVIRONMENTAL CONDITIONS	Operating temperature: -25°C ÷ +70°C Humidity: 30% ÷ 90% non condensing Storage temperature: -30°C ÷ +85°C Altitude: Up to 2000 m above sea level Protection rating: IP20
ASSEMBLY	35mm DIN rail IEC EN60715
CONNECTIONS	Removable 3.5 mm pitch terminal block, 1.5 mm ² max cable section
COMMUNICATION PORTS	4-way removable screw terminal block; max. section 1.5mm ² ; step: 3.5 mm IDC10 rear connector for IEC EN 60715 DIN bar, ModBUS-RTU, 1200÷115200 Baud Micro USB on the front, ModBUS protocol, 2400 Baud
INSULATION	 — 1500 V~
ADC	Resolution: 24 bit Calibration precision 0.04% of full scale Class / Prec. Base: 0.05 Temperature drift: < 50 ppm/K Linearity: 0,025% of full scale

N.B.: A delayed fuse with a maximum rating of 2.5 A must be installed in series with the power supply connection, near the module.

SETTING THE DIP-SWITCHES

The position of the DIP-switches defines the Modbus communication parameters of the module: Address and Baud Rate
The following table shows the values of the Baud Rate and the Address according to the setting of the DIP-switches:

DIP-Switch status							
SW1 POSITION		BAUD RATE	SW1 POSITION		ADDRESS	POSITION	TERMINATOR
1	2		3	4		5	
<input type="checkbox"/>	<input type="checkbox"/>	9600	<input type="checkbox"/>	<input type="checkbox"/>	#1	<input type="checkbox"/>	Disabled
<input type="checkbox"/>	<input type="checkbox"/>	19200	<input type="checkbox"/>	<input type="checkbox"/>	#2	<input type="checkbox"/>	Enabled
<input type="checkbox"/>	<input type="checkbox"/>	38400		#...		
<input type="checkbox"/>	<input type="checkbox"/>	57600	<input type="checkbox"/>	<input type="checkbox"/>	#63		
<input type="checkbox"/>		From EEPROM	<input type="checkbox"/>		From EEPROM		

Note: When DIP - switches 1 to 8 are OFF, the communication settings are taken from programming (EEPROM).

Note 2: The RS485 line must be terminated only at the ends of the communication line.

FACTORY SETTINGS							
1	2	3	4	5	6	7	8
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

LEGEND	
<input type="checkbox"/>	ON
<input type="checkbox"/>	OFF

The position of the dip-switches defines the communication parameters of the module.


The default configuration is as follows: Address 1, 38400, no parity, 1 stop bit.

	CH1	CH2	CH3	CH4
Sensor Type	PT100	PT100	PT100	PT100
Type of data returned, measured in:	°C	°C	°C	°C
Connection	2/4 WIRES	2/4 WIRES	2/4 WIRES	2/4 WIRES
Acquisition rate	100ms	100ms	100ms	100ms
LED signal of channel failure	YES	YES	YES	YES
Value loaded in case of fault	850 °C	850 °C	850 °C	850 °C

FIRMWARE UPDATE

Firmware update procedure:

- Disconnect the device from the power supply;
- Holding down the firmware update button (positioned as shown in the figure on the side), reconnect the device to the power supply;
- Now the instrument is in update mode, connect the USB cable to the PC;
- The device will be displayed as an "RP1-RP2" external unit;
- Copy the new firmware into the "RP1-RP2" unit;
- Once the firmware file has been copied, the device will automatically reboot.

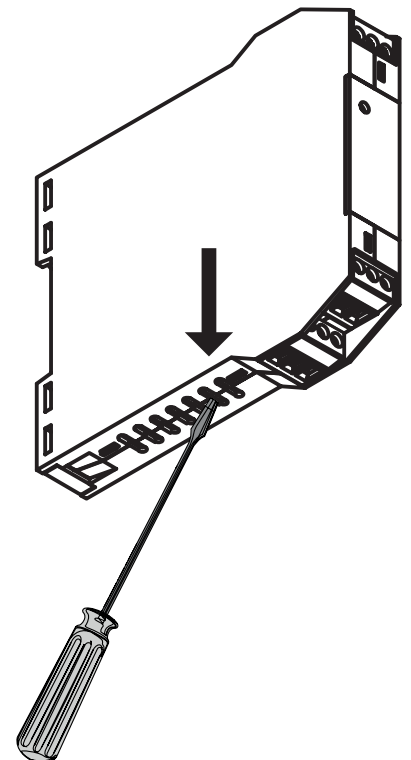

INSTALLATION REGULATIONS

The module has been designed for vertical installation on a DIN 46277 rail. For optimal operation and long life, adequate ventilation must be provided. Avoid positioning ducting or other objects that obstruct the ventilation slots. Avoid mounting modules over heat-generating equipment. Installation in the bottom part of the electrical panel is recommended.

⚠ ATTENTION

These are open-type devices and intended for installation in an end enclosure / panel offering mechanical protection and protection against spread of fire.

ELECTRICAL CONNECTIONS

⚠ CAUTION


To meet the electromagnetic immunity requirements:

- use shielded signal cables;
- connect the shield to a preferential instrumentation earth system;
- separate shielded cables from other cables used for power installations (transformers, inverters, motors, etc...).

⚠ ATTENTION

Use only copper or copper-clad aluminium or AL-CU or CU-AL conductors

Power supply and Modbus interface are available using the Seneca DIN rail bus, via the IDC10 rear connector, or the Z-PC-DINAL2-17.5 accessory.

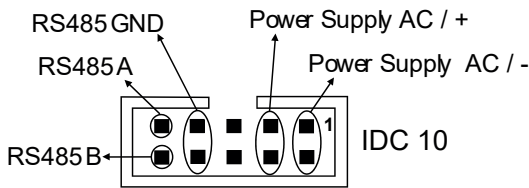


Rear Connector (IDC 10)

The illustration shows the meanings of the various IDC10 connector pins if signals are to be sent via them directly.

INPUTS:

the module accepts temperature probes with 2, 3, 4 wire connections.

For the electrical connections: screened cables are recommended.

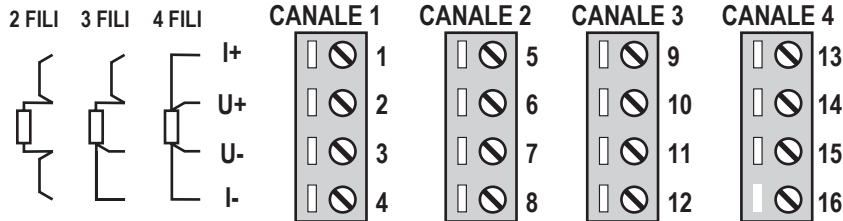

2 WIRES	This connection can be used for short distances (< 10 m) between module and probe.
	This connection introduces a measurement error equal to the resistance of the connection cables.
3 WIRES	A connection to be used for medium distances (> 10 m) between module and probe.
	The instrument performs the compensation on the average value of the resistance of the connection cables. To ensure correct compensation, the cables must have the same resistance.
4 WIRES	A connection to be used for long distances (> 10 m) between module and probe. It offers maximum precision, in view of the fact that the instrument reads the resistance of the sensor independently of the resistance of the cables.

INPUT PT100EN 60751/A2 (ITS-90)		INPUT PT500 EN 60751/A2 (ITS-90)	
MEASURING RANGE	-200 ÷ +650°C	MEASURING RANGE	-200 ÷ +750°C
INPUT PT1000 EN 60751/A2 (ITS-90)		INPUT NI100 DIN 43760	
MEASURING RANGE	-200 ÷ +210°C	MEASURING RANGE	-60 ÷ +250°C
INPUT CU50 GOST 6651-2009		INPUT CU100 GOST 6651-2009	
MEASURING RANGE	-180 ÷ +200°C	MEASURING RANGE	-180 ÷ +200°C
INPUT Ni120 DIN 43760		INPUT NI1000 DIN 43760	
MEASURING RANGE	-60 ÷ +250°C	MEASURING RANGE	-60 ÷ +250°C