USER MANUAL

SERIES R I/O WITH PROTOCOL MODBUS TCP-IP and MODBUS RTU





SENECA S.r.I.

Via Austria 26 – 35127 – Z.I. - PADOVA (PD) - ITALY Tel. +39.049.8705355 – 8705355 Fax +39 049.8706287 www.seneca.it

 ϵ

CAUTION

SENECA does not guarantee that all specifications and/or aspects of the product and firmware, included in them, will meet the requirements of the actual final application even if the product referred to in this documentation is in compliance with the technological state of the art.

The user assumes full responsibility and/or risk with regard to the configuration of the product to achieve the intended results in relation to the specific installation and/or end application.

SENECA may, with prior agreement, provide consultancy services for the successful completion of the final application, but under no circumstances can it be held responsible for its proper functioning.

The SENECA product is an advanced product, the operation of which is specified in the technical documentation supplied with the product itself and/or can be downloaded, if desired prior to purchase, from the www.seneca.it website.

SENECA has a policy of continuous development and accordingly reserves the right to make and/or introduce - without prior notice - changes and/or improvements to any product described in this documentation.

The product described in this documentation may solely and exclusively be used by personnel qualified for the specific activity and in accordance with the relevant technical documentation, with particular attention being paid to the safety instructions.

Qualified personnel means personnel who, on the basis of their training, competence and experience, are able to identify risks and avoid potential hazards that could occur during the use of this product.

SENECA products may only be used for the applications and in the manner described in the technical documentation relating to the products themselves.

To ensure proper operation and prevent the occurrence of malfunctions, the transport, storage, installation, assembly, maintenance of SENECA products must comply with the safety instructions and environmental conditions specified in this documentation.

SENECA's liability in relation to its products is governed by the general conditions of sale, which can be downloaded from www.seneca.it.

Neither SENECA nor its employees, within the limits of applicable law, will in any case be liable for any lost profits and/or sales, loss of data and/or information, higher costs incurred for goods and/or replacement services, damage to property and/or persons, interruption of activities and/or provision of services, any direct, incidental, pecuniary and non-pecuniary, consequential damages in any way caused and/or caused, due to negligence, carelessness, incompetence and/or other liabilities arising from the installation, use and/or inability to use the product.

CONTACT US	
Technical support	supporto@seneca.it
Product information	commerciale@seneca.it

This document is the property of SENECA srl. Copies and reproduction are prohibited unless authorised.

Document revisions





DATE	REVISION	NOTES	AUTHOF	
10/02/2023	0	First revision	MM	
		R-32DIDO-1, R-32DIDO-2, R-16DI-8DO, R-8AI-8DIDO		
02/03/2023	1 1	Added Chapter "Protection of digital outputs"	MM	
15/03/2023	2	Fix Seneca Discovery Device, Easy Setup 2, Seneca Studio Seneca Studio Fix cross references	MM	
15/03/2023	3	Tables translated in English language	MM	
08/05/2023	5	Added info about RW register Fix registers info in English language	MM	
29/05/2023	6	Added R-SG3 device, modified chapter "Factory configuration reset"	MM	
31/05/2023	7	Added DIP SWITCH chapter	MM	
19/07/2023	8	Fixed ModBUS registers 40044, 40079 and 40080 of R-SG3	AZ	
		Changed old R-8AI-8DIDO with new R-8AI-8DIDO version	MM	
13/11/2023	9	Deleted -1 R-series HW code		
		Minor fix		
27/11/2023	10	Fix R-8AI-8DIDO Modbus table		
04/12/2023	11	Updated registers 40201 to 40269 of R-16DI-8DO		
14/02/2024	12	Added support for R-8AI-8DIDO-2 release fw >= 1012		
09/04/2024	13	Added R-32DIDO configuration registers	MM	
27/05/2024	14	Fix Counters Filter R-16DI-8DO		
08/07/2024	15	Added R-4AO-8DIDO device		
10/12/2024	16	Added R-4AO-8DIDO fault value info	MM	
16/01/2025	17	Fixed R-4AO-8DIDO Modbus registers	MM	
00/04/000=	10	Fixed R-4AO-8DIDO MSW/LSW Modbus registers	MM	
22/01/2025	18	Added R-4AO-8DIDO info about dip switch and IN/OUT speed		
03/03/3035	10	Added R-4RTD-8DIDO device	MM	
03/03/2025	19	Various fix		
10/10/2025	20	Aggiunto FLEX	AC	
17/10/2025	21	Added R-2AI-6DIDO device	MM	





TABLE OF CONTENTS

1. INT	RODUCTION	9
2. FLI	EX TECHNOLOGY FOR PROTOCOL CHANGE	9
3. R S	SERIES DEVICES	10
3.1. R	-32DIDO	
3.1.1.	PROTECTION OF DIGITAL OUTPUTS	
3.1.2.	DIGITAL COUNTERS ACQUISITION TIME	
	-16DI-8DO	
	-8AI-8DIDO	
3.3.1.	ANALOG INPUT UPDATE TIME	
3.3.2.	UPDATE TIME OF DIGITAL INPUTS/OUTPUTSPROTECTION OF DIGITAL OUTPUTS	
3.3.3. 3.4. R	-SG3	
3.4.1.	LOAD CELL CONNECTION	
3.4.2.	4- OR 6-WIRE LOAD CELL CONNECTION	
3.4.3.	CHECKING THE LOAD CELL OPERATION	
3.4.3.1.		
3.4.4.	CONNECTION OF MORE LOAD CELLS IN PARALLEL	
3.4.5.	TRIMMING 4-WIRE LOAD CELLS	
	-4AO-8DIDO	
3.5.1.	ANALOG OUTPUTS RESPONSE TIME	15
3.5.2.	UPDATE TIME OF DIGITAL INPUTS/OUTPUTS	16
3.5.3.	DIGITAL COUNTERS ACQUISITION TIME	16
3.5.4.	PROTECTION OF DIGITAL OUTPUTS	
	-4RTD-8DIDO	
3.6.1.	ANALOG INPUT UPDATE TIME	
3.6.2.	UPDATE TIME OF DIGITAL INPUTS/OUTPUTS	
3.6.3.	DIGITAL COUNTERS ACQUISITION TIME	
3.6.4.	PROTECTION OF DIGITAL OUTPUTS	
	-2AI-6DIDO	
3.7.1.	ANALOG INPUT UPDATE TIME	
3.7.2.	UPDATE TIME OF DIGITAL INPUTS/OUTPUTS	
3.7.3.	DIGITAL COUNTERS ACQUISITION TIMEPROTECTION OF DIGITAL OUTPUTS	
3.7.4.	PROTECTION OF DIGITAL OUTPUTS	10
4. DIF	SWITCH	19
4.1. M	EANING OF THE DIP SWITCHES SW1 FOR THE R-8AI-8DIDO MODEL	19
4.2. M	EANING OF SW1 DIP-SWITCHES FOR THE R-32DIDO MODEL	20
4.2.1.	DIP SWITCH SW1 FOR FIRMWARE REVISION <= 1014	
4.2.2.	DIP SWITCH SW1 FOR FIRMWARE REVISION >= 1015	
	EANING OF THE SW1 DIP SWITCHES FOR THE R-SG3 MODEL	
	EANING OF THE DIP SWITCHES SW1 FOR THE R-8AI-8DIDO MODEL	
	EANING OF THE DIP SWITCHES SW1 FOR THE R-4AO-8DIDO MODEL	
4.6. M	EANING OF THE DIP SWITCHES SW1 FOR THE R-4RTD-8DIDO MODEL	22



4.7.	MEANING OF THE DIP SWITCHES SW1 FOR THE R-2AI-6DIDO MODEL	22
	I/O COPY USING THE PEER TO PEER FUNCTION WITHOUT A M	
6.	MODBUS PASSTHROUGH	24
7. 7.1.	PROCEDURE FOR RESTORING DEVICES TO THE FACTORY CONFIGURATION	
8.	CONNECTION OF THE DEVICE TO A NETWORK	25
9.	WEB SERVER	26
9.1.	ACCESS TO THE WEB SERVER	26
	CONFIGURATION OF THE R-32DIDO DEVICE VIA WEB SERVER	
10.1		
10.2		
10.3		
10.4	P2P CONFIGURATION	30
11.	CONFIGURATION OF THE R-16DI-8DO DEVICE VIA WEB SERVER	
11.1.		
11.2.	. SETUP 2 SECTION	34
12.	CONFIGURATION OF THE R-8AI-8DIDO DEVICE VIA WEB SERVER	36
12.1.	. SETUP SECTION	36
12.2	. SETUP AIN 1. 8 SECTION	38
12.3	DIGITAL I/O SETUP SECTION	40
12.4.	EVENT SETUP SECTION	41
	CONFIGURATION OF THE R- SG3 DEVICE VIA WEB SERVER	
13.1.		
13.2		
13.3		
13.4		_
13.5		_
13.6		_
	3.6.1. CELL CALIBRATION WITH FACTORY PARAMETERS	
	3.6.1.1. MANUAL ENTRY OF THE TARE VIA WEB SERVER	
	3.6.1.2. ACQUISITION OF THE TARE FROM THE FIELD VIA WEB SERVER	
13	3.6.2. CELL CALIBRATION WITH A STANDARD WEIGHT	51
	CONFIGURATION OF THE R-4AO-8DIDO DEVICE VIA WEB SERVER	
14.1.	. SETUP SECTION	52



14.2.	ANALOG OUTPUT SETUP SECTION	54
14.3.	DIGITAL I/O SETUP SECTION	55
14.4.	SETUP COUNTERS SECTION	56
14.5.	P2P CONFIGURATION	56
14.6.	ANALOG TEST SECTION	56
14.7.	DIGITAL TEST SECTION	56
14.8.	COUNTERS TEST SECTION	56
15.	CONFIGURATION OF THE R-4RTD-8DIDO DEVICE VIA WEB SERVER	56
15.1.	SETUP SECTION	56
15.2.	ANALOG INPUT SETUP SECTION	58
15.3.	ANALOG TEST SECTION	60
15.4.	DIGITAL I/O SETUP SECTION	60
15.5.	SETUP COUNTERS SECTION	61
15.6.	DIGITAL IO TEST SECTION	61
15.7.	COUNTERS TEST SECTION	61
15.8.	P2P CONFIGURATION	61
16.	CONFIGURATION OF THE R-2AI-6DIDO DEVICE VIA WEB SERVER	62
16.1.	SETUP SECTION	62
16.2.	SETUP AIN 1. 8 SECTION	64
16.3.	DIGITAL I/O SETUP SECTION	65
16.4.	SETUP COUNTERS SECTION	65
16.5.	DIGITAL IO TEST SECTION	66
16.6.	COUNTERS TEST SECTION	66
16.7.	P2P CONFIGURATION	66
17.	P2P CLIENT	67
18.	P2P SERVER	69
18.1.	P2P CONFIGURATION EXAMPLE	70
18.2.	P2P EXECUTION TIME	71
19.	UPDATING THE FIRMWARE AND SAVING/OPENING A CONFIGURATION	71
20	MODBUS RTU/ MODBUS TCP-IP REGISTERS	72
20.1.		
20.1. 20.2.		
20.3.		
20.3. 20.4.	,	
20.5.		
20.5. 20.6.		
20.0. 20.7.		
20.7. 20.8.		77
20.9.		
21.	MODBUS REGISTER TABLE FOR THE R-32DIDO PRODUCT	78





21.1.		
21.2.		
21.3.	· ·	
21.4.	R-32DIDO: TABLE OF MODBUS REGISTERS 1x INPUT STATUS (FUNCTION CODE 2)	106
22.	MODBUS REGISTER TABLE FOR THE R-16DI-8DO PRODUCT	107
22.1.	R-16DI-8DO: MODBUS 4X HOLDING REGISTERS TABLE (FUNCTION CODE 3)	107
22.2.	,	
22.3.	,	
22.4.	· · · · · · · · · · · · · · · · · · ·	
23	MODBUS REGISTER TABLE FOR THE R-8AI-8DIDO DEVICE	144
23.1.		
23.1. 23.2.	,	
23.3.	,	
0.4	MODDING DEGICTED TABLE FOR THE D. COS DEVICE	454
	MODBUS REGISTER TABLE FOR THE R-SG3 DEVICE	
24.1.	R-SG3: MODBUS 4X HOLDING REGISTERS TABLE (FUNCTION CODE 3)	154
25.	MODBUS REGISTER TABLE FOR THE R-4AO-8DIDO PRODUCT	171
25.1.	R-4AO-8DIDO: MODBUS 4X HOLDING REGISTERS TABLE (FUNCTION CODE 3)	171
25.2.	R-4AO-8DIDO: TABLE OF MODBUS REGISTERS 0x COIL STATUS (FUNCTION CODE 1)	175
25.3.	R-4AO-8DIDO: TABLE OF MODBUS REGISTERS 1x INPUT STATUS (FUNCTION CODE 2)	175
26.	MODBUS REGISTER TABLE FOR THE R-4RTD-8DIDO PRODUCT	176
26.1.		
26.2.	· · · · · · · · · · · · · · · · · · ·	
26.3.	· · · · · · · · · · · · · · · · · · ·	
27	R-SG3: LOAD CELL CALIBRATION THROUGH MODBUS REGISTERS	180
27.1.		
27.2.		121
27.3.		
20	MODBUS REGISTER TABLE FOR THE R-2AI-6DIDO PRODUCT	101
28.1. 28.2.	,	
28.2. 28.3.	· · · · · · · · · · · · · · · · · · ·	
29.	CABLE HARNESS FOR MODELS WITH DOUBLE ETHERNET PORT	184
29.1.	CHAIN ETHERNET CONNECTION (DAISY CHAIN)	184
29.2.		







30. SEARCH	AND	MODIFICATION	OF	THE	DEVICE	ΙP	WITH	THE	SENECA
DISCOVERY D	DEVICE	E TOOL							187



1. INTRODUCTION



This user manual extends the information from the installation manual to the configuration of the device. Use the installation manual for more information.



In any case, SENECA s.r.l. or its suppliers will not be responsible for the loss of data/revenue or consequential or incidental damages due to negligence or bad/improper management of the device, even if SENECA is well aware of these possible damages.

SENECA, its subsidiaries, affiliates, group companies, suppliers and distributors do not guarantee that the functions fully meet the customer's expectations or that the device, firmware and software should have no errors or operate continuously.

2. FLEX TECHNOLOGY FOR PROTOCOL CHANGE



Flex allows you to change the combination of industrial communication protocols supported by the devices at will from a list of available ones, the development is continuously updated, for a complete list refer to the page: https://www.seneca.it/flex/

Some examples of supported protocols are:





The device then becomes "universal" and compatible with Siemens or Rockwell or Schneider systems etc... without the need to purchase different hardware.

3. R SERIES DEVICES

The R Series I/O modules are devices designed for flexible cabling needs, reduced installation spaces, high I/O density applications with ModBUS communication (serial and Ethernet). Configuration can be done via dedicated software and/or DIP switches.

The devices equipped with two Ethernet ports can be connected in daisy chain mode (without the use of an external switch) and support fault-bypass mode to ensure the Ethernet connection even in the event of failure of a module in the chain.

For more information on these protocols, see the website: http://www.modbus.org/specs.php.

3.1. **R-32DIDO**

The devices allow the use of 32 digital channels that can be individually configured for input or output. When a digital channel is configured as an input, a 32-bit counter is also associated with a value saved in non-volatile memory.

CODE	ETHERNET PORT
R-32DIDO-2	2 PORTS 10/100 Mbit
	(Switch mode)

3.1.1. PROTECTION OF DIGITAL OUTPUTS

The outputs are protected against overload and against overtemperature, they open cyclically until the fault is repaired or the output opens.

The limit current is between 0.6 and 1.2 A.

3.1.2. DIGITAL COUNTERS ACQUISITION TIME

The faster digital counters acquisition time is 1ms

3.2. **R-16DI-8DO**

The devices allow the use of 16 digital input channels and 8 digital relay output channels.

CODE	ETHERNET PORT

R-16DI8DO	2 PORTS 10/100 Mbit
	(Switch mode)

3.3. **R-8AI-8DIDO**

The devices allow the use of 8 analog input channels and 8 digital channels that can be individually configured for input or output.

CODE	ETHERNET PORT		
R-8AI-8DIDO-2	2 PORTS 10/100 Mbit		
	(Switch mode)		

3.3.1. ANALOG INPUT UPDATE TIME

Sampling time can be configured from 25ms to 400ms per each channel, in particular:

CHANNEL SAMPLING TIME
25ms
50ms
100ms
200ms
400ms

To calculate the update time of a channel, consider the following example:

By activating 8 channels and setting a sampling time of 25 ms, you get an input update every: 25*8 = 200 ms.

Note (only if thermocouple channels are enabled):

In the case of a thermocouple input, the Burnout check is carried out every 10 seconds.

The duration of this check takes 25ms on each enabled thermocouple channel.

For example, with 3 active thermocouples, every 10 seconds the following are used:

25ms x 3 channels = 75 ms for Burnout evaluation.

3.3.2. UPDATE TIME OF DIGITAL INPUTS/OUTPUTS

The update time of the 8 digital inputs/outputs is 25ms.

3.3.3. PROTECTION OF DIGITAL OUTPUTS

The outputs are protected against overload and against overtemperature, they open cyclically until the fault is repaired or the output opens.

The limit current is between 0.6 and 1.2 A.



3.4. **R-SG3**

R- SG3 is a load cell converter (strain gauge). The measurement, carried out with the 4 or 6-wire technique, is available via the server TCP-IP Modbus or via RTU slave Modbus protocols

The device is equipped with a new noise filter specifically developed to obtain a rapid response time. The device is also fully configurable via the webserver.

CODE	ETHERNET PORT
R-SG3	1 PORT 10/100 Mbit

3.4.1. LOAD CELL CONNECTION

It is possible to connect the converter to the load cell in 4- or 6-wire mode. 6-wire measurement is preferable for measurement accuracy.

The load cell power supply is provided directly by the device.

3.4.2. 4- OR 6-WIRE LOAD CELL CONNECTION

A load cell can have a four-wire or six-wire cable. In addition to having the +/- excitation and +/- signal lines a six-wire cable also has the +/- sense lines. It is a common misconception to think that the only difference between 4- or 6-wire load cells is the possibility of the latter to measure the actual voltage at the load cell. A load cell is compensated to work within specifications in a certain temperature range (usually -10 - +40°C). Since the cable resistance depends on the temperature, the response of the cable to temperature changes must be eliminated. The 4-wire cable is part of the load cell temperature compensation system. The 4-wire load cell is calibrated and compensated with a certain amount of cable connected. For this reason, never cut the cable of a 4-wire load cell. The cable of a 6-wire cell, on the other hand, is not part of the load cell temperature compensation system. The sense lines are connected to the R-SG3 sense terminals, to measure and adjust the actual voltage of the load cell. The advantage of using this "active" system is the possibility of cutting (or extending) the 6-wire load cell cable to any length. It must be considered that a 6-wire load cell will not reach the performance declared in the specifications if the sense lines are not used.

3.4.3. CHECKING THE LOAD CELL OPERATION

Before starting the configuration of the device it is necessary to verify the correctness of the wiring and the integrity of the load cell.

3.4.3.1. CHECKING CABLES WITH A DIGITAL MULTIMETER

First you need to check with the load cell manual that there are about 5V DC between the +Excitation and – Excitation cables. If the cell has 6 wires check that the same voltage is also measured between +Sense and – Sense.

Now leave the cell at rest (without the tare) and check that the voltage between the +Signal and –Signal cables is around 0 V.

Now unbalance the cell by applying a compression force, checking that the voltage between the +Signal and – Signal cables increases until it reaches the full scale (if possible) where the measurement will be approximately:

5* (cell sensitivity) mV.

For example, if the declared cell sensitivity is 2 mV/V, 5 * 2 = 10 mV must be obtained.

In the case of bipolar measurement only (compression/traction) it is necessary to completely unbalance the cell even in traction, in this case the same value must be measured between the +Signal and -Signal cables but with the negative sign:

-5* (cell sensitivity) mV.

3.4.4. CONNECTION OF MORE LOAD CELLS IN PARALLEL


It is possible to connect up to a maximum of 8 load cells (and in any case without ever falling below the minimum 87 Ohms).

It is therefore possible to connect:


NUMBER OF LOAD CELLS IN PARALLEL		
IMPEDANCE OF THE STATED LOAD CELL [Ohm]	MAXIMUM NUMBER OF CONNECTABLE CELLS IN PARALLEL	
350	4	
1000	8	

For the connection of 4 load cells Seneca recommends using the SG-EQ4 product.

To connect 2 or more 4-wire cells in parallel with the SG-EQ4 junction box, use the following diagram:

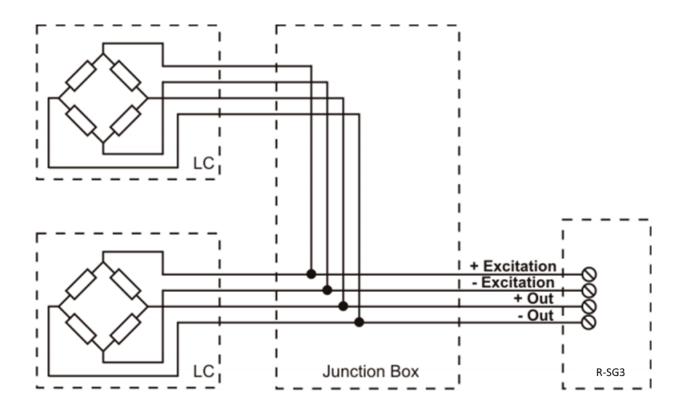

To connect 2 or more 6-wire cells in parallel with the SG-EQ4 junction box use the following diagram:

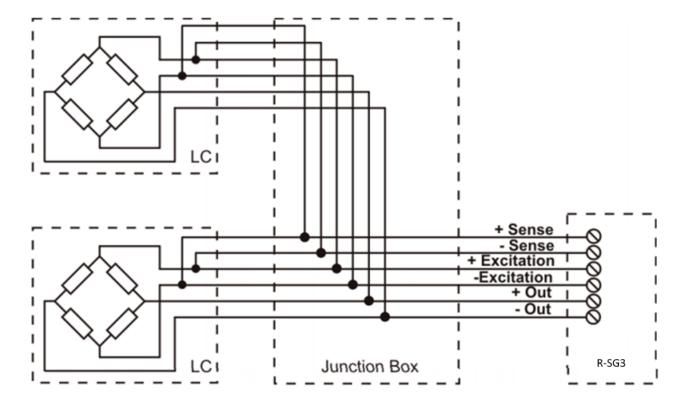


For more details, refer to the SG-EQ4 Junction Box accessory manual.



3.4.5. TRIMMING 4-WIRE LOAD CELLS

The figure below shows a diagram of three trimmed load cells.

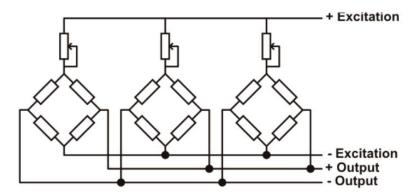

A variable resistor, independent of the temperature, or a typically $20~\Omega$ potentiometer is inserted in the +Excitation cable of each load cell. There are two ways to trim the load cells. The first method is to adjust the potentiometers by trial, shifting the calibration weights from one corner to another. All the potentiometers must be adjusted so as to set the maximum sensitivity for each cell, turning them all completely clockwise. Then, once the angle with the lowest output is located, act on the trimmers of the other cells until obtaining the same minimum output value. This method can be very long, especially for large scales where the use of test weights on the corners is not very practical. In these cases the second, more suitable method is to "pre-trim" the potentiometers using a precision voltmeter (at least 4 1/2 digits). You can use the following procedure:

- 1) Determine the exact mV/V ratio of each load cell, shown in the calibration certificate of the cell itself.
- 2) Determine the exact excitation voltage provided by the indicator/meter (for example Z-SG), measuring this voltage with the voltmeter (for example 10.05 V).
- 3) Multiply the lowest mV/V value found (point 1) by the excitation voltage (point 2).
- 4) Divide the trimming factor calculated in point 3 by the mV/V value of the other load cells.
- 5) Measure and adjust the excitation voltage of the other three load cells using the respective potentiometer. Check the results and make a final adjustment by moving a test load from corner to corner.

3.5. **R-4AO-8DIDO**

The devices allow the use of 4 analog output analog channels (that can be individually configured in Voltage or Current) and 8 digital channels that can be individually configured for input or output.

CODE	ETHERNET PORT
R-4AO-8DIDO	2 PORTS 10/100 Mbit
	(Switch mode)

3.5.1. ANALOG OUTPUTS RESPONSE TIME



The analog output response time to go from 10% to 90% is 5ms.

3.5.2. UPDATE TIME OF DIGITAL INPUTS/OUTPUTS

The update time of the 8 digital inputs/outputs is 1ms.

3.5.3. DIGITAL COUNTERS ACQUISITION TIME

The faster digital counters acquisition time is 1ms

3.5.4. PROTECTION OF DIGITAL OUTPUTS

The outputs are protected against overload and against overtemperature, they open cyclically until the fault is repaired or the output opens.

The limit current is between 0.6 and 1.2 A.

3.6. **R-4RTD-8DIDO**

The devices allow the use of 4 thermoresistance measurement channels and 8 digital channels that can be individually configured for input or output.

CODE	ETHERNET PORT
R-4RTD-8DIDO	2 PORTS 10/100 Mbit
	(Switch mode)

3.6.1. ANALOG INPUT UPDATE TIME

Sampling time is configurable from 25ms to 400ms, in particular:

CHANNEL UPDATE TIME
25ms
50ms
100ms
200ms
400ms

Since each channel has an independent analog/digital converter, this set time coincides with the refresh time of each channel.

Therefore, by activating all 4 channels and setting a sampling time of 25 ms, you get an input update every 25 ms.



3.6.2. UPDATE TIME OF DIGITAL INPUTS/OUTPUTS

The update time of the 8 digital inputs/outputs is 25ms.

3.6.3. DIGITAL COUNTERS ACQUISITION TIME

The faster digital counters acquisition time is 25ms

3.6.4. PROTECTION OF DIGITAL OUTPUTS

The outputs are protected against overload and against overtemperature, they open cyclically until the fault is repaired or the output opens.

The limit current is between 0.6 and 1.2 A.

3.7. **R-2AI-6DIDO**

The devices allow the use of 2 analog input channels and 6 digital channels that can be individually configured for input or output.

CODE	ETHERNET PORT
R-2AI-6DIDO	1 PORTS 10/100 Mbit

3.7.1. ANALOG INPUT UPDATE TIME

Sampling time can be configured from 25ms to 400ms per each channel, in particular:

CHANNEL SAMPLING TIME
25ms
50ms
100ms
200ms
400ms

To calculate the update time of a channel, consider the following example:

By activating 2 channels and setting a sampling time of 25 ms, you get an input update every: 25*2 = 50 ms.

3.7.2. UPDATE TIME OF DIGITAL INPUTS/OUTPUTS

The update time of the 6 digital inputs/outputs is 10ms.



3.7.3. DIGITAL COUNTERS ACQUISITION TIME

The faster digital counters acquisition time is 10ms

3.7.4. PROTECTION OF DIGITAL OUTPUTS

The outputs are protected against overload and against overtemperature, they open cyclically until the fault is repaired or the output opens.

The limit current is between 0.6 and 1.2 A.



4. DIP SWITCH



THE DIP SWITCH SETTINGS ARE READ ONLY AT THE START. AT EACH CHANGE, IT IS NECESSARY TO RESTART.



DEPENDING ON THE MODEL IT MAY BE NECESSARY TO REMOVE THE REAR COVER OF THE DEVICE TO ACCESS THE DIP SWITCHES

4.1. MEANING OF THE DIP SWITCHES SW1 FOR THE R-8AI-8DIDO MODEL

Below is the meaning of the SW1 dip switches:

DIP1	DIP2	MEANING
OFF	OFF	Normal operation: The device loads the configuration from the flash.
ON	ON	Resets the device to its factory configuration
OFF	ON	Disables access to the Web server
ON	OFF	Reserved





ONCE COMMISSIONING HAS BEEN COMPLETED, IN ORDER TO INCREASE THE SECURITY OF THE DEVICE, DISABLE THE WEBSERVER THROUGH THE DIP SWITCHES

4.2. MEANING OF SW1 DIP-SWITCHES FOR THE R-32DIDO MODEL

Below is the meaning of the SW1 dip switches for the various firmware revisions:

4.2.1. DIP SWITCH SW1 FOR FIRMWARE REVISION <= 1014

DIP1	DIP2	MEANING
OFF	OFF	Normal operation: The device loads the configuration from the flash.
ON	ON	Resets the device to its factory configuration
OFF	ON	Only forces the device IP address to the standard value of SENECA Ethernet
		products:
		192.168.90.101
ON	OFF	Reserved

4.2.2. DIP SWITCH SW1 FOR FIRMWARE REVISION >= 1015

DIP1	DIP2	MEANING
OFF	OFF	Normal operation: The device loads the configuration from the flash.
ON	ON	Resets the device to its factory configuration
OFF	ON	Disables access to the Web server
ON	OFF	Reserved



ONCE COMMISSIONING HAS BEEN COMPLETED, IN ORDER TO INCREASE THE SECURITY OF THE DEVICE, DISABLE THE WEBSERVER THROUGH THE DIP SWITCHES



4.3. MEANING OF THE SW1 DIP SWITCHES FOR THE R-SG3 MODEL

Below is the meaning of the SW1 dip switches:

DIP1	DIP2	MEANING
OFF	OFF	Normal operation: The device loads the configuration from the flash.
ON	ON	Resets the device to its factory configuration
OFF	ON	Disables access to the Web server
ON	OFF	Reserved



ONCE COMMISSIONING HAS BEEN COMPLETED, IN ORDER TO INCREASE THE SECURITY OF THE DEVICE, DISABLE THE WEBSERVER THROUGH THE DIP SWITCHES

4.4. MEANING OF THE DIP SWITCHES SW1 FOR THE R-8AI-8DIDO MODEL

Below is the meaning of the SW1 dip switches:

DIP1	DIP2	MEANING
OFF	OFF	Normal operation: The device loads the configuration from the flash.
ON	ON	Resets the device to its factory configuration
OFF	ON	Disables access to the Web server
ON	OFF	Reserved



ONCE COMMISSIONING HAS BEEN COMPLETED, IN ORDER TO INCREASE THE SECURITY OF THE DEVICE, DISABLE THE WEBSERVER THROUGH THE DIP SWITCHES



4.5. MEANING OF THE DIP SWITCHES SW1 FOR THE R-4AO-8DIDO MODEL

Below is the meaning of the SW1 dip switches:

DIP1	DIP2	MEANING
OFF	OFF	Normal operation: The device loads the configuration from the flash.
ON	ON	Resets the device to its factory configuration
OFF	ON	Disables access to the Web server
ON	OFF	Reserved



ONCE COMMISSIONING HAS BEEN COMPLETED, IN ORDER TO INCREASE THE SECURITY OF THE DEVICE, DISABLE THE WEBSERVER THROUGH THE DIP SWITCHES

4.6. MEANING OF THE DIP SWITCHES SW1 FOR THE R-4RTD-8DIDO MODEL

Below is the meaning of the SW1 dip switches:

DIP1	DIP2	MEANING
OFF	OFF	Normal operation: The device loads the configuration from the flash.
ON	ON	Resets the device to its factory configuration
OFF	ON	Disables access to the Web server
ON	OFF	Reserved



ONCE COMMISSIONING HAS BEEN COMPLETED, IN ORDER TO INCREASE THE SECURITY OF THE DEVICE, DISABLE THE WEBSERVER THROUGH THE DIP SWITCHES

4.7. MEANING OF THE DIP SWITCHES SW1 FOR THE R-2AI-6DIDO MODEL

Below is the meaning of the SW1 dip switches:

DIP1	DIP2	MEANING
OFF	OFF	Normal operation: The device loads the configuration from the flash.



ON	ON	Resets the device to its factory configuration
OFF	ON	Disables access to the Web server
ON	OFF	Reserved



ONCE COMMISSIONING HAS BEEN COMPLETED, IN ORDER TO INCREASE THE SECURITY OF THE DEVICE, DISABLE THE WEBSERVER THROUGH THE DIP SWITCHES

5. I/O COPY USING THE PEER TO PEER FUNCTION WITHOUT A MASTER CONTROLLER


The "R" series devices can be used to copy and update in real time an input channel on a remote output channel without the aid of a master controller.

For example, a digital input can be copied to a remote digital output device:



Note that no controller is required because the communication is managed directly by the R series devices. It is possible to make a more sophisticated connection, for example it is possible to copy the inputs to different R-series remote devices (from Device 1 Input 1 to Device 2 Output1, Device 1 Input 2 to Device 3 Output 1 etc ...)

It is also possible to copy an input to an output of multiple remote devices:

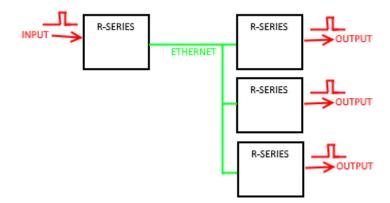


Each R-series device can send and receive a maximum of 32 inputs.



6. MODBUS PASSTHROUGH

Thanks to the Modbus Passthrough function it is possible to extend the amount of I/O available in the device via the RS485 port and the Modbus RTU slave protocol, for example by using the Seneca Z-PC series products. In this mode the RS485 port stops working as Modbus RTU slave and the device becomes a gateway from Modbus TCP-IP (ethernet) to Modbus RTU (serial):

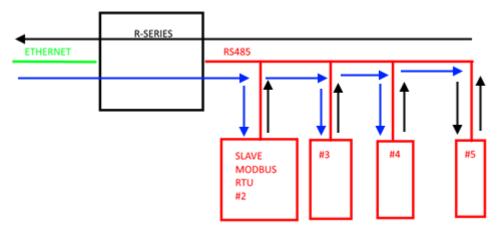

Each Modbus TCP-IP request with station address other than that of the R series device is converted into a serial packet on the RS485 and, in the case of a reply, it is turned over to TCP-IP.

Therefore, it is no longer necessary to purchase gateways to extend the I/O number or to connect already available Modbus RTU I/O.

7. RESETTING THE DEVICE TO FACTORY CONFIGURATION

7.1. PROCEDURE FOR RESTORING DEVICES TO THE FACTORY CONFIGURATION

It is possible to reset the device to the factory configuration using the dip-switches (see chapter 4).

8. CONNECTION OF THE DEVICE TO A NETWORK

The factory configuration of the IP address is:

Static address: 192.168.90.101

Therefore, multiple devices must not be inserted on the same network with the same static IP.

If you want to connect multiple devices on the same network, you need to change the IP address configuration using Seneca Discovery Device software.



DO NOT CONNECT 2 OR MORE FACTORY-CONFIGURED DEVICES ON THE SAME NETWORK, OR THE
ETHERNET INTERFACE WILL NOT WORK
(CONFLICT OF IP ADDRESSES 192.168.90.101)

If the addressing mode with DHCP is activated and an IP address is not received within 1 minute, the device will set an IP address with a fixed error:

169.254.x.y

Where x.y are the last two values of the MAC ADDRESS.

This way it is possible to install more I/O of the R series and then configure the IP with the Seneca Discovery Device software even on networks without a DHCP server.



9. WEB SERVER

9.1. ACCESS TO THE WEB SERVER

Access to the web server takes place using a web browser and entering the IP address of the device. To know the IP address of the device you can use the Seneca Discovery Device software.


On first access the user name and password will be requested.

The default values are:

User Name: admin Password: admin



AFTER THE FIRST ACCESS CHANGE USER NAME AND PASSWORD IN ORDER TO PREVENT ACCESS TO THE DEVICE TO UNAUTHORIZED PEOPLE.

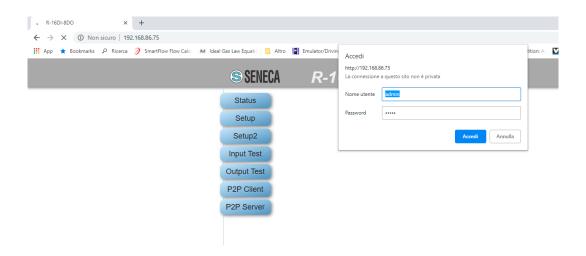

ATTENTION!

IF THE PARAMETERS TO ACCESS THE WEB SERVER HAVE BEEN LOST, IT IS NECESSARY TO RESET THE FACTORY-SET CONFIGURATION



BEFORE ACCESSING THE WEBSERVER, CHECK THE STATE OF THE DIP-SWITCHES (SEE CHAPTER4)



10. CONFIGURATION OF THE R-32DIDO DEVICE VIA WEB SERVER

10.1. SETUP SECTION

DHCP (ETH) (default: Disabled)

Sets the DHCP client to get an IP address automatically.

IP ADDRESS STATIC (ETH) (default: 192.168.90.101)

Sets the device static address. Careful not to enter devices with the same IP address into the same network.

IP MASK STATIC (ETH) (default: 255.255.255.0)

Sets the mask for the IP network.

GATEWAY ADDRESS STATIC (ETH) (default: 192.168.90.1)

Sets the gateway address.

PROTECT CONFIGURATION (default: Disabled)

Allows you to enable or disable password protection for reading and writing the configuration (including the IP address) using the Seneca Discovery Device software. The password is the same one that allows accessing the web server.



ATTENTION!

IF THE CONFIGURATION PROTECTION IS ENABLED IT WILL BE IMPOSSIBLE TO READ/WRITE THE CONFIGURATION OF THE DEVICE WITHOUT KNOWING THE PASSWORD.

IF THE PASSWORD IS LOST, IT WILL BE POSSIBLE TO RETURN THE DEVICE TO THE FACTORY-SET CONFIGURATION USING THE DIP SWITCHES

MODBUS SERVER PORT (ETH) (default: 502)

Sets the communication port for the Modbus TCP-IP server.

MODBUS SERVER STATION ADDRESS (ETH) (default: 1)

Active only if Modbus Passthrough is also active, it sets the station address of the modbus TCP-IP server.



ATTENTION!

THE MODBUS SERVER WILL ANSWER ANY STATION ADDRESS ONLY IF THE MODBUS PASSTHROUGH MODE IS DISABLED.

MODBUS PASSTHROUGH (ETH) (default: disabled)

Sets the conversion mode from Modbus TCP-IP to Modbus RTU serial (see chapter 6).



MODBUS TCP-IP CONNECTION TIMEOUT [sec] (ETH) (default: 60)

Sets the TCP-IP connection timeout for the Modbus TCP-IP server and Passthrough modes.

P2P SERVER PORT (default: 50026)

Sets the communication port for the P2P server.

WEB SERVER USERNAME (default: admin)

Sets the username to access the webserver.

CONFIGURATION/WEB SERVER PASSWORD (default: admin)

Sets the password to access the webserver and to read/write the configuration (if enabled).

WEB SERVER PORT (default: 80)

Sets the communication port for the web server.

BAUDRATE MODBUS RTU (SER) (default: 38400 baud)

Sets the baud rate for the RS485 communication port.

DATA MODBUS RTU (SER) (default: 8 bit)

Sets the number of bits for the RS485 communication port.

PARITY MODBUS RTU (SER) (default: None)

Sets the parity for the RS485 communication port.

STOP BIT MODBUS RTU (SER) (default: 1 bit)

Sets the number of stop bits for the RS485 communication port.

MODBUS PASSTHROUGH SERIAL TIMEOUT (default: 100ms)

Active only if passthrough mode is activated, sets the maximum waiting time before sending a new packet from TCP-IP to the serial port. It must be set according to the longest response time of all the devices present on the RS485 serial port.



10.2. DIGITAL I/O SETUP SECTION

This section allows the configuration of the digital I/Os present in the device.

DIGITAL I/O MODE (default Input)

Selects whether the selected input will work as an input or output.

DIGITAL INPUT NORMALLY HIGH/LOW (default Normally Low)

If selected as digital input, it configures whether the input is normally high or low.

DIGITAL OUTPUT NORMALLY STATE (default Normally Open)

If selected as digital output, it configures whether the output is normally open or closed.

DIGITAL OUTPUT WATCHDOG (default Disabled)

If selected as digital output, it sets the output watchdog mode.

If "Disabled", it disables the watchdog function for the selected output.

If "Enabled on Modbus Communication" the output goes into "Watchdog state" if there has been no generic Modbus communication within the set time.

If "Enabled on Modbus Digital Output Writing" the output goes into "Watchdog state" if there has been no writing of the output within the set time.

DIGITAL OUTPUT WATCHDOG STATE (default Open)

Sets the value that the digital output must adopt if the watchdog has been triggered.

DIGITAL OUTPUT WATCHDOG TIMEOUT [s] (default 100s)

Represents the watchdog time of the digital output in seconds.



10.3. SETUP COUNTERS SECTION

COUNTERS FILTER [ms] (default 0)

Sets the value in [ms] for filtering all the counters connected to the inputs.

10.4. P2P CONFIGURATION

In the P2P Client section it is possible to define which local events to send to one or more remote devices. This way it is possible to send the status of the inputs to the remote outputs and obtain the input-output replication without wiring. It is also possible to send the same input to several outputs simultaneously.

In the P2P Server section it is instead possible to define which inputs must be copied to the outputs.


The "Disable all rules" button places all the rules in a disabled status (default).

The "APPLY" button allows you to confirm and then save the set rules in the non-volatile memory.



11. CONFIGURATION OF THE R-16DI-8DO DEVICE VIA WEB SERVER

11.1. SETUP SECTION

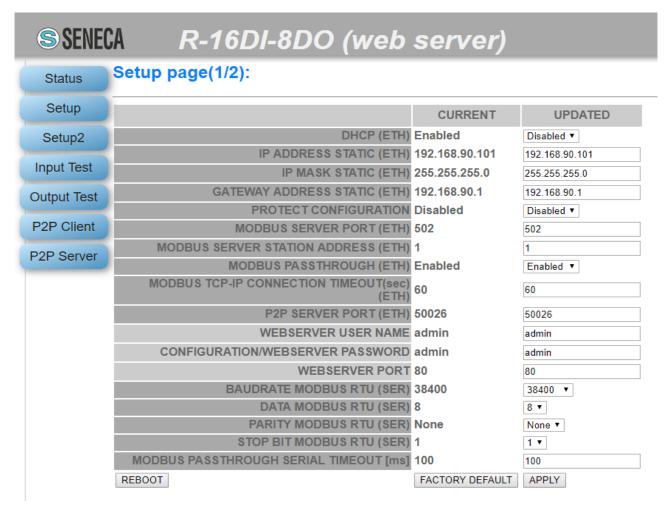

DHCP (ETH) (default: Disabled)

Sets the DHCP client to get an IP address automatically.

IP ADDRESS STATIC (ETH) (default: 192.168.90.101)

Sets the device static address. Careful not to enter devices with the same IP address into the same network.

IP MASK STATIC (ETH) (default: 255.255.255.0)

Sets the mask for the IP network.

GATEWAY ADDRESS STATIC (ETH) (default: 192.168.90.1)

Sets the gateway address.

PROTECT CONFIGURATION (default: Disabled)

Allows you to enable or disable password protection for reading and writing the configuration (including the IP address) using the Seneca Discovery Device software.





1 ATTENTION!

IF THE CONFIGURATION PROTECTION IS ENABLED IT WILL BE IMPOSSIBLE TO READ/WRITE THE CONFIGURATION OF THE DEVICE WITHOUT KNOWING THE PASSWORD. IF THE PASSWORD HAS BEEN LOST, THE DEVICE CAN BE RETURNED TO ITS DEFAULT SETTINGS BY CONNECTING IT VIA USB TO THE EASY SETUP 2 SOFTWARE

MODBUS SERVER PORT (ETH) (default: 502)

Sets the communication port for the Modbus TCP-IP server.

MODBUS SERVER STATION ADDRESS (ETH) (default: 1)

Active only if Modbus Passthrough is also active, it sets the station address of the modbus TCP-IP server.



ATTENTION!

THE MODBUS SERVER WILL ANSWER ANY STATION ADDRESS ONLY IF THE MODBUS PASSTHROUGH MODE IS DISABLED.

MODBUS PASSTHROUGH (ETH) (default: disabled)

Sets the conversion mode from Modbus TCP-IP to Modbus RTU serial (see chapter 6).

MODBUS TCP-IP CONNECTION TIMEOUT [sec] (ETH) (default: 60)

Sets the TCP-IP connection timeout for the Modbus TCP-IP server and Passthrough modes.

P2P SERVER PORT (default: 50026)

Sets the communication port for the P2P server.

WEB SERVER USER NAME (default: admin)

Sets the user name to access the web server.

CONFIGURATION/WEB SERVER PASSWORD (default: admin)

Sets the password to access the webserver and to read/write the configuration (if enabled).

WEB SERVER PORT (default: 80)

Sets the communication port for the web server.

BAUDRATE MODBUS RTU (SER) (default: 38400 baud)

Sets the baud rate for the RS485 communication port.

DATA MODBUS RTU (SER) (default: 8 bit)

Sets the number of bits for the RS485 communication port.



PARITY MODBUS RTU (SER) (default: None)

Sets the parity for the RS485 communication port.

STOP BIT MODBUS RTU (SER) (default: 1 bit)

Sets the number of stop bits for the RS485 communication port.

MODBUS PASSTHROUGH SERIAL TIMEOUT (default: 100ms)

Active only if passthrough mode is activated, sets the maximum waiting time before sending a new packet from TCP-IP to the serial port. It must be set according to the longest response time of all the devices present on the RS485 serial port.



THE USB PORT CONFIGURATION PARAMETERS CANNOT BE MODIFIED AND ARE BAUDRATE:

115200

DATA: 8 BIT PARITY: NONE

STOP BIT: 1

MODBUS RTU PROTOCOL



11.2. SETUP 2 SECTION

Status	Setup page(2/2): (WARNING: before update the	firmware, it's safe to save	the current device co
Setup		CURRENT	UPDATED
Setup2	COUNTERS FILTER [ms]	100	0
	INPUTS TYPE	Pnp	Pnp ▼
Input Test	COUNTER DIRECTION	Up	Up ▼
Output Test	DIGITAL OUTPUTS WATCHDOG	Enabled	Disabled ▼
o anpar 100t	DIGITAL OUTPUTS WATCHDOG T.OUT [s]	5	5
P2P Client	state	NORMALLY STATE	FAULT
DOD Conver	Output 01	□ -∕ ~	□ → → −
P2P Server	Output 02	⁄ -	
	Output 03	□ -∕ -	_
	Output 04	□ ~ ′~	□
	Output 05	□ ~ ′~	■
	Output 06	□ ~ ′~	■
	Output 07	⁄ -	_
	Output 08	⁄~	
	REBOOT	FACTORY DEFAULT	APPLY
	Configure Scegli file Nessun file selezionato Load con	fig Save config	
	Firmware Scegli file Nessun file selezionato Update fir	mware	

COUNTERS FILTER (default: 100ms)

Sets the filtering of the counters, the value is expressed in [ms].

The filter cut-off frequency corresponds to:

$$f_{cut}[Hz] = \frac{1000}{2 * Counters Filter [ms]}$$

For example, if the filter counter is 100ms the cutting frequency will be:

$$f_{cut}[Hz] = \frac{1000}{2 * Counters Filter [ms]} = 5 Hz$$

So all input frequencies greater than 5 Hz will be cut.

INPUTS TYPE (default: Pnp "Source")

Sets the input/counter operating mode to between npn "Sink" and pnp "Source".

COUNTER DIRECTION (default: Up)

Sets the counting mode of the counters "forward", up or back "down".



In the "Up" mode when the counter reaches the value:

$$Max\ Value = 2^{32} - 1 = 4294967295$$

User Manual

A subsequent increase will return the value to 0.

In the "Down" mode, if the counter value is 0, a subsequent input pulse will return the value to 4294967295.

DIGITAL OUTPUT WATCHDOG (default: Disabled)

Set whether the digital output watchdog is to activated. When enabled, if within the timeout time there has been no communication from the master to the device (Modbus serial communication, TCP-IP or USB or P2P communication) the outputs go into a Fail state. This mode makes it possible to obtain a secure system in the event of a master malfunction and its use is recommended in the case of radio type connections.

DIGITAL OUTPUTS WATCHDOG T.OUT [s] (default: 5 s)

Sets the watchdog time of the digital outputs (valid only if the DIGITAL OUTPUT WATCHDOG parameter is enabled)

NORMALLY STATE/FAULT (default: normally Normally open (N.O.) and Normally closed (N.C.) state in case of fail

They set the states of each of the outputs in normal conditions and in the event of a failure.

In the case of normally open (not energized) — writing in the Modbus "Outputs" register with 0 will cause the relay not to energize, otherwise, in the case of normally closed (energized) — writing in the Modbus "Outputs" register with 1 will determine the relay not to be energized.

In the case of "fail" the output will go into the selected configuration between not energized or energized

The "Configure" section allows you to save or open a complete configuration of the device.

The "Firmware" section allows you to update the device firmware in order to obtain new functions.





12. CONFIGURATION OF THE R-8AI-8DIDO DEVICE VIA WEB SERVER

12.1. SETUP SECTION

DHCP (ETH) (default: Disabled)

Sets the DHCP client to get an IP address automatically.

IP ADDRESS STATIC (ETH) (default: 192.168.90.101)

Sets the device static address. Careful not to enter devices with the same IP address into the same network.

IP MASK STATIC (ETH) (default: 255.255.255.0)

Sets the mask for the IP network.

GATEWAY ADDRESS STATIC (ETH) (default: 192.168.90.1)

Sets the gateway address.

PROTECT CONFIGURATION (default: Disabled)

Allows you to enable or disable password protection for reading and writing the configuration (including the IP address) using the Seneca Discovery Device software. The password is the same one that allows accessing the web server.



ATTENTION!

IF THE CONFIGURATION PROTECTION IS ENABLED IT WILL BE IMPOSSIBLE TO READ/WRITE THE CONFIGURATION OF THE DEVICE WITHOUT KNOWING THE PASSWORD.

IN THE EVENT OF LOSING THE PASSWORD IT WILL BE POSSIBLE TO RETURN THE DEVICE TO THE FACTORY CONFIGURATION (SEE CHAPTER7)

MODBUS SERVER PORT (ETH) (default: 502)

Sets the communication port for the Modbus TCP-IP server.

MODBUS SERVER STATION ADDRESS (ETH) (default: 1)

Active only if Modbus Passthrough is also active, it sets the station address of the modbus TCP-IP server.



ATTENTION!

THE MODBUS SERVER WILL ANSWER ANY STATION ADDRESS ONLY IF THE MODBUS PASSTHROUGH MODE IS DISABLED.

MODBUS PASSTHROUGH (ETH) (default: disabled)

Sets the conversion mode from Modbus TCP-IP to Modbus RTU serial (see chapter 6).



MODBUS TCP-IP CONNECTION TIMEOUT [sec] (ETH) (default: 60)

Sets the TCP-IP connection timeout for the Modbus TCP-IP server and Passthrough modes.

P2P SERVER PORT (default: 50026)

Sets the communication port for the P2P server.

WEB SERVER USERNAME (default: admin)

Sets the username to access the webserver.

CONFIGURATION/WEB SERVER PASSWORD (default: admin)

Sets the password to access the webserver and to read/write the configuration (if enabled).

WEB SERVER PORT (default: 80)

Sets the communication port for the web server.

BAUDRATE MODBUS RTU (SER) (default: 38400 baud)

Sets the baud rate for the RS485 communication port.

DATA MODBUS RTU (SER) (default: 8 bit)

Sets the number of bits for the RS485 communication port.

PARITY MODBUS RTU (SER) (default: None)

Sets the parity for the RS485 communication port.

STOP BIT MODBUS RTU (SER) (default: 1 bit)

Sets the number of stop bits for the RS485 communication port.

MODBUS PASSTHROUGH SERIAL TIMEOUT (default: 100ms)

Active only if Passthrough mode is activated, sets the maximum waiting time before sending a new packet from TCP-IP to the serial port. It must be set according to the longest response time of all the devices present on the RS485 serial port.

CHANNEL SAMPLE TIME [ms] (default: 100ms)

Sets the sampling time of each analog input.



12.2. SETUP AIN 1. 8 SECTION

This section allows the configuration of the analog inputs present in the device.



THE DEVICE CAN DETECT THE COLD JOINT TEMPERATURE FROM THE INTERNAL SENSORS OR FROM ANALOG INPUT 1 (THROUGH EXTERNAL PT100-TYPE SENSOR).

IN THIS CASE ALL THE DETECTIONS OF THE INTERNAL SENSORS WILL BE REPLACED BY THE READING OF ANALOG INPUT 1.

ANALOG INPUT MODE (default +-30V)

Set the type of measurement for the selected input.

It is possible to choose between the following types of input:

- +-30V
- +-100mV
- +-24 mA

Thermocouple

PT100 3 wires only for input 1)

If the "IN2..8 CJ PT100" type of measurement is selected for input 1, this will automatically be used as a measurement of the cold junction for all inputs configured by thermocouple between IN2 and IN8 included.

ANALOG INPUT 1 PT100 WIRE RESISTANCE [Ohm] (default 0 Ohm)

(Only for analog input 1) allows to compensate the cable resistance in case of 2-wire connection to the PT100.

ANALOG INPUT TC TYPE (default J)

In the case of thermocouple measurement, it allows to select the type of thermocouple between: J, K, R, S, T, B, E, N, L

ANALOG INPUT TEMPERATURE OFFSET (default 0°C)

Sets a temperature offset in °C for thermocouple measurements

ANALOG INPUT ONBOARD COLD JUNCTION (default ENABLED)

In the case of thermocouple measurement, it enables or disables the automatic cold junction offset of the device. If channel 1 has been configured as PT100 cold junction measurement, this sensor will be used for the offset and not the one inside the instrument.

ANALOG INPUT COLD JUNCTION VALUE [°C] (default 0°C)





In the case of thermocouple measurement, if the automatic measurement of the cold junction has been deactivated, it is possible to manually enter the cold junction temperature.

ANALOG INPUT BURNOUT MODE (default FAIL VALUE)

In the case of thermocouple measurement, it selects the behaviour in case of sensor failure:

In the case of "Last Value" the value is stopped at the last valid value, in the case of "Fail Value" the "Burnout" value is loaded in the registers.

ANALOG INPUT BURNOUT VALUE (default 10000°C)

In the case of thermocouple measurement, if the ANALOG INPUT BURNOUT MODE = "FAIL VALUE" mode is activated and the sensor is in the "burn" state, it allows you to set a value in °C to be taken by the measurement register.

ANALOG INPUT UNIT MEASURE (default °C)

In the case of thermocouple measurement, it allows you to set the measurement unit of the measurement register between °C, K, °F and mV.

ANALOG INPUT FILTER [samples] (default 0)

Allows you to set the moving average filter with the selected number of samples. If the value is "0" the filter is disabled.

ANALOG INPUT START SCALE

Represents the start of the electrical scale of the analog measurement used for the register of the engineering measurement.

ANALOG INPUT STOP SCALE

Represents the electrical full scale of the analog measurement used for the engineering measurement register.

ANALOG INPUT ENG START SCALE

It represents the value of the engineering measurement register when the input reaches the value shown in the ANALOG INPUT START SCALE parameter.

For example if:

ANALOG INPUT START SCALE = 4mA

ANALOG INPUT STOP SCALE = 20mA

ANALOG INPUT ENG STOP SCALE = -200 metres

ANALOG INPUT ENG START SCALE = 200 metres

With a 12 mA input the engineering value will be 0 metres.

ANALOG INPUT ENG STOP SCALE

It represents the value of the engineering measurement register when the input reaches the value shown in the ANALOG INPUT STOP SCALE parameter.



For example if:

ANALOG INPUT START SCALE = 4mA
ANALOG INPUT STOP SCALE = 20mA
ANALOG INPUT ENG STOP SCALE = -200 metres
ANALOG INPUT ENG START SCALE = 200 metres

With a 12 mA input the engineering value will be 0 metres.

12.3. DIGITAL I/O SETUP SECTION

This section allows the configuration of the digital I/Os present in the device.

DIGITAL I/O MODE (default Input)

Selects whether the chosen terminal will work as an input, output or output commanded by an event related to the selected analog input.

DIGITAL INPUT NORMALLY HIGH/LOW (default Normally Low)

If selected as digital input, it configures whether the input is normally high or low.

DIGITAL OUTPUT NORMALLY STATE (default Normally Open)

If selected as digital output, it configures whether the output is normally open or closed.

DIGITAL OUTPUT WATCHDOG (default Disabled)

If selected as digital output, it sets the output watchdog mode.

If "Disabled", it disables the watchdog function for the selected output.

If "Enabled on Modbus Communication" the output goes into "Watchdog state" if there has been no generic Modbus communication within the set time.

If "Enabled on Modbus Digital Output Writing" the output goes into "Watchdog state" if there has been no writing of the output within the set time.

DIGITAL OUTPUT WATCHDOG STATE (default Open)

Sets the value that the digital output must adopt if the watchdog has been triggered.

DIGITAL OUTPUT WATCHDOG TIMEOUT [s] (default 100s)

Represents the watchdog time of the digital output in seconds.



12.4. EVENT SETUP SECTION

This section allows the configuration of events to send analog values with the P2P protocol.

EVENT AIN MODE (Default: DISABLED)

Represents the event condition for sending packets linked to the analog inputs in the P2P protocol.

It may be:

"Disabled" the sending event of the analog packet is disabled

"Event when AIN > HIGH THRESHOLD" the packet sending event occurs when the analog input exceeds the "High" threshold set.

"Event when AIN < LOW THRESHOLD" the packet sending event occurs when the analog input is lower than the "Low" threshold set.

EVENT AIN HIGH THRESHOLD (Default: 0)

Threshold value linked to the "High" event.

EVENT AIN LOW THRESHOLD (Default: 0)

Threshold value linked to the "Low" event.

EVENT AIN HISTERESYS

Hysteresis value for the reset of the "event" condition.

For example, if the event is configured in "Event when AIN > HIGH THRESHOLD" mode, when the analog input exceeds the threshold value, the packet will be sent, to send the next packet it will be necessary for the analog value to fall below the value (EVENT AIN HIGH THRESHOLD + EVENT AIN HYSTERESIS) and then to rise above the HIGH value again.





13. CONFIGURATION OF THE R- SG3 DEVICE VIA WEB SERVER

13.1 SETUP SECTION

DHCP (ETH) (default: Disabled)

Sets the DHCP client to get an IP address automatically.

IP ADDRESS STATIC (ETH) (default: 192.168.90.101)

Sets the device static address. Careful not to enter devices with the same IP address into the same network.

IP MASK STATIC (ETH) (default: 255.255.255.0)

Sets the mask for the IP network.

GATEWAY ADDRESS STATIC (ETH) (default: 192.168.90.1)

Sets the gateway address.

MODBUS SERVER PORT (ETH) (default: 502)

Sets the communication port for the Modbus TCP-IP server.

MODBUS SERVER STATION ADDRESS (ETH) (default: 1)

Active only if Modbus Passthrough is also active, it sets the station address of the modbus TCP-IP server.



THE MODBUS SERVER WILL ANSWER ANY STATION ADDRESS ONLY IF THE MODBUS PASSTHROUGH MODE IS DISABLED.

MODBUS PASSTHROUGH (ETH) (default: disabled)

Sets the conversion mode from Modbus TCP-IP to Modbus RTU serial (see chapter 6).

MODBUS TCP-IP CONNECTION TIMEOUT [sec] (ETH) (default: 60)

Sets the TCP-IP connection timeout for the Modbus TCP-IP server and Passthrough modes.

P2P SERVER PORT (default: 50026)

Sets the communication port for the P2P server.

WEB SERVER USERNAME (default: admin)

Sets the username to access the webserver.

CONFIGURATION/WEB SERVER PASSWORD (default: admin)

Sets the password to access the webserver and to read/write the configuration (if enabled).

WEB SERVER PORT (default: 80)

R SERIES

Sets the communication port for the web server.

BAUDRATE MODBUS RTU (SER) (default: 38400 baud)

Sets the baud rate for the RS485 communication port.

DATA MODBUS RTU (SER) (default: 8 bit)

Sets the number of bits for the RS485 communication port.

PARITY MODBUS RTU (SER) (default: None)

Sets the parity for the RS485 communication port.

STOP BIT MODBUS RTU (SER) (default: 1 bit)

Sets the number of stop bits for the RS485 communication port.

MODBUS PASSTHROUGH SERIAL TIMEOUT (default: 100ms)

Active only if Passthrough mode is activated, sets the maximum waiting time before sending a new packet from TCP-IP to the serial port. It must be set according to the longest response time of all the devices present on the RS485 serial port.

13.2. LOAD CELL SETUP SECTION

FUNCTION MODE

It allows to configure the basic operation of the device, can be set to factory calibration or to Calibration with standard weight.

FACTORY CALIBRATION

It is used when a load cell with declared sensitivity is available.

In this mode, calibration only consists in acquiring the tare directly in the field with a direct measurement. If it is not possible to acquire the tare with a direct measurement (for example in the case of an already filled silo) it is possible to manually enter the tare value in the desired unit of measurement (kg, t, etc.).

CALIBRATION WITH STANDARD WEIGHT

It is used when a standard weight is available (as far as possible towards the load cell full scale). In this mode the calibration consists in acquiring both the tare and the standard weight directly on the field.

MEASURE TYPE

It allows to configure the operation of the device between:

BALANCE (UNIPOLAR)

It is used when a scale is being created in which the load cell is only compressed, in this case the maximum resolution of the compression measurement is obtained.



COMPRESSION AND TRACTION (BIPOLAR)

It is used when a measurement system (typically of force) is being created that can both compress and extend the load cell. In this case the direction of the force can also be decided, if compression the measurement will have the + sign, if traction it will have the - sign. A typical case of use is to link the direction of the force to the analog output so that, for example, 4mA correspond to the maximum traction force and 20mA correspond to the maximum compression force (in this case the cell at rest will provide 12Ma).

MEASURE UNIT

Sets the unit of measurement for the weighing in g, Kg, t etc.

CELL SENSITIVITY

It is the declared cell sensitivity value expressed in mV/V (in most cells it is 2mV/V).

CELL FULL SCALE

It is the full scale value of the cell expressed in the selected unit of measurement.

STANDARD WEIGHT VALUE

It represents the value of the standard weight that will be used in the calibration if the operating mode with standard weight has been chosen.

NOISE FILTER

Enables or disables measurement filtering.

FILTER LEVEL

Allows you to set the measurement filter level according to the following table:

FILTER LEVEL	RESPONSE TIME [ms]		
0	2		
1	6.7		
2	13		
3	30		
4	50		
5	250		
6	850		
ADVANCED	Configurable		

The higher the filter level the more stable (but slow) the weight measurement will be.

If you select the advanced filtering level (Advanced), the configuration will allow you to select the following parameters:



ADC SPEED Selects the ADC acquisition speed from 4.7 Hz to 960 Hz

NOISE VARIATION It is the variation in ADC points due to noise alone (represents the measurement uncertainty due to noise) or how much we expect the measurement to vary (the unit of measurement is in raw ADC points).

FILTER RESPONSE SPEED

Represents a parameter related to the filter response speed, it can vary from 0.001 (slowest response) to 1 (fastest response). Represents the variance of the process.

NET WEIGHT RESOLUTION

It is the resolution with which the value of the net weighing is represented, it can be worth:

MAXIMUM RESOLUTION

It will represent the net weight with the highest possible resolution

MANUAL

It will represent the net weight with the manual resolution set (in engineering units). For example, by setting 0.1 Kg you will get that the net weight can only vary by multiples of 100g.

AUTOMATIC RESOLUTION

It will represent the net weight with a calculated resolution of about 20000 points. Unlike Maximum or Manual resolution, this setting limits also the ADC value and therefore affects all measurements.



Keep in mind that in the "Calibration with standard weight" mode, using the "Manual Resolution", the correct standard weight value may not be perfectly represented:

For example, you have:

Cell full scale 15000 g Standard weight 14000 g Manual Resolution 1.5 g

The value of the standard weight (14000 g) cannot be represented with the resolution in 1.5g steps (14000/1.5g = 9333.333 is not an integer value) so it will be represented as: 9333*1.5g = 13999.5g To avoid this effect, use a resolution that allows the value to be represented (for example 1g or 2g).

SAMPLE PIECE WEIGHT

Sets the weight of a single piece in technical units for the mode. By setting the net weight of a single element in this register, the converter will be able to indicate the number of pieces present in the scales special register according to the relation:



$$Nr \ Pezzi = \frac{Peso \ Netto}{Peso \ Pezzo \ Campione}$$

AUTOMATIC TARE TRACKER

It allows you to enable or disable the automatic tare reset.

ADC VALUE

It allows to set the number of ADC points within which to reset the tare automatically. If after 5 seconds of stable weighing condition the ADC value of the net weight deviates by less than this value then a new tare is acquired.

13.3. I/O SETUP SECTION

DIGITAL I/O MODE

Configures the digital I/O of the device

DIGITAL INPUT

If the nth IO is configured as an input, it is possible to choose its function from:

FUNCTION DIGITAL INPUT

The input is configured as a digital input whose value can be read from the appropriate register.

FUNCTION ACQUIRE TARE

In this mode, if the digital input is activated for a time longer than 3 seconds, a new tare value is acquired (in RAM, then it is lost upon restart). It is equivalent to sending the command 49594 (decimal) in the command register.

DIGITAL OUTPUT

If the nth IO is configured as an output, it is possible to choose its function from:

DIGITAL OUTPUT MODE

The output can be configured as normally open (*Normally Open*) or as normally closed (*Normally Close*).

DIGITAL OUTPUT CONFIGURATION


Here you can choose the behaviour of the digital output:

STABLE WEIGHT

The stable weighing condition is used to indicate that the net weight measurement is stable if:



The net weight remains within the weight $\Delta peso_netto$ over time $\Delta tempo$ or if the slope of the curve drawn by the net weight is less than $\frac{\Delta peso_netto}{\Delta tempo}$:

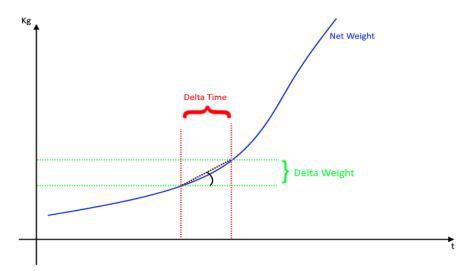

You will be prompted to enter Delta Net Weight (**Delta Weight**) (in engineering units) and Delta Time (**Delta Time**) (in 0.1 seconds).

THRESHOLD AND STABLE WEIGHT

In this mode, the output activates when the net weight reaches the threshold and the weigh is in a stable weighing condition.

STABLE WEIGHT

In this mode the output is activated if the weighing is in the stable weighing condition.




COMMANDABLE FROM MODBUS

In this mode the output can be controlled by the modbus register.

THRESHOLD WITH HYSTERESIS

In this mode the output is activated when the net weight reaches the threshold, the alarm is cancelled when the net weight falls below the Threshold-Hysteresis value:

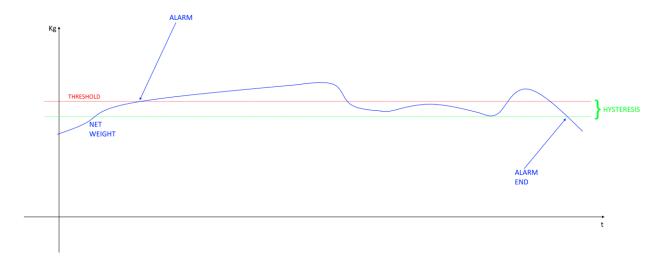


STABLE WEIGHT CONDITION

The stable weighing condition is used to indicate that the net weight measurement is stable if:

The net weight remains within the weight $\Delta peso_netto$ (DELAT WEIGHT) over time $\Delta tempo$ (DELTA TIME) or if the slope of the curve drawn by the net weight is less than $\frac{\Delta peso_netto}{\Delta tempo}$:



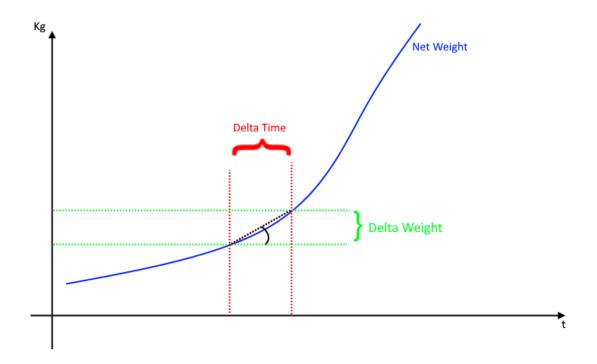

13.4. TEST AND LOAD CELL CALIBRATION SECTION

In this section it is possible to calibrate the cell and carry out the tests. For more information on cell calibration refer to the Cell Calibration chapter of this manual.

13.5. **P2P CONFIGURATION**

In the P2P Client section it is possible to define which local events to send to one or more remote devices. This way it is possible to send the status of the inputs to the remote outputs and obtain the input-output replication without wiring. It is also possible to send the same input to several outputs simultaneously.

In the P2P Server section it is instead possible to define which inputs must be copied to the outputs.

The "*Disable all rules*" button places all the rules in a disabled status (default).

The "*APPLY*" button allows you to confirm and then save the set rules in the non-volatile memory.

13.6. LOAD CELL CALIBRATION THROUGH THE WEB SERVER

To calibrate the load cell, access the "TEST AND LOAD CELL CALIBRATION" section of the web server. Depending on the two modes chosen between factory calibration or with standard weight, it will be possible to proceed with the calibration.

13.6.1. CELL CALIBRATION WITH FACTORY PARAMETERS

In cell calibration with factory parameters it is not necessary to use a standard weight as reference is made to the parameters acquired in the factory.

The necessary data are:

- -The cell sensitivity
- -The cell full scale

For the cell calibration procedure it is necessary to acquire the tare.

The tare can be entered manually in technical units (if known) or it can be acquired from the field.




TO OBTAIN A BETTER MEASUREMENT ACCURACY ACQUIRE THE TARE FROM THE FIELD

13.6.1.1. MANUAL ENTRY OF THE TARE VIA WEB SERVER

It is not always possible to acquire the tare value from the field (for example in the case of already filled silos), in these cases it is possible to introduce the tare weight in technical units.

LOAD CELL CALIBRATION

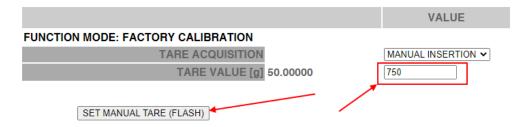

To acquire the tare value, press the "SET MANUAL TARE (FLASH)" button

13.6.1.2. ACQUISITION OF THE TARE FROM THE FIELD VIA WEB SERVER

- 1) Enter the "Test and load cell calibration" web server page
- 2) Replace the tare on the cell
- 3) Wait for the measurement to stabilize
- 4) Press the "TARE ACQUISITION (FLASH)" button

LOAD CELL CALIBRATION



13.6.2. CELL CALIBRATION WITH A STANDARD WEIGHT

In cell calibration with a standard weight it is necessary to know:

- -The cell sensitivity
- -The cell full scale
- -A standard weight (so that Standard weight + Tare are as close as possible to the cell full scale)
 - 1) Enter the "Test and load cell calibration" web server page
 - 2) Replace the tare on the cell
 - 3) Wait for the measurement to stabilize
 - 4) Press the "TARE ACQUISITION (FLASH)" button

LOAD CELL CALIBRATION



- 5) Replace the Tare + Standard Weight
- 6) Wait for the measurement to stabilize
- 7) Press the "STANDARD WEIGHT ACQUISITION (FLASH)" button



14. CONFIGURATION OF THE R-4AO-8DIDO DEVICE VIA WEB SERVER

14.1. SETUP SECTION

DHCP (ETH) (default: Disabled)

Sets the DHCP client to get an IP address automatically.

IP ADDRESS STATIC (ETH) (default: 192.168.90.101)

Sets the device static address. Careful not to enter devices with the same IP address into the same network.

IP MASK STATIC (ETH) (default: 255.255.255.0)

Sets the mask for the IP network.

GATEWAY ADDRESS STATIC (ETH) (default: 192.168.90.1)

Sets the gateway address.

PROTECT CONFIGURATION (default: Disabled)

Allows you to enable or disable password protection for reading and writing the configuration (including the IP address) using the Seneca Discovery Device software. The password is the same one that allows accessing the web server.



ATTENTION!

IF THE CONFIGURATION PROTECTION IS ENABLED IT WILL BE IMPOSSIBLE TO READ/WRITE THE CONFIGURATION OF THE DEVICE WITHOUT KNOWING THE PASSWORD.

IN THE EVENT OF LOSING THE PASSWORD IT WILL BE POSSIBLE TO RETURN THE DEVICE TO THE FACTORY CONFIGURATION (SEE CHAPTER7)

MODBUS SERVER PORT (ETH) (default: 502)

Sets the communication port for the Modbus TCP-IP server.

MODBUS SERVER STATION ADDRESS (ETH) (default: 1)

Active only if Modbus Passthrough is also active, it sets the station address of the modbus TCP-IP server.



ATTENTION!

THE MODBUS SERVER WILL ANSWER ANY STATION ADDRESS ONLY IF THE MODBUS PASSTHROUGH MODE IS DISABLED.

MODBUS PASSTHROUGH (ETH) (default: disabled)

Sets the conversion mode from Modbus TCP-IP to Modbus RTU serial (see chapter 6).



MODBUS TCP-IP CONNECTION TIMEOUT [sec] (ETH) (default: 60)

Sets the TCP-IP connection timeout for the Modbus TCP-IP server and Passthrough modes.

P2P SERVER PORT (default: 50026)

Sets the communication port for the P2P server.

WEB SERVER USERNAME (default: admin)

Sets the username to access the webserver.

CONFIGURATION/WEB SERVER PASSWORD (default: admin)

Sets the password to access the webserver and to read/write the configuration (if enabled).

WEB SERVER PORT (default: 80)

Sets the communication port for the web server.

BAUDRATE MODBUS RTU (SER) (default: 38400 baud)

Sets the baud rate for the RS485 communication port.

DATA MODBUS RTU (SER) (default: 8 bit)

Sets the number of bits for the RS485 communication port.

PARITY MODBUS RTU (SER) (default: None)

Sets the parity for the RS485 communication port.

STOP BIT MODBUS RTU (SER) (default: 1 bit)

Sets the number of stop bits for the RS485 communication port.

MODBUS PASSTHROUGH SERIAL TIMEOUT (default: 100ms)

Active only if Passthrough mode is activated, sets the maximum waiting time before sending a new packet from TCP-IP to the serial port. It must be set according to the longest response time of all the devices present on the RS485 serial port.

CHANNEL SAMPLE TIME [ms] (default: 100ms)

Sets the sampling time of each analog input.



14.2. ANALOG OUTPUT SETUP SECTION

This section allows the configuration of the analog outputs present in the device.

MODE (default Voltage)

Sets whether the analog output must work in Voltage (range +-10V) or Current (range 0-20mA).

WATCHDOG MODE (default Disabled)

Sets whether the analog output must load the safety value or not in the event of a lack of communication with the Modbus client.

WATCHDOG TIMEOUT [s] (default 0)

Sets the time in seconds within which communication with the Modbus master must take place in order not to trigger the watchdog.

WATCHDOG FAIL ENG. VALUE (default 0)

Sets the engineering value (scaled) that the output must take on in the event of a fail due to the watchdog. It is also the value the analogs assume at startup.

START SCALE [mV/uA]

Represents the start of the electrical scale of the analog output used for the register of the engineering measurement.

STOP SCALE [mV/uA]

Represents the electrical full scale of the analog measurement used for the engineering measurement register.

ENG START SCALE

Represents the value of the engineering register when the output reaches the value shown in the START SCALE parameter.

For example if: START SCALE = 4mA STOP SCALE = 20mA ENG STOP SCALE = -200 metres ENG START SCALE = 200 metres

By writing the engineering value -200 meters on the Modbus register, the analog output will be worth 4 mA. By writing the engineering value 0 meters on the Modbus register, the analog output will be worth 12 mA. By writing the engineering value 200 meters on the Modbus register, the analog output will be worth 20 mA.





ENG STOP SCALE

Represents the value of the engineering register when the output reaches the value shown in the STOP SCALE parameter.

For example if: START SCALE = 4mA STOP SCALE = 20mA ENG STOP SCALE = -200 metres ENG START SCALE = 200 metres

By writing the engineering value -200 meters on the Modbus register, the analog output will be worth 4 mA. By writing the engineering value 0 meters on the Modbus register, the analog output will be worth 12 mA. By writing the engineering value 200 meters on the Modbus register, the analog output will be worth 20 mA.

14.3. DIGITAL I/O SETUP SECTION

This section allows the configuration of the digital I/Os present in the device.

DIGITAL I/O MODE (default Input)

Selects whether the chosen terminal will work as an input, output or output commanded by an event related to the selected analog input.

DIGITAL INPUT NORMALLY HIGH/LOW (default Normally Low)

If selected as digital input, it configures whether the input is normally high or low.

DIGITAL OUTPUT NORMALLY STATE (default Normally Open)

If selected as digital output, it configures whether the output is normally open or closed.

DIGITAL OUTPUT WATCHDOG (default Disabled)

If selected as digital output, it sets the output watchdog mode.

If "Disabled", it disables the watchdog function for the selected output.

If "Enabled on Modbus Communication" the output goes into "Watchdog state" if there has been no generic Modbus communication within the set time.

If "Enabled on Modbus Digital Output Writing" the output goes into "Watchdog state" if there has been no writing of the output within the set time.

DIGITAL OUTPUT WATCHDOG STATE (default Open)

Sets the value that the digital output must adopt if the watchdog has been triggered.

DIGITAL OUTPUT WATCHDOG TIMEOUT [s] (default 100s)

Represents the watchdog time of the digital output in seconds.



14.4. SETUP COUNTERS SECTION

COUNTERS FILTER [ms] (default 0)

Sets the value in [ms] for filtering all the counters connected to the inputs.

14.5. P2P CONFIGURATION

In the P2P Client section it is possible to define which local events to send to one or more remote devices. This way it is possible to send the status of the inputs to the remote outputs and obtain the input-output replication without wiring. It is also possible to send the same input to several outputs simultaneously.

In the P2P Server section it is instead possible to define which inputs must be copied to the outputs.

The "Disable all rules" button places all the rules in a disabled status (default).

The "APPLY" button allows you to confirm and then save the set rules in the non-volatile memory.

14.6. ANALOG TEST SECTION

Here you can control analog outputs through a web page.

14.7. DIGITAL TEST SECTION

Here you can read or control digital inputs or outputs through a web page.

14.8 COUNTERS TEST SECTION

In this section it is possible to view the value of the counters or set a starting one.

15. CONFIGURATION OF THE R-4RTD-8DIDO DEVICE VIA WEB SERVER

15.1. SETUP SECTION

DHCP (ETH) (default: Disabled)

Sets the DHCP client to get an IP address automatically.

IP ADDRESS STATIC (ETH) (default: 192.168.90.101)

Sets the device static address. Careful not to enter devices with the same IP address into the same network.

IP MASK STATIC (ETH) (default: 255.255.255.0)

Sets the mask for the IP network.

GATEWAY ADDRESS STATIC (ETH) (default: 192.168.90.1)

Sets the gateway address.

PROTECT CONFIGURATION (default: Disabled)

Allows you to enable or disable password protection for reading and writing the configuration (including the IP address) using the Seneca Discovery Device software. The password is the same one that allows accessing the web server.



IF THE CONFIGURATION PROTECTION IS ENABLED IT WILL BE IMPOSSIBLE TO READ/WRITE THE CONFIGURATION OF THE DEVICE WITHOUT KNOWING THE PASSWORD.

IN THE EVENT OF LOSING THE PASSWORD IT WILL BE POSSIBLE TO RETURN THE DEVICE TO THE FACTORY CONFIGURATION (SEE CHAPTER7)

MODBUS SERVER PORT (ETH) (default: 502)

Sets the communication port for the Modbus TCP-IP server.

MODBUS SERVER STATION ADDRESS (ETH) (default: 1)

Active only if Modbus Passthrough is also active, it sets the station address of the modbus TCP-IP server.



THE MODBUS SERVER WILL ANSWER ANY STATION ADDRESS ONLY IF THE MODBUS PASSTHROUGH MODE IS DISABLED.

MODBUS PASSTHROUGH (ETH) (default: disabled)

Sets the conversion mode from Modbus TCP-IP to Modbus RTU serial (see chapter 6).

MODBUS TCP-IP CONNECTION TIMEOUT [sec] (ETH) (default: 60)

Sets the TCP-IP connection timeout for the Modbus TCP-IP server and Passthrough modes.

P2P SERVER PORT (default: 50026)

Sets the communication port for the P2P server.

WEB SERVER USERNAME (default: admin)

Sets the username to access the webserver.

CONFIGURATION/WEB SERVER PASSWORD (default: admin)

Sets the password to access the webserver and to read/write the configuration (if enabled).

WEB SERVER PORT (default: 80)



Sets the communication port for the web server.

BAUDRATE MODBUS RTU (SER) (default: 38400 baud)

Sets the baud rate for the RS485 communication port.

DATA MODBUS RTU (SER) (default: 8 bit)

Sets the number of bits for the RS485 communication port.

PARITY MODBUS RTU (SER) (default: None)

Sets the parity for the RS485 communication port.

STOP BIT MODBUS RTU (SER) (default: 1 bit)

Sets the number of stop bits for the RS485 communication port.

MODBUS PASSTHROUGH SERIAL TIMEOUT (default: 100ms)

Active only if Passthrough mode is activated, sets the maximum waiting time before sending a new packet from TCP-IP to the serial port. It must be set according to the longest response time of all the devices present on the RS485 serial port.

15.2. ANALOG INPUT SETUP SECTION

This section allows the configuration of the analog inputs present in the device.

SENSOR

Sets the type of sensor connected to the input.

You can choose between the following sensors:

PT100

Ni100

PT500

PT1000

Cu50

Cu100

Ni120

Ni1000

SAMPLING TIME

Sets the sampling time of the channel (each channel is independent)

MOVING FILTER



Allows you to set whether or not to activate the 10-sample moving average filter.

CONNECTION WIRES

Allows you to select the connection type with the sensors of 2, 3 or 4 wires.

WIRES CONNECTION RESISTANCE [Ohm]

Allows you to select the possible resistance of connection cables.

UNIT MEASURE

Allows you to select the channel unit of measurement among °C, K, °F, Ohm.

TEMPERATURE OFFSET

Allows you to set a channel temperature offset.

FAULT MODE

Allows you to set the behaviour in case of channel fault between "Last valid Value" or "Fail value"

FAIL VALUE

Allows you to set the channel fail value.

BURN SENSOR DETECT

Allows you to activate or deactivate the speed detect of sensor burn state.

BURN SENSOR SAMPLING TIME (s)

Allows you to set how often the measurement must be taken to detect the channel burn state.

ANALOG INPUT START SCALE

Represents the start of the electrical scale of the analog measurement used for the register of the engineering measurement.

ANALOG INPUT STOP SCALE

Represents the electrical full scale of the analog measurement used for the engineering measurement register.

ANALOG INPUT ENG START SCALE

It represents the value of the engineering measurement register when the input reaches the value shown in the ANALOG INPUT START SCALE parameter.

For example if:

ANALOG INPUT START SCALE = 0 °C

ANALOG INPUT STOP SCALE = 100 °C

ANALOG INPUT ENG STOP SCALE = -200

ANALOG INPUT ENG START SCALE = 200



With a 50 °C input the engineering value will be 0.

ANALOG INPUT ENG STOP SCALE

It represents the value of the engineering measurement register when the input reaches the value shown in the ANALOG INPUT STOP SCALE parameter.

For example if:

ANALOG INPUT START SCALE = 0 °C
ANALOG INPUT STOP SCALE = 100 °C
ANALOG INPUT ENG STOP SCALE = -200
ANALOG INPUT ENG START SCALE = 200

With a 50 °C input the engineering value will be 0.

15.3. ANALOG TEST SECTION

Here you can view analog intputs values through a web page.

15.4. DIGITAL I/O SETUP SECTION

This section allows the configuration of the digital I/Os present in the device.

DIGITAL I/O MODE (default Input)

Selects whether the chosen terminal will work as an input, output or output commanded by an event related to the selected analog input.

DIGITAL INPUT NORMALLY HIGH/LOW (default Normally Low)

If selected as digital input, it configures whether the input is normally high or low.

DIGITAL OUTPUT NORMALLY STATE (default Normally Open)

If selected as digital output, it configures whether the output is normally open or closed.

DIGITAL OUTPUT WATCHDOG (default Disabled)

If selected as digital output, it sets the output watchdog mode.

If "Disabled", it disables the watchdog function for the selected output.

If "Enabled on Modbus Communication" the output goes into "Watchdog state" if there has been no generic Modbus communication within the set time.

If "Enabled on Modbus Digital Output Writing" the output goes into "Watchdog state" if there has been no writing of the output within the set time.

DIGITAL OUTPUT WATCHDOG STATE (default Open)

Sets the value that the digital output must adopt if the watchdog has been triggered.



DIGITAL OUTPUT WATCHDOG TIMEOUT [s] (default 100s)

Represents the watchdog time of the digital output in seconds.

15.5. SETUP COUNTERS SECTION

COUNTERS FILTER [ms] (default 0)

Sets the value in [ms] for filtering all the counters connected to the inputs.

15.6. DIGITAL IO TEST SECTION

Here you can read or control digital inputs or outputs through a web page.

15.7. COUNTERS TEST SECTION

In this section it is possible to view the value of the digital counters or set a starting one.

15.8. **P2P CONFIGURATION**

In the P2P Client section it is possible to define which local events to send to one or more remote devices. This way it is possible to send the status of the inputs to the remote outputs and obtain the input-output replication without wiring. It is also possible to send the same input to several outputs simultaneously.

In the P2P Server section it is instead possible to define which inputs must be copied to the outputs.

The "Disable all rules" button places all the rules in a disabled status (default).

The "APPLY" button allows you to confirm and then save the set rules in the non-volatile memory.





16. CONFIGURATION OF THE R-2AI-6DIDO DEVICE VIA WEB SERVER

16.1. SETUP SECTION

DHCP (ETH) (default: Disabled)

Sets the DHCP client to get an IP address automatically.

IP ADDRESS STATIC (ETH) (default: 192.168.90.101)

Sets the device static address. Careful not to enter devices with the same IP address into the same network.

IP MASK STATIC (ETH) (default: 255.255.255.0)

Sets the mask for the IP network.

GATEWAY ADDRESS STATIC (ETH) (default: 192.168.90.1)

Sets the gateway address.

PROTECT CONFIGURATION (default: Disabled)

Allows you to enable or disable password protection for reading and writing the configuration (including the IP address) using the Seneca Discovery Device software. The password is the same one that allows accessing the web server.



ATTENTION!

IF THE CONFIGURATION PROTECTION IS ENABLED IT WILL BE IMPOSSIBLE TO READ/WRITE THE CONFIGURATION OF THE DEVICE WITHOUT KNOWING THE PASSWORD.

IN THE EVENT OF LOSING THE PASSWORD IT WILL BE POSSIBLE TO RETURN THE DEVICE TO THE FACTORY CONFIGURATION (SEE CHAPTER7)

MODBUS SERVER PORT (ETH) (default: 502)

Sets the communication port for the Modbus TCP-IP server.

MODBUS SERVER STATION ADDRESS (ETH) (default: 1)

Active only if Modbus Passthrough is also active, it sets the station address of the modbus TCP-IP server.



ATTENTION!

THE MODBUS SERVER WILL ANSWER ANY STATION ADDRESS ONLY IF THE MODBUS PASSTHROUGH MODE IS DISABLED.

MODBUS PASSTHROUGH (ETH) (default: disabled)

Sets the conversion mode from Modbus TCP-IP to Modbus RTU serial (see chapter 6).



MODBUS TCP-IP CONNECTION TIMEOUT [sec] (ETH) (default: 60)

Sets the TCP-IP connection timeout for the Modbus TCP-IP server and Passthrough modes.

P2P SERVER PORT (default: 50026)

Sets the communication port for the P2P server.

WEB SERVER USERNAME (default: admin)

Sets the username to access the webserver.

CONFIGURATION/WEB SERVER PASSWORD (default: admin)

Sets the password to access the webserver and to read/write the configuration (if enabled).

WEB SERVER PORT (default: 80)

Sets the communication port for the web server.

BAUDRATE MODBUS RTU (SER) (default: 38400 baud)

Sets the baud rate for the RS485 communication port.

DATA MODBUS RTU (SER) (default: 8 bit)

Sets the number of bits for the RS485 communication port.

PARITY MODBUS RTU (SER) (default: None)

Sets the parity for the RS485 communication port.

STOP BIT MODBUS RTU (SER) (default: 1 bit)

Sets the number of stop bits for the RS485 communication port.

MODBUS PASSTHROUGH SERIAL TIMEOUT (default: 100ms)

Active only if Passthrough mode is activated, sets the maximum waiting time before sending a new packet from TCP-IP to the serial port. It must be set according to the longest response time of all the devices present on the RS485 serial port.

CHANNEL SAMPLE TIME [ms] (default: 100ms)

Sets the sampling time of each analog input.



16.2. SETUP AIN 1. 8 SECTION

This section allows the configuration of the analog inputs present in the device.



THE DEVICE CAN DETECT THE COLD JOINT TEMPERATURE FROM THE INTERNAL SENSORS OR FROM ANALOG INPUT 1 (THROUGH EXTERNAL PT100-TYPE SENSOR).

IN THIS CASE ALL THE DETECTIONS OF THE INTERNAL SENSORS WILL BE REPLACED BY THE READING OF ANALOG INPUT 1.

ANALOG INPUT MODE (default +-30V)

Set the type of measurement for the selected input.

It is possible to choose between the following types of input:

- +-30V
- +-24 mA

ANALOG INPUT FILTER [samples] (default 0)

Allows you to set the moving average filter with the selected number of samples. If the value is "0" the filter is disabled.

ANALOG INPUT START SCALE

Represents the start of the electrical scale of the analog measurement used for the register of the engineering measurement.

ANALOG INPUT STOP SCALE

Represents the electrical full scale of the analog measurement used for the engineering measurement register.

ANALOG INPUT ENG START SCALE

It represents the value of the engineering measurement register when the input reaches the value shown in the ANALOG INPUT START SCALE parameter.

For example if:

ANALOG INPUT START SCALE = 4mA

ANALOG INPUT STOP SCALE = 20mA

ANALOG INPUT ENG STOP SCALE = -200 metres

ANALOG INPUT ENG START SCALE = 200 metres

With a 12 mA input the engineering value will be 0 metres.

ANALOG INPUT ENG STOP SCALE



It represents the value of the engineering measurement register when the input reaches the value shown in the ANALOG INPUT STOP SCALE parameter.

For example if:

ANALOG INPUT START SCALE = 4mA
ANALOG INPUT STOP SCALE = 20mA
ANALOG INPUT ENG STOP SCALE = -200 metres
ANALOG INPUT ENG START SCALE = 200 metres

With a 12 mA input the engineering value will be 0 metres.

16.3. DIGITAL I/O SETUP SECTION

This section allows the configuration of the digital I/Os present in the device.

DIGITAL I/O MODE (default Input)

Selects whether the chosen terminal will work as an input, output or output commanded by an event related to the selected analog input.

DIGITAL INPUT NORMALLY HIGH/LOW (default Normally Low)

If selected as digital input, it configures whether the input is normally high or low.

DIGITAL OUTPUT NORMALLY STATE (default Normally Open)

If selected as digital output, it configures whether the output is normally open or closed.

DIGITAL OUTPUT WATCHDOG (default Disabled)

If selected as digital output, it sets the output watchdog mode.

If "Disabled", it disables the watchdog function for the selected output.

If "Enabled on Modbus Communication" the output goes into "Watchdog state" if there has been no generic Modbus communication within the set time.

If "Enabled on Modbus Digital Output Writing" the output goes into "Watchdog state" if there has been no writing of the output within the set time.

DIGITAL OUTPUT WATCHDOG STATE (default Open)

Sets the value that the digital output must adopt if the watchdog has been triggered.

DIGITAL OUTPUT WATCHDOG TIMEOUT [s] (default 100s)

Represents the watchdog time of the digital output in seconds.

16.4. SETUP COUNTERS SECTION

COUNTERS FILTER [ms] (default 0)



Sets the value in [ms] for filtering all the counters connected to the inputs.

16.5. DIGITAL IO TEST SECTION

Here you can read or control digital inputs or outputs through a web page.

16.6. COUNTERS TEST SECTION

In this section it is possible to view the value of the digital counters or set a starting one.

16.7. **P2P CONFIGURATION**

In the P2P Client section it is possible to define which local events to send to one or more remote devices. This way it is possible to send the status of the inputs to the remote outputs and obtain the input-output replication without wiring. It is also possible to send the same input to several outputs simultaneously.


In the P2P Server section it is instead possible to define which inputs must be copied to the outputs.

The "Disable all rules" button places all the rules in a disabled status (default).

The "APPLY" button allows you to confirm and then save the set rules in the non-volatile memory.



17. P2P CLIENT

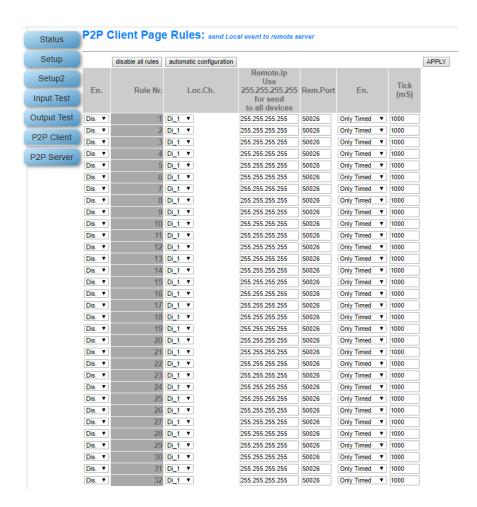

The "Automatic configuration" button allows you to prepare the rules for sending all the inputs available in the device in use.

En.

Selects whether the copy rule is active or not.

Loc. Ch.

Selects the status of which channel should be sent to the remote device(s).

Remote IP

Selects the IP address of the remote device to which the status of that input channel is to be sent.

If the channel has to be sent simultaneously to all the devices (broadcast), enter the broadcast address (255.255.255.255) as the IP address.

Remote Port

Selects the communication port for sending the status of the inputs. It must coincide with the **P2P SERVER PORT** parameter of the remote device.



En

Selects operation in "Only Timed" or "Timed+Event" mode.

In "Only Timed" mode, the status of the inputs is sent on each "tick [ms]" and then refreshed continuously (cyclic sending).

In the "Timed+Event" mode, the status of the inputs is sent to a digital event (change of status).

Tick [ms]

Sets the cyclical sending time of the input status.




IN CASE OF ENABLED WATCHDOG OF DIGITAL OUTPUTS THE RULE'S TICK TIME MUST BE LOWER
THAN THE WATCHDOG TIMEOUT SET



IT IS ALSO POSSIBLE TO COPY SOME I/O OF THE SAME DEVICE (FOR EXAMPLE, COPY THE I01 INPUT TO D01) BY ENTERING THE IP OF THE DEVICE AS REMOTE IP



18. P2P SERVER

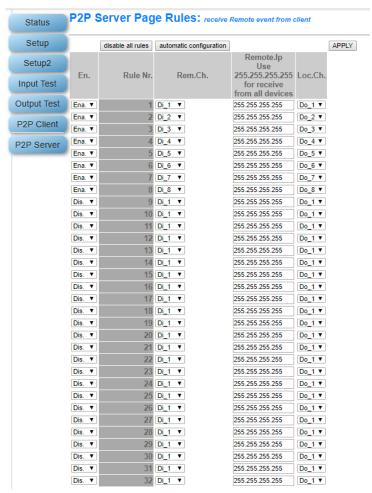

The "Automatic configuration" button allows you to prepare the rules to receive all the inputs on the outputs of the device in use.

En.

Selects whether the copy rule is active or not.

Rem. Ch.

Selects the status of which remote channel should be received by the local device.

Remote IP

Selects the IP address of the remote device from which to receive the input status.

If the channel must be received simultaneously by all the devices (broadcast), enter the broadcast address (255.255.255) as the IP address.

Loc. Ch.

Selects the copy destination of the remote input value.



ATTENTION!

IT IS ALSO POSSIBLE TO COPY SOME I/O OF THE SAME DEVICE (FOR EXAMPLE, COPY THE I01 INPUT TO D01) BY ENTERING THE IP OF THE DEVICE AS REMOTE IP. HOWEVER, THE ETHERNET PORT MUST BE CORRECTLY CONNECTED.

18.1. P2P CONFIGURATION EXAMPLE

In the following example we have No.2 devices and we want to copy the status of digital input 1 of the first to the digital output of the second.

The IP address of Device 1 is 192.168.1.10


The IP address of Device 2 is 192.168.1.11

Let's move to device 1 with IP address 192.168.1.10 and select the sending of digital input 1 to the remote address 192.168.1.11 of device 2 this way:

DEVICE 1

En.	Rule Nr.	Loc.Ch.	Remote.lp Use 255.255.255.255 for send to all devices	Rem.Port	En.	Tick (mS)
Ena. ▼	1	Di_1 ▼	192.168.1.11	50026	Timed+Event ▼	1000

Now let's move on to device 2 and first configure the P2P server communication port on 50026:

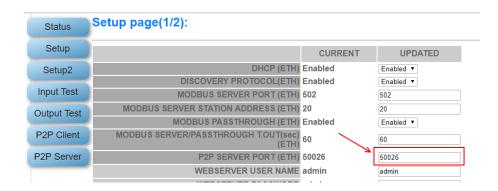

And we now configure the P2P server, the channel to be received from 192.168.1.10 is Di_1 and must be copied to Do_1:

DEVICE 2





With this configuration, each time digital input 1 of device 1 (192.168.1.10) changes status, a packet will be sent to device 2 (192.168.1.11) which will copy it to digital output 1.

After 1 second, the same packet will be sent cyclically.

18.2. **P2P EXECUTION TIME**

The switching time depends on the client device model and the server device model in addition to the congestion of the ethernet network.

For example, for the R-16DI8DO model, the switching time of the remote digital output as a response to an incoming event into another R-16DI8DO is about 20 ms (daisy chain connection of 2 devices, 1 set rule).

As regards the analog models, the refresh time of the digital inputs/outputs and analog inputs typical of the device must also be considered.

19. UPDATING THE FIRMWARE AND SAVING/OPENING A CONFIGURATION

The firmware update can be performed via the web server in the appropriate section. Via the web server it is possible to save or open a saved configuration.



NOT TO DAMAGE THE DEVICE DO NOT REMOVE THE POWER SUPPLY DURING THE FIRMWARE UPDATE OPERATION.



20. MODBUS RTU/ MODBUS TCP-IP REGISTERS

The following abbreviations are used in the register tables:

MS	Most Significant
LS	Least Significant
MSBIT	Most Significant Bit
LSBIT	Least Significant Bit
MMSW	"Most" Most Significant Word (16bit)
MSW	Most Significant Word (16bit)
LSW	Least Significant Word (16bit)
LLSW	"Least" Least Significant Word (16bit)
RO	Read Only
RW	Register in RAM or Fe-RAM Writable infinite times.
RW*	Flash Read-Write: REGISTERS CONTAINED IN THE FLASH MEMORY: WRITABLE
	AT THE MAXIMUM ABOUT 10000 TIMES.
UNSIGNED 16 BIT	Unsigned integer register that can take values from 0 to 65535
SIGNED 16 BIT	Signed integer register that can take values from -32768 to +32767
UNSIGNED 32 BIT	Unsigned integer register that can take values from 0 to +4294967296
SIGNED 32 BIT	Signed integer register that can take values from -2147483648 to 2147483647
UNSIGNED 64 BIT	Unsigned integer register that can take values from 0 to 18.446.744.073.709.551.615
SIGNED 64 BIT	Signed integer register that can take values from -2^63 to 2^63-1
FLOAT 32 BIT	Single-precision, 32-bit floating point register (IEEE 754)
	https://en.wikipedia.org/wiki/IEEE_754
BIT	Boolean register, which can take values 0 (false) or 1 (true)

20.1. NUMBERING OF "0-BASED" OR "1-BASED" MODBUS ADDRESSES

According to the Modbus standard the Holding Registers are addressable from 0 to 65535, there are 2 different conventions for numbering the addresses: "0-BASED" and "1-BASED".

For greater clarity, Seneca shows its register tables in both conventions.



ATTENTION!

CAREFULLY READ THE DOCUMENTATION OF THE MODBUS MASTER DEVICE IN ORDER TO UNDERSTAND WHICH OF THE TWO CONVENTIONS THE MANUFACTURER HAS DECIDED TO USE

20.2. NUMBERING OF MODBUS ADDRESSES WITH "0-BASED" CONVENTION

The numbering is:

HOLDING REGISTER MODBUS ADDRESS (OFFSET)	MEANING
0	FIRST REGISTER
1	SECOND REGISTER
2	THIRD REGISTER
3	FOURTH REGISTER
4	FIFTH REGISTER

Therefore, the first register is at address 0.

In the following tables, this convention is indicated with "ADDRESS OFFSET".

20.3. NUMBERING OF MODBUS ADDRESSES WITH "1 BASED" CONVENTION (STANDARD)

The numbering is that established by the Modbus consortium and is of the type:

HOLDING REGISTER MODBUS ADDRESS 4x	MEANING
40001	FIRST REGISTER
40002	SECOND REGISTER
40003	THIRD REGISTER
40004	FOURTH REGISTER
40005	FIFTH REGISTER

In the following tables this convention is indicated with "ADDRESS 4x" since a 4 is added to the address so that the first Modbus register is 40001.



A further convention is also possible where the number 4 is omitted in front of the register address:

HOLDING MODBUS ADDRESS WITHOUT 4x	MEANING
1	FIRST REGISTER
2	SECOND REGISTER
3	THIRD REGISTER
4	FOURTH REGISTER
5	FIFTH REGISTER

20.4. BIT CONVENTION WITHIN A MODBUS HOLDING REGISTER

A Modbus Holding Register consists of 16 bits with the following convention:

| BIT |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

For instance, if the value of the register in decimal is

12300

the value 12300 in hexadecimal is:

0x300C

the hexadecimal 0x300C in binary value is:

11 0000 0000 1100

So, using the above convention, we get:

| BIT |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| 0 | 0 | 1 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | |

20.5. MSB and LSB BYTE CONVENTION WITHIN A MODBUS HOLDING REGISTER

A Modbus Holding Register consists of 16 bits with the following convention:

| BIT |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |

LSB Byte (Least Significant Byte) defines the 8 bits ranging from Bit 0 to Bit 7 included, we define MSB Byte (Most Significant Byte) the 8 bits ranging from Bit 8 to Bit 15 inclusive:

BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	BYTE MSB										BYTE	LSB			



20.6. REPRESENTATION OF A 32-BIT VALUE IN TWO CONSECUTIVE MODBUS HOLDING REGISTERS

The representation of a 32-bit value in the Modbus Holding Registers is made using 2 consecutive Holding Registers (a Holding Register is a 16-bit register). To obtain the 32-bit value it is therefore necessary to read two consecutive registers:

For example, if register 40064 contains the 16 most significant bits (MSW) while register 40065 contains the least significant 16 bits (LSW), the 32-bit value is obtained by composing the 2 registers:

Ī	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	40064 MOST SIGNIFICANT WORD															

BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	40065 LEAST SIGNIFICANT WORD														

$$Value_{32bit} = Register_{LSW} + (Register_{MSW} * 65536)$$

In the reading registers it is possible to swap the most significant word with the least significant word, therefore it is possible to obtain 40064 as LSW and 40065 as MSW.




20.7. TYPE OF 32-BIT FLOATING POINT DATA (IEEE 754)

The IEEE 754 standard (https://en.wikipedia.org/wiki/IEEE_754) defines the format for representing floating point numbers.

As already mentioned, since it is a 32-bit data type, its representation occupies two 16-bit holding registers. To obtain a binary/hexadecimal conversion of a floating point value it is possible to refer to an online converter at this address:

http://www.h-schmidt.net/FloatConverter/IEEE754.html

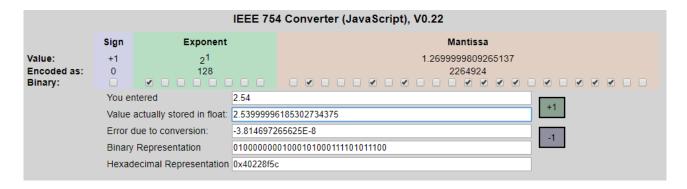

Using the last representation the value 2.54 is represented at 32 bits as:

0x40228F5C

Since we have 16-bit registers available, the value must be divided into MSW and LSW:

0x4022 (16418 decimal) are the 16 most significant bits (MSW) while 0x8F5C (36700 decimal) are the 16 least significant bits (LSW).

20.8. SUPPORTED MODBUS COMMUNICATION PROTOCOLS

The Modbus communication protocols supported are:

- Modbus RTU Slave (from the RS485 port)
- Modbus TCP-IP Server (from Ethernet ports) 8 clients max

20.9. SUPPORTED MODBUS FUNCTION CODES

The following Modbus functions are supported:

•	Read Holding Register	(function 3)
•	Read Coil Status	(function 1)
•	Write Coil	(function 5)
•	Write Multiple Coil	(function 15)
	Write Single Register	(function 6)
	Write Multiple Registers	(function 16)



All 32-bit values are contained in 2 consecutive registers



Any registers with RW* (in flash memory) can be written up to 10000 times

The PLC/Master Modbus programmer must not exceed this limit



21. MODBUS REGISTER TABLE FOR THE R-32DIDO PRODUCT

21.1. R-32DIDO: MODBUS 4X HOLDING REGISTERS TABLE (FUNCTION CODE 3)

ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40001	0	MACHINE-ID	-	Device identification	RO	UNSIGNED 16 BIT
40002	1	FW REVISION (Maior/Minor)	-	Fw Revision	RO	UNSIGNED 16 BIT
40003	2	FW REVISION (Fix/Build)	-	Fw Revision	RO	UNSIGNED 16 BIT
40004	3	FW CODE	-	Fw Code	RO	UNSIGNED 16 BIT
40005	4	RESERVED	-	-	RO	UNSIGNED 16 BIT
40006	5	RESERVED	-	-	RO	UNSIGNED 16 BIT
40007	6	BOARD-ID	1	Hw Revision	RO	UNSIGNED 16 BIT
40008	7	BOOT REVISION (Maior/Minor)	ı	Bootloader Revision	RO	UNSIGNED 16 BIT
40009	8	BOOT REVISION (Fix/Build)	ı	Bootloader Revision	RO	UNSIGNED 16 BIT
40010	9	RESERVED	-	-	RO	UNSIGNED 16 BIT
40011	10	RESERVED	ı	-	RO	UNSIGNED 16 BIT
40012	11	RESERVED	ı	-	RO	UNSIGNED 16 BIT
40013	12	COMMAND_AUX _3H	ı	Aux Command Register	RW	UNSIGNED 16 BIT
40014	13	COMMAND_AUX _3L	-	Aux Command Register	RW	UNSIGNED 16 BIT
40015	14	COMMAND_AUX 2	-	Aux Command Register	RW	UNSIGNED 16 BIT
40016	15	COMMAND_AUX 1	-	Aux Command Register	RW	UNSIGNED 16 BIT
40017	16	COMMAND	-	Aux Command Register	RW	UNSIGNED 16 BIT
40018	17	STATUS	-	Device Status	RW	UNSIGNED 16 BIT
40019	18	RESERVED	-	-	RW	UNSIGNED 16 BIT
40020	19	RESERVED	-	-	RW	UNSIGNED 16 BIT
40021	20	DIGITAL I/O	161	Digital IO Value [Channel 161]	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40022	21	DIGITAL I/O	3217	Digital IO Value [Channel 3217]	RW	UNSIGNED 16 BIT

ADDRESS (4x)	OFFEST (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40101	100	COUNTER MSW DIN	1	CHANNEL COUNTER	RW	UNSIGNED
40102	101	COUNTER LSW DIN	1	VALUE	RW	32 BIT
40103	102	COUNTER MSW DIN	2	CHANNEL COUNTER	RW	UNSIGNED
40104	103	COUNTER LSW DIN	2	VALUE	RW	32 BIT
40105	104	COUNTER MSW DIN	3	CHANNEL COUNTER	RW	UNSIGNED
40106	105	COUNTER LSW DIN	3	VALUE	RW	32 BIT
40107	106	COUNTER MSW DIN	4	CHANNEL COUNTER	RW	UNSIGNED
40108	107	COUNTER LSW DIN		VALUE	RW	32 BIT
40109	108	COUNTER MSW DIN	- 5	CHANNEL COUNTER	RW	UNSIGNED
40110	109	COUNTER LSW DIN		VALUE	RW	32 BIT
40111	110	COUNTER MSW DIN	6	CHANNEL COUNTER	RW	UNSIGNED
40112	111	COUNTER LSW DIN	Ü	VALUE	RW	32 BIT
40113	112	COUNTER MSW DIN	7	CHANNEL COUNTER	RW	UNSIGNED
40114	113	COUNTER LSW DIN	,	VALUE	RW	32 BIT
40115	114	COUNTER MSW DIN	8	CHANNEL COUNTER	RW	UNSIGNED
40116	115	COUNTER LSW DIN	Ü	VALUE	RW	32 BIT
40117	116	COUNTER MSW DIN	9	CHANNEL COUNTER	RW	UNSIGNED
40118	117	COUNTER LSW DIN	9	VALUE	RW	32 BIT
40119	118	COUNTER MSW DIN	10	CHANNEL COUNTER	RW	UNSIGNED 32 BIT
40120	119	COUNTER LSW DIN	10	VALUE	RW	





ADDRESS (4x)	OFFEST (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40121	120	COUNTER MSW DIN	11	CHANNEL COUNTER	RW	UNSIGNED
40122	121	COUNTER LSW DIN	11	VALUE	RW	32 BIT
40123	122	COUNTER MSW DIN	12	CHANNEL COUNTER	RW	UNSIGNED
40124	123	COUNTER LSW DIN	12	VALUE	RW	32 BIT
40125	124	COUNTER MSW DIN	13	CHANNEL COUNTER	RW	UNSIGNED
40126	125	COUNTER LSW DIN	13	VALUE	RW	32 BIT
40127	126	COUNTER MSW DIN	14	CHANNEL COUNTER	RW	UNSIGNED
40128	127	COUNTER LSW DIN	17	VALUE	RW	32 BIT
40129	128	COUNTER MSW DIN	15	CHANNEL COUNTER VALUE	RW	UNSIGNED
40130	129	COUNTER LSW DIN			RW	32 BIT
40131	130	COUNTER MSW DIN	16	CHANNEL COUNTER VALUE	RW	UNSIGNED 32 BIT
40132	131	COUNTER LSW DIN			RW	
40133	132	COUNTER MSW DIN	17	CHANNEL COUNTER VALUE	RW	UNSIGNED 32 BIT
40134	133	COUNTER LSW DIN	1,		RW	
40135	134	COUNTER MSW DIN	18	CHANNEL COUNTER	RW	UNSIGNED
40136	135	COUNTER LSW DIN	10	VALUE	RW	32 BIT
40137	136	COUNTER MSW DIN	19	CHANNEL COUNTER	RW	UNSIGNED
40138	137	COUNTER LSW DIN	13	VALUE	RW	32 BIT
40139	138	COUNTER MSW DIN	20	CHANNEL COUNTER	RW	UNSIGNED
40140	139	COUNTER LSW DIN	20	VALUE	RW	32 BIT
40141	140	COUNTER MSW DIN	21	CHANNEL COUNTER	RW	UNSIGNED 32 BIT
40142	141	COUNTER LSW DIN	21	VALUE	RW	
40143	142	COUNTER MSW DIN	22	CHANNEL COUNTER VALUE	RW	UNSIGNED 32 BIT



ADDRESS (4x)	OFFEST (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40144	143	COUNTER LSW DIN			RW	
40145	144	COUNTER MSW DIN	23	CHANNEL COUNTER	RW	UNSIGNED
40146	145	COUNTER LSW DIN	23	VALUE	RW	32 BIT
40147	146	COUNTER MSW DIN	24	CHANNEL COUNTER	RW	UNSIGNED
40148	147	COUNTER LSW DIN		VALUE	RW	32 BIT
40149	148	COUNTER MSW DIN	25	CHANNEL COUNTER	RW	UNSIGNED
40150	149	COUNTER LSW DIN	23	VALUE	RW	32 BIT
40151	150	COUNTER MSW DIN	- 26	CHANNEL COUNTER	RW	UNSIGNED
40152	151	COUNTER LSW DIN		VALUE	RW	32 BIT
40153	152	COUNTER MSW DIN	- 27	CHANNEL COUNTER	RW	UNSIGNED 32 BIT
40154	153	COUNTER LSW DIN		VALUE	RW	
40155	154	COUNTER MSW DIN	- 28	CHANNEL COUNTER	RW	UNSIGNED
40156	155	COUNTER LSW DIN	20	VALUE	RW	32 BIT
40157	156	COUNTER MSW DIN	29	CHANNEL COUNTER	RW	UNSIGNED
40158	157	COUNTER LSW DIN	23	VALUE	RW	32 BIT
40159	158	COUNTER MSW DIN	30	CHANNEL COUNTER	RW	UNSIGNED
40160	159	COUNTER LSW DIN	30	VALUE	RW	32 BIT
40161	160	COUNTER MSW DIN	31	CHANNEL COUNTER	RW	UNSIGNED
40162	161	COUNTER LSW DIN	31	VALUE	RW	32 BIT
40163	162	COUNTER MSW DIN	27	CHANNEL COUNTER	RW	UNSIGNED
40164	163	COUNTER LSW DIN	32	VALUE	RW	32 BIT
40165 40166	164 165	PERIOD	1	PERIOD [ms]	RW RW	FLOAT 32 BIT
40167	166	PERIOD	2	PERIOD [ms]	RW	FLOAT 32 BIT
40168	167				RW	





ADDRESS	OFFEST					
(4x)	(4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40169	168	2-2-0-		252/22 ()	RW	
40170	169	PERIOD	3	PERIOD [ms]	RW	FLOAT 32 BIT
40171	170		_		RW	
40172	171	PERIOD	4	PERIOD [ms]	RW	FLOAT 32 BIT
40173	172	2-2-0-	_	252/22 ()	RW	FLOAT 32 BIT
40174	173	PERIOD	5	PERIOD [ms]	RW	
40175	174	DEDIOD		DEDIOD []	RW	ELOAT 33 DIT
40176	175	PERIOD	6	PERIOD [ms]	RW	FLOAT 32 BIT
40177	176	DEDIOD	7	DEDIOD []	RW	ELOAT 33 DIT
40178	177	PERIOD	7	PERIOD [ms]	RW	FLOAT 32 BIT
40179	178	DEDIOD	0	DEDIOD []	RW	ELOAT 33 DIT
40180	179	PERIOD	8	PERIOD [ms]	RW	FLOAT 32 BIT
40181	180	DEDIOD	0	DEDIOD []	RW	FLOAT 22 DIT
40182	181	PERIOD	9	PERIOD [ms]	RW	FLOAT 32 BIT
40183	182	PERIOD	10	DEDIOD [ms]	RW	FLOAT 22 DIT
40184	183	PERIOD	10	PERIOD [ms]	RW	FLOAT 32 BIT
40185	184	PERIOD	11	DEDIOD [mc]	RW	FLOAT 32 BIT
40186	185	PERIOD	11	PERIOD [ms]	RW	
40187	186	PERIOD	12	DEDIOD [mc]	RW	FLOAT 32 BIT
40188	187		12	PERIOD [ms]	RW	FLUAT 32 BIT
40189	188	DEDIOD	12	DEDIOD [mc]	RW	FLOAT 32 BIT
40190	189	PERIOD	13	PERIOD [ms]	RW	TLOAT 32 BIT
40191	190	PERIOD	PERIOD 14	PERIOD [ms]	RW	FLOAT 32 BIT
40192	191	PERIOD	14		RW	
40193	192	PERIOD	15	PERIOD [ms]	RW	FLOAT 32 BIT
40194	193	FEMOD	15		RW	
40195	194	PERIOD	16	PERIOD [ms]	RW	FLOAT 32 BIT
40196	195	TEMOD	10	r Eniod [iiis]	RW	TEORI 32 BIT
40197	196	PERIOD	17	PERIOD [ms]	RW	FLOAT 32 BIT
40198	197	LINIOD	1/	i Elliob [iii3]	RW	120/31 32 011
40199	198	PERIOD	18	PERIOD [ms]	RW	FLOAT 32 BIT
40200	199	1 211100	10	i cittob [iiio]	RW	. 20,11 32 511
40201	200	PERIOD	19	PERIOD [ms]	RW	FLOAT 32 BIT
40202	201		13	. 211100 [1110]	RW	. 20, (1 32 511
40203	202	PERIOD	20	PERIOD [ms]	RW	FLOAT 32 BIT
40204	203	. 2.1100		. 205 [0]	RW	FLUAT 32 BIT
40205	204	PERIOD	21	PERIOD [ms]	RW	FLOAT 32 BIT
40206	205	. 255		. 1.1.05 [1110]	RW	FLUAT 32 BIT
40207	206	PERIOD	22	PERIOD [ms]	RW	FLOAT 32 BIT
40208	207)7			RW	PLUAT 32 BIT
40209	208	PERIOD	23	PERIOD [ms]	RW	FLOAT 32 BIT





ADDRESS	OFFEST	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
(4x)	(4x)		0.3.0.022			2
40210	209				RW	
40211	210	PERIOD	24	PERIOD [ms]	RW	FLOAT 32 BIT
40212	211				RW	
40213	212	PERIOD	25	PERIOD [ms]	RW	FLOAT 32 BIT
40214	213				RW	
40215	214	PERIOD	26	PERIOD [ms]	RW	FLOAT 32 BIT
40216	215	_	_		RW	120/11 32 011
40217	216	PERIOD	27	PERIOD [ms]	RW	FLOAT 32 BIT
40218	217				RW	
40219	218	PERIOD	28	PERIOD [ms]	RW	FLOAT 32 BIT
40220	219				RW	
40221	220	PERIOD	29	PERIOD [ms]	RW	FLOAT 32 BIT
40222	221				RW	
40223	222	PERIOD	30	PERIOD [ms]	RW	FLOAT 32 BIT
40224	223				RW	
40225	224	PERIOD	31	PERIOD [ms]	RW	FLOAT 32 BIT
40226	225		01	. 205 [0]	RW	
40227	226	PERIOD	32	PERIOD [ms]	RW	FLOAT 32 BIT
40228	227		52	. 205 [0]	RW	120711 02 011
40229	228	FREQUENCY	1	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40230	229	TREQUEIVET	-	TheQueiver [112]	RW	
40231	230	FREQUENCY	2	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40232	231	TREQUEIVET	2	TREQUENCT [112]	RW	TEORT 32 DIT
40233	232	FREQUENCY	3	EDEULIENCA [H²]	RW	FLOAT 32 BIT
40234	233	TREQUENCT	3	FREQUENCY [Hz]	RW	
40235	234	FREQUENCY	4	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40236	235	TREQUEIVET	7	THEQUENCT [HZ]	RW	TEORT 32 DIT
40237	236	FREQUENCY	5	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40238	237	TILQUENCT	,	TheQueiter [112]	RW	LOAT 32 DIT
40239	238	FREQUENCY	6	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40240	239	TREQUENCT	U	TREQUERCT [112]	RW	TLOAT 32 BIT
40241	240	FREQUENCY	7	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40242	241	TREQUENCT	,	TREQUENCT [HZ]	RW	I LOAT 32 BIT
40243	242	FREQUENCY	8	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40244	243	TREQUENCT	O	TREQUENCT [HZ]	RW	TEORI 32 BII
40245	244	EDECLIENCY	9	FREQUENCY [Hz]	RW	ELOAT 22 DIT
40246	245	FREQUENCY	9	TREQUENCT [HZ]	RW	FLOAT 32 BIT
40247	246	EDECLIENCY	10	EDEULIENION [III-]	RW	FLOAT 32 BIT
40248	247	FREQUENCY	10	FREQUENCY [Hz]	RW	
40249	248	EDECLIENCY	11	EDECITENCY [II-]	RW	FLOAT 32 BIT
40250	249	FREQUENCY	11	FREQUENCY [Hz]	RW	





ADDRESS	OFFEST					
(4x)	(4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40251	250	EDECLIENCY	12	EDEOTIENCY [II-]	RW	FLOAT 22 DIT
40252	251	FREQUENCY	12	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40253	252	EDECLIENCY	12		RW	FLOAT 22 DIT
40254	253	FREQUENCY	13	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40255	254	EDECLIENCY	1.1		RW	FLOAT 32 BIT
40256	255	FREQUENCY	14	FREQUENCY [Hz]	RW	
40257	256	EDECLIENCY	15	EDEOTIENCY [II-]	RW	FLOAT 22 DIT
40258	257	FREQUENCY	15	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40259	258	EDECLIENCY	16	EDEOTIENCY [II-]	RW	FLOAT 22 DIT
40260	259	FREQUENCY	16	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40261	260	EDECLIENCY	17	EDEOTIENCY [II-]	RW	FLOAT 22 DIT
40262	261	FREQUENCY	17	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40263	262	EDECLIENCY	10	EDEOTIENCY [II-]	RW	FLOAT 22 DIT
40264	263	FREQUENCY	18	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40265	264	FREQUENCY	10	EDEOTIENCA [TI-]	RW	FLOAT 22 DIT
40266	265	TREQUENCT	19	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40267	266	FREQUENCY	20	EDEOTIENCY [H-]	RW	FLOAT 32 BIT
40268	267	PREQUENCY	20	FREQUENCY [Hz]	RW	
40269	268	FREQUENCY	21	EDEOTIENCY [H-]	RW	FLOAT 32 BIT
40270	269		21	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40271	270	EDECLIENCY	22	EDEOTIENCY [H-]	RW	FLOAT 32 BIT
40272	271	FREQUENCY	22	FREQUENCY [Hz]	RW	1 LUAT 32 BIT
40273	272	FREQUENCY	23	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40274	273	PREQUENCY	25		RW	
40275	274	FREQUENCY	24	FREQUENCY [Hz]	RW	ELOAT 22 DIT
40276	275	PREQUENCY	24		RW	FLOAT 32 BIT
40277	276	FREQUENCY	25	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40278	277	PREQUENCY	23	FREQUENCY [HZ]	RW	FLOAT 32 BIT
40279	278	FREQUENCY	26	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40280	279	TREQUENCT	20	TREQUENCT [HZ]	RW	I LOAT 32 BIT
40281	280	FREQUENCY	27	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40282	281	TREQUENCT	21	TREQUENCT [HZ]	RW	I LOAT 32 BIT
40283	282	FREQUENCY	28	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40284	283	TREQUENCY	20	TREQUENCT [HZ]	RW	I LUAT 32 BIT
40285	284	FREQUENCY	29	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40286	285	TREQUENCY	23	TREQUENCT [HZ]	RW	I LUAT 32 BIT
40287	286	FREQUENCY	30	EBEULIENICA [П²]	RW	FI OAT 22 DIT
40288	287	TREQUENCY	30	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40289	288	EDECLIENCY	31	EDEUTIENCA [H-J	RW	ELOAT 22 DIT
40290	289	FREQUENCY	31	FREQUENCY [Hz]	RW	FLOAT 32 BIT
40291	290	FREQUENCY	32	FREQUENCY [Hz]	RW	FLOAT 32 BIT



ADDRESS (4x)	OFFEST (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40292	291				RW	

21.2. R-32DIDO: MODBUS CONFIGURATION REGISTERS TABLE 4x HOLDING REGISTERS (FUNCTION CODE 3)

ADDRESS	OFFSET	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
(4x) 45001-	(4x) 5000-					UNSIGNED
45001-	5000-	MAC Address	-	MAC Address	R	16 BIT
43000	3003	DHCP mode		0=DHCP OFF, else DHCP		UNSIGNED
45007	5007	Drief mode		ON	RW	16 BIT
45008-	5008-	Static IP address		Static IP address	RW	4 BYTE
45011	5010				IVV	4 0111
45012-	5011-	Static mask		Static mask address	RW	4 BYTE
45015	5014	address			11.00	4 0111
45016-	5015-	Static Gateway		Static Gateway address	RW	4 BYTE
45019	5018	address			11.00	4 0111
45020	5019	Enable change IP address from Discovery protocol		0=enabled, else disabled	RW	UNSIGNED 16 BIT
45021	5020	Modbus TCP/IP server port		Modbus TCP/IP server port	RW	UNSIGNED 16 BIT
45022	5021	Modbus TCP/IP device address		Modbus TCP/IP device address	RW	UNSIGNED 16 BIT
45023	5022	Modbus Passthrough		0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45024	5023	Modbus TCP/IP timeout [ms]			RW	UNSIGNED 16 BIT
45025	5024	P2P Server port			RW	UNSIGNED 16 BIT
45026-	5025-	Webserver user		string max 15 chars,	D\A/	16 DVTF
45041	5040	name		terminated by NULL	RW	16 BYTE
45042-	5041-	Webserver		string max 15 chars,	RW	16 BYTE
45057	5056	password		terminated by NULL	IVV	TOBLIC
45058	5057	Webserver port			RW	UNSIGNED 16 BIT
45059	5058	Baudrate RS485		0=1200 1=2400 2=4800 3=9600 4=19200 5=38400 6=57600, 7=115200	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
45060	5059	NOT USED			RW	UNSIGNED 16 BIT
45061	5060	Parity RS485		0=NONE 1=ODD 2=EVEN	RW	UNSIGNED 16 BIT
45062	5061	Bit Stop RS485		0=1 BIT DI STOP 1=2 BIT STOP	RW	UNSIGNED 16 BIT
45063	5062	Modbus RS485 slave device address			RW	UNSIGNED 16 BIT
45064	5063	Timeout [ms] Modbus RS485 slave			RW	UNSIGNED 16 BIT
45065	5064	Digital I/O Configuration	1	bit 0 : 0=input, 1=output bit 1 : 0=input not inverted, 1=input inverted bit 2 : 0=output not inverted, 1=output inverted bit 4,3 : 00=output watchdog disabled 01=out watchdog enabled, refresh on modbus communication 10=output watchdog enabled, refresh on modbus 40020-40021 write registers bit 5 : 0=watchdog expired open digital output, 1= watchdog expired close digital output bit 15-8 : value in [s] of the watchdog timeout	RW	UNSIGNED 16 BIT
45066	5065	Digital I/O Configuration	2	See 45065 for definitions	RW	UNSIGNED 16 BIT
45067	5066	Digital I/O Configuration	3	See 45065 for definitions	RW	UNSIGNED 16 BIT
45068	5067	Digital I/O Configuration	4	See 45065 for definitions	RW	UNSIGNED 16 BIT
45069	5068	Digital I/O Configuration	5	See 45065 for definitions	RW	UNSIGNED 16 BIT
45070	5069	Digital I/O Configuration	6	See 45065 for definitions	RW	UNSIGNED 16 BIT
45071	5070	Digital I/O Configuration	7	See 45065 for definitions	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
45072	5071	Digital I/O Configuration	8	See 45065 for definitions	RW	UNSIGNED 16 BIT
45073	5072	Digital I/O Configuration	9	See 45065 for definitions	RW	UNSIGNED 16 BIT
45074	5073	Digital I/O Configuration	10	See 45065 for definitions	RW	UNSIGNED 16 BIT
45075	5074	Digital I/O Configuration	11	See 45065 for definitions	RW	UNSIGNED 16 BIT
45076	5075	Digital I/O Configuration	12	See 45065 for definitions	RW	UNSIGNED 16 BIT
45077	5076	Digital I/O Configuration	13	See 45065 for definitions	RW	UNSIGNED 16 BIT
45078	5077	Digital I/O Configuration	14	See 45065 for definitions	RW	UNSIGNED 16 BIT
45079	5078	Digital I/O Configuration	15	See 45065 for definitions	RW	UNSIGNED 16 BIT
45080	5079	Digital I/O Configuration	16	See 45065 for definitions	RW	UNSIGNED 16 BIT
45081	5080	Digital I/O Configuration	17	See 45065 for definitions	RW	UNSIGNED 16 BIT
45082	5081	Digital I/O Configuration	18	See 45065 for definitions	RW	UNSIGNED 16 BIT
45083	5082	Digital I/O Configuration	19	See 45065 for definitions	RW	UNSIGNED 16 BIT
45084	5083	Digital I/O Configuration	20	See 45065 for definitions	RW	UNSIGNED 16 BIT
45085	5084	Digital I/O Configuration	21	See 45065 for definitions	RW	UNSIGNED 16 BIT
45086	5085	Digital I/O Configuration	22	See 45065 for definitions	RW	UNSIGNED 16 BIT
45087	5086	Digital I/O Configuration	23	See 45065 for definitions	RW	UNSIGNED 16 BIT
45088	5087	Digital I/O Configuration	24	See 45065 for definitions	RW	UNSIGNED 16 BIT
45089	5088	Digital I/O Configuration	25	See 45065 for definitions	RW	UNSIGNED 16 BIT
45090	5089	Digital I/O Configuration	26	See 45065 for definitions	RW	UNSIGNED 16 BIT
45091	5090	Digital I/O Configuration	27	See 45065 for definitions	RW	UNSIGNED 16 BIT
45092	5091	Digital I/O Configuration	28	See 45065 for definitions	RW	UNSIGNED 16 BIT
45093	5092	Digital I/O Configuration	29	See 45065 for definitions	RW	UNSIGNED 16 BIT
45094	5093	Digital I/O Configuration	30	See 45065 for definitions	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
45095	5094	Digital I/O Configuration	31	See 45065 for definitions	RW	UNSIGNED 16 BIT
45096	5095	Digital I/O Configuration	32	See 45065 for definitions	RW	UNSIGNED 16 BIT
45097	5096	Digital Input filter value [ms]	-		RW	UNSIGNED 16 BIT
45501	5500	P2P CLIENT RULE	1	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45502	5501	P2P CLIENT RULE	1	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45503- 45506	5502- 5505	P2P CLIENT RULE	1	remote ip address	RW	4 BYTE
45507	5506	P2P CLIENT RULE	1	remote tcp/ip port	RW	UNSIGNED 16 BIT
45508	5507	P2P CLIENT RULE	1	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45509	5508	P2P CLIENT RULE	1	timeout value [ms]	RW	UNSIGNED 16 BIT
45513	5512	P2P CLIENT RULE	1	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45533	5532	P2P CLIENT RULE	2	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45534	5533	P2P CLIENT RULE	2	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45535- 45538	5534- 5537	P2P CLIENT RULE	2	remote ip address	RW	4 BYTE
45539	5538	P2P CLIENT RULE	2	remote tcp/ip port	RW	UNSIGNED 16 BIT
45540	5539	P2P CLIENT RULE	2	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45541	5540	P2P CLIENT RULE	2	timeout value [ms]	RW	UNSIGNED 16 BIT
45545	5544	P2P CLIENT RULE	2	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45565	5564	P2P CLIENT RULE	3	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45566	5565	P2P CLIENT RULE	3	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45567- 45570	5566- 5569	P2P CLIENT RULE	3	remote ip address	RW	4 BYTE
45571	5570	P2P CLIENT RULE	3	remote tcp/ip port	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
45572	5571	P2P CLIENT RULE	3	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45573	5572	P2P CLIENT RULE	3	timeout value [ms]	RW	UNSIGNED 16 BIT
45577	5576	P2P CLIENT RULE	3	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45597	5596	P2P CLIENT RULE	4	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45598	5597	P2P CLIENT RULE	4	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45599- 45602	5598- 5601	P2P CLIENT RULE	4	remote ip address	RW	4 BYTE
45603	5602	P2P CLIENT RULE	4	remote tcp/ip port	RW	UNSIGNED 16 BIT
45604	5603	P2P CLIENT RULE	4	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45605	5604	P2P CLIENT RULE	4	timeout value [ms]	RW	UNSIGNED 16 BIT
45609	5608	P2P CLIENT RULE	4	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45629	5628	P2P CLIENT RULE	5	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45630	5629	P2P CLIENT RULE	5	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45631- 45634	5630- 5633	P2P CLIENT RULE	5	remote ip address	RW	4 BYTE
45635	5634	P2P CLIENT RULE	5	remote tcp/ip port	RW	UNSIGNED 16 BIT
45636	5635	P2P CLIENT RULE	5	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45637	5636	P2P CLIENT RULE	5	timeout value [ms]	RW	UNSIGNED 16 BIT
45641	5640	P2P CLIENT RULE	5	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45661	5660	P2P CLIENT RULE	6	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45662	5661	P2P CLIENT RULE	6	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45663- 45666	5662- 5665	P2P CLIENT RULE	6	remote ip address	RW	4 BYTE





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
45667	5666	P2P CLIENT RULE	6	remote tcp/ip port	RW	UNSIGNED 16 BIT
45668	5667	P2P CLIENT RULE	6	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45669	5668	P2P CLIENT RULE	6	timeout value [ms]	RW	UNSIGNED 16 BIT
45673	5672	P2P CLIENT RULE	6	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45693	5692	P2P CLIENT RULE	7	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45694	5693	P2P CLIENT RULE	7	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45695- 45698	5694- 5697	P2P CLIENT RULE	7	remote ip address	RW	4 BYTE
45699	5698	P2P CLIENT RULE	7	remote tcp/ip port	RW	UNSIGNED 16 BIT
45700	5699	P2P CLIENT RULE	7	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45701	5700	P2P CLIENT RULE	7	timeout value [ms]	RW	UNSIGNED 16 BIT
45705	5704	P2P CLIENT RULE	7	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45725	5724	P2P CLIENT RULE	8	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45726	5725	P2P CLIENT RULE	8	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45727- 45730	5726- 5729	P2P CLIENT RULE	8	remote ip address	RW	4 BYTE
45731	5730	P2P CLIENT RULE	8	remote tcp/ip port	RW	UNSIGNED 16 BIT
45732	5731	P2P CLIENT RULE	8	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45733	5732	P2P CLIENT RULE	8	timeout value [ms]	RW	UNSIGNED 16 BIT
45737	5736	P2P CLIENT RULE	8	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45757	5756	P2P CLIENT RULE	9	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45758	5757	P2P CLIENT RULE	9	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
45759- 45762	5758- 5761	P2P CLIENT RULE	9	remote ip address	RW	4 BYTE
45763	5762	P2P CLIENT RULE	9	remote tcp/ip port	RW	UNSIGNED 16 BIT
45764	5763	P2P CLIENT RULE	9	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45765	5764	P2P CLIENT RULE	9	timeout value [ms]	RW	UNSIGNED 16 BIT
45769	5768	P2P CLIENT RULE	9	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45789	5788	P2P CLIENT RULE	10	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45790	5789	P2P CLIENT RULE	10	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45791- 45794	5790- 5793	P2P CLIENT RULE	10	remote ip address	RW	4 BYTE
45795	5794	P2P CLIENT RULE	10	remote tcp/ip port	RW	UNSIGNED 16 BIT
45796	5795	P2P CLIENT RULE	10	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45797	5796	P2P CLIENT RULE	10	timeout value [ms]	RW	UNSIGNED 16 BIT
45801	5800	P2P CLIENT RULE	10	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45821	5820	P2P CLIENT RULE	11	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45822	5821	P2P CLIENT RULE	11	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45823- 45826	5822- 5825	P2P CLIENT RULE	11	remote ip address	RW	4 BYTE
45827	5826	P2P CLIENT RULE	11	remote tcp/ip port	RW	UNSIGNED 16 BIT
45828	5827	P2P CLIENT RULE	11	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45829	5828	P2P CLIENT RULE	11	timeout value [ms]	RW	UNSIGNED 16 BIT
45833	5832	P2P CLIENT RULE	11	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45853	5852	P2P CLIENT RULE	12	0=disabled, else enabled	RW	UNSIGNED 16 BIT





ADDRESS	OFFSET	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
(4x) 45854	(4x)			local channel value		UNSIGNED
73037	5853	P2P CLIENT RULE	12	Din1Din32 (031)	RW	16 BIT
45855-	5854-	P2P CLIENT RULE	12	remote ip address	RW	4 BYTE
45858	5857	121 CEIEIVI NOLE	12	Terriote ip dudi ess	11.00	
45859	5858	P2P CLIENT RULE	12	remote tcp/ip port	RW	UNSIGNED 16 BIT
45860	5859	P2P CLIENT RULE	12	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45861	5860	P2P CLIENT RULE	12	timeout value [ms]	RW	UNSIGNED 16 BIT
45865	5864	P2P CLIENT RULE	12	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45885	5884	P2P CLIENT RULE	13	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45886	5885	P2P CLIENT RULE	13	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45887- 45890	5886- 5888	P2P CLIENT RULE	13	remote ip address	RW	4 BYTE
45891	5890	P2P CLIENT RULE	13	remote tcp/ip port	RW	UNSIGNED 16 BIT
45892	5891	P2P CLIENT RULE	13	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45893	5892	P2P CLIENT RULE	13	timeout value [ms]	RW	UNSIGNED 16 BIT
45897	5896	P2P CLIENT RULE	13	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45917	5916	P2P CLIENT RULE	14	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45918	5917	P2P CLIENT RULE	14	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45919- 45922	5918- 5921	P2P CLIENT RULE	14	remote ip address	RW	4 BYTE
45923	5922	P2P CLIENT RULE	14	remote tcp/ip port	RW	UNSIGNED 16 BIT
45924	5923	P2P CLIENT RULE	14	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45925	5924	P2P CLIENT RULE	14	timeout value [ms]	RW	UNSIGNED 16 BIT
45929	5928	P2P CLIENT RULE	14	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
45949	5948	P2P CLIENT RULE	15	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45950	5949	P2P CLIENT RULE	15	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45951- 45954	5950- 5953	P2P CLIENT RULE	15	remote ip address	RW	4 BYTE
45955	5954	P2P CLIENT RULE	15	remote tcp/ip port	RW	UNSIGNED 16 BIT
45956	5955	P2P CLIENT RULE	15	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45957	5956	P2P CLIENT RULE	15	timeout value [ms]	RW	UNSIGNED 16 BIT
45961	5960	P2P CLIENT RULE	15	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
45981	5980	P2P CLIENT RULE	16	0=disabled, else enabled	RW	UNSIGNED 16 BIT
45982	5981	P2P CLIENT RULE	16	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
45983- 45986	5982- 5985	P2P CLIENT RULE	16	remote ip address	RW	4 BYTE
45987	5986	P2P CLIENT RULE	16	remote tcp/ip port	RW	UNSIGNED 16 BIT
45988	5987	P2P CLIENT RULE	16	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
45989	5988	P2P CLIENT RULE	16	timeout value [ms]	RW	UNSIGNED 16 BIT
45993	5992	P2P CLIENT RULE	16	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46013	6012	P2P CLIENT RULE	17	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46014	6013	P2P CLIENT RULE	17	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46015- 46018	6014- 6017	P2P CLIENT RULE	17	remote ip address	RW	4 BYTE
46019	6018	P2P CLIENT RULE	17	remote tcp/ip port	RW	UNSIGNED 16 BIT
46020	6019	P2P CLIENT RULE	17	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46021	6020	P2P CLIENT RULE	17	timeout value [ms]	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
46025	6024	P2P CLIENT RULE	17	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46045	6044	P2P CLIENT RULE	18	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46046	6045	P2P CLIENT RULE	18	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46047- 46050	6026- 6049	P2P CLIENT RULE	18	remote ip address	RW	4 BYTE
46051	6050	P2P CLIENT RULE	18	remote tcp/ip port	RW	UNSIGNED 16 BIT
46052	6051	P2P CLIENT RULE	18	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46053	6052	P2P CLIENT RULE	18	timeout value [ms]	RW	UNSIGNED 16 BIT
46057	6056	P2P CLIENT RULE	18	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46077	6076	P2P CLIENT RULE	19	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46078	6077	P2P CLIENT RULE	19	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46079- 46082	6078- 6081	P2P CLIENT RULE	19	remote ip address	RW	4 BYTE
46083	6082	P2P CLIENT RULE	19	remote tcp/ip port	RW	UNSIGNED 16 BIT
46084	6083	P2P CLIENT RULE	19	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46085	6084	P2P CLIENT RULE	19	timeout value [ms]	RW	UNSIGNED 16 BIT
46089	6088	P2P CLIENT RULE	19	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46109	6108	P2P CLIENT RULE	20	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46110	6109	P2P CLIENT RULE	20	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46111- 46114	6110- 6113	P2P CLIENT RULE	20	remote ip address	RW	4 BYTE
46115	6114	P2P CLIENT RULE	20	remote tcp/ip port	RW	UNSIGNED 16 BIT
46116	6115	P2P CLIENT RULE	20	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT





ADDRESS	OFFSET	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
(4x) 46117	(4x)				•	UNSIGNED
46117	6116	P2P CLIENT RULE	20	timeout value [ms]	RW	16 BIT
46121	6120	P2P CLIENT RULE	20	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46141	6140	P2P CLIENT RULE	21	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46142	6141	P2P CLIENT RULE	21	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46143- 46146	6142- 6145	P2P CLIENT RULE	21	remote ip address	RW	4 BYTE
46147	6146	P2P CLIENT RULE	21	remote tcp/ip port	RW	UNSIGNED 16 BIT
46148	6147	P2P CLIENT RULE	21	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46149	6148	P2P CLIENT RULE	21	timeout value [ms]	RW	UNSIGNED 16 BIT
46153	6152	P2P CLIENT RULE	21	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46173	6172	P2P CLIENT RULE	22	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46174	6173	P2P CLIENT RULE	22	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46175- 46178	6174- 6177	P2P CLIENT RULE	22	remote ip address	RW	4 BYTE
46179	6178	P2P CLIENT RULE	22	remote tcp/ip port	RW	UNSIGNED 16 BIT
46180	6179	P2P CLIENT RULE	22	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46181	6180	P2P CLIENT RULE	22	timeout value [ms]	RW	UNSIGNED 16 BIT
46185	6184	P2P CLIENT RULE	22	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46205	6204	P2P CLIENT RULE	23	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46206	6205	P2P CLIENT RULE	23	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46207- 46210	6206- 6209	P2P CLIENT RULE	23	remote ip address	RW	4 BYTE
46211	6210	P2P CLIENT RULE	23	remote tcp/ip port	RW	UNSIGNED 16 BIT
46212	6211	P2P CLIENT RULE	23	0=enabled send on timeout, 1=enebaled send	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
. ,				on timeout or changed value		
46213	6212	P2P CLIENT RULE	23	timeout value [ms]	RW	UNSIGNED 16 BIT
46217	6216	P2P CLIENT RULE	23	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46237	6236	P2P CLIENT RULE	24	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46238	6237	P2P CLIENT RULE	24	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46239- 46242	6238- 6241	P2P CLIENT RULE	24	remote ip address	RW	4 BYTE
46243	6242	P2P CLIENT RULE	24	remote tcp/ip port	RW	UNSIGNED 16 BIT
46244	6243	P2P CLIENT RULE	24	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46245	6244	P2P CLIENT RULE	24	timeout value [ms]	RW	UNSIGNED 16 BIT
46249	6248	P2P CLIENT RULE	24	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46269	6268	P2P CLIENT RULE	25	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46270	6269	P2P CLIENT RULE	25	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46271- 46274	6270- 6273	P2P CLIENT RULE	25	remote ip address	RW	4 BYTE
46275	6274	P2P CLIENT RULE	25	remote tcp/ip port	RW	UNSIGNED 16 BIT
46276	6275	P2P CLIENT RULE	25	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46277	6276	P2P CLIENT RULE	25	timeout value [ms]	RW	UNSIGNED 16 BIT
46281	6280	P2P CLIENT RULE	25	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46301	6300	P2P CLIENT RULE	26	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46302	6301	P2P CLIENT RULE	26	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46303- 46306	6302- 6305	P2P CLIENT RULE	26	remote ip address	RW	4 BYTE
46307	6306	P2P CLIENT RULE	26	remote tcp/ip port	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
46308	6307	P2P CLIENT RULE	26	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46309	6308	P2P CLIENT RULE	26	timeout value [ms]	RW	UNSIGNED 16 BIT
46313	6312	P2P CLIENT RULE	26	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46333	6332	P2P CLIENT RULE	27	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46334	6333	P2P CLIENT RULE	27	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46335- 46338	6334- 6337	P2P CLIENT RULE	27	remote ip address	RW	4 BYTE
46339	6338	P2P CLIENT RULE	27	remote tcp/ip port	RW	UNSIGNED 16 BIT
46340	6339	P2P CLIENT RULE	27	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46341	6340	P2P CLIENT RULE	27	timeout value [ms]	RW	UNSIGNED 16 BIT
46345	6344	P2P CLIENT RULE	27	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46365	6364	P2P CLIENT RULE	28	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46366	6365	P2P CLIENT RULE	28	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46367- 46370	6366- 6369	P2P CLIENT RULE	28	remote ip address	RW	4 BYTE
46371	6370	P2P CLIENT RULE	28	remote tcp/ip port	RW	UNSIGNED 16 BIT
46372	6371	P2P CLIENT RULE	28	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46373	6372	P2P CLIENT RULE	28	timeout value [ms]	RW	UNSIGNED 16 BIT
46377	6376	P2P CLIENT RULE	28	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46397	6396	P2P CLIENT RULE	29	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46398	6397	P2P CLIENT RULE	29	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46399- 46402	6398- 6401	P2P CLIENT RULE	29	remote ip address	RW	4 BYTE





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
46403	6402	P2P CLIENT RULE	29	remote tcp/ip port	RW	UNSIGNED 16 BIT
46404	6403	P2P CLIENT RULE	29	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46405	6404	P2P CLIENT RULE	29	timeout value [ms]	RW	UNSIGNED 16 BIT
46409	6408	P2P CLIENT RULE	29	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46429	6428	P2P CLIENT RULE	30	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46430	6429	P2P CLIENT RULE	30	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46431- 46434	6430- 6433	P2P CLIENT RULE	30	remote ip address	RW	4 BYTE
46435	6434	P2P CLIENT RULE	30	remote tcp/ip port	RW	UNSIGNED 16 BIT
46436	6435	P2P CLIENT RULE	30	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46437	6436	P2P CLIENT RULE	30	timeout value [ms]	RW	UNSIGNED 16 BIT
46441	6440	P2P CLIENT RULE	30	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46461	6460	P2P CLIENT RULE	31	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46462	6461	P2P CLIENT RULE	31	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
46463- 46466	6462- 6465	P2P CLIENT RULE	31	remote ip address	RW	4 BYTE
46467	6466	P2P CLIENT RULE	31	remote tcp/ip port	RW	UNSIGNED 16 BIT
46468	6467	P2P CLIENT RULE	31	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46469	6468	P2P CLIENT RULE	31	timeout value [ms]	RW	UNSIGNED 16 BIT
46473	6472	P2P CLIENT RULE	32	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
46493	6492	P2P CLIENT RULE	32	0=disabled, else enabled	RW	UNSIGNED 16 BIT
46494	6493	P2P CLIENT RULE	32	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
46495- 46498	6494- 6497	P2P CLIENT RULE	32	remote ip address	RW	4 BYTE
46499	6498	P2P CLIENT RULE	32	remote tcp/ip port	RW	UNSIGNED 16 BIT
46500	6499	P2P CLIENT RULE	32	0=enabled send on timeout, 1=enebaled send on timeout or changed value	RW	UNSIGNED 16 BIT
46501	6500	P2P CLIENT RULE	32	timeout value [ms]	RW	UNSIGNED 16 BIT
46505	6504	P2P CLIENT RULE	32	ack packet 0=disabled, 1=enabled	RW	UNSIGNED 16 BIT
47001	7000	P2P SERVER RULE	1	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47002	7001	P2P SERVER RULE	1	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47003- 47006	7002- 7005	P2P SERVER RULE	1	remote ip address	RW	4 BYTE
47007	7006	P2P SERVER RULE	1	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47017	7016	P2P SERVER RULE	2	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47018	7017	P2P SERVER RULE	2	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47019- 47022	7018- 7021	P2P SERVER RULE	2	remote ip address	RW	4 BYTE
47023	7022	P2P SERVER RULE	2	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47033	7032	P2P SERVER RULE	3	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47034	7033	P2P SERVER RULE	3	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47035- 47038	7034- 7037	P2P SERVER RULE	3	remote ip address	RW	4 BYTE
47039	7038	P2P SERVER RULE	3	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47049	7048	P2P SERVER RULE	4	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47050	7049	P2P SERVER RULE	4	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47051- 47054	7050- 7053	P2P SERVER RULE	4	remote ip address	RW	4 BYTE
47055	7054	P2P SERVER RULE	4	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47065	7064	P2P SERVER RULE	5	0=disabled, else enabled	RW	UNSIGNED 16 BIT





ADDRESS	OFFSET	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
(4x)	(4x)	REGISTER	CHANNEL		00/A	
47066	7065	P2P SERVER RULE	5	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47067- 47070	7066- 7069	P2P SERVER RULE	5	remote ip address	RW	4 BYTE
47071	7070	P2P SERVER RULE	5	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47081	7080	P2P SERVER RULE	6	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47082	7081	P2P SERVER RULE	6	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47083- 47086	7082- 7085	P2P SERVER RULE	6	remote ip address	RW	4 BYTE
47087	7086	P2P SERVER RULE	6	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47097	7096	P2P SERVER RULE	7	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47098	7097	P2P SERVER RULE	7	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47099- 47102	7098- 7101	P2P SERVER RULE	7	remote ip address	RW	4 BYTE
47103	7102	P2P SERVER RULE	7	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47113	7112	P2P SERVER RULE	8	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47114	7113	P2P SERVER RULE	8	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47115- 47118	7114- 7117	P2P SERVER RULE	8	remote ip address	RW	4 BYTE
47119	7118	P2P SERVER RULE	8	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47129	7128	P2P SERVER RULE	9	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47130	7129	P2P SERVER RULE	9	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47131- 47134	7130- 7133	P2P SERVER RULE	9	remote ip address	RW	4 BYTE
47135	7134	P2P SERVER RULE	9	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47145	7144	P2P SERVER RULE	10	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47146	7145	P2P SERVER RULE	10	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47147- 47150	7146- 7149	P2P SERVER RULE	10	remote ip address	RW	4 BYTE
47151	7150	P2P SERVER RULE	10	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT





ADDRESS	OFFSET	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
(4x)	(4x)	REGISTER	CHAININEL	DESCRIPTION	W/K	ITPE
47161	7160	P2P SERVER RULE	11	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47162	7161	P2P SERVER RULE	11	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47163- 47166	7162- 7165	P2P SERVER RULE	11	remote ip address	RW	4 BYTE
47167	7166	P2P SERVER RULE	11	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47177	7176	P2P SERVER RULE	12	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47178	7177	P2P SERVER RULE	12	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47179- 47182	7178- 7181	P2P SERVER RULE	12	remote ip address	RW	4 BYTE
47183	7182	P2P SERVER RULE	12	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47193	7192	P2P SERVER RULE	13	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47194	7193	P2P SERVER RULE	13	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47195- 47198	7194- 7197	P2P SERVER RULE	13	remote ip address	RW	4 BYTE
47199	7198	P2P SERVER RULE	13	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47209	7208	P2P SERVER RULE	14	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47210	7209	P2P SERVER RULE	14	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47211- 47214	7210- 7213	P2P SERVER RULE	14	remote ip address	RW	4 BYTE
47215	7214	P2P SERVER RULE	14	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47225	7224	P2P SERVER RULE	15	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47226	7225	P2P SERVER RULE	15	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47227- 47230	7226- 7229	P2P SERVER RULE	15	remote ip address	RW	4 BYTE
47231	7230	P2P SERVER RULE	15	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47241	7240	P2P SERVER RULE	16	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47242	7241	P2P SERVER RULE	16	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47243- 47246	7232- 45	P2P SERVER RULE	16	remote ip address	RW	4 BYTE





ADDRESS	OFFSET	DECISTED	CHANNEL	DESCRIPTION	W/R	TVDE
(4x)	(4x)	REGISTER	CHANNEL	DESCRIPTION	W/K	TYPE
47247	7246	P2P SERVER RULE	16	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47257	7256	P2P SERVER RULE	17	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47258	7257	P2P SERVER RULE	17	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47259- 47262	7258- 7261	P2P SERVER RULE	17	remote ip address	RW	4 BYTE
47263	7262	P2P SERVER RULE	17	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47273	7272	P2P SERVER RULE	18	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47274	7273	P2P SERVER RULE	18	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47275- 47278	7274- 7277	P2P SERVER RULE	18	remote ip address	RW	4 BYTE
47279	7278	P2P SERVER RULE	18	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47289	7288	P2P SERVER RULE	19	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47290	7289	P2P SERVER RULE	19	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47291- 47294	7290- 7293	P2P SERVER RULE	19	remote ip address	RW	4 BYTE
47295	7294	P2P SERVER RULE	19	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47305	7304	P2P SERVER RULE	20	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47306	7305	P2P SERVER RULE	20	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47307- 47310	7306- 7309	P2P SERVER RULE	20	remote ip address	RW	4 BYTE
47311	7310	P2P SERVER RULE	20	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47321	7320	P2P SERVER RULE	21	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47322	7321	P2P SERVER RULE	21	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47323- 47326	7322- 7325	P2P SERVER RULE	21	remote ip address	RW	4 BYTE
47327	7326	P2P SERVER RULE	21	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47337	7336	P2P SERVER RULE	22	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47338	7337	P2P SERVER RULE	22	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT





ADDRESS	OFFSET	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
(4x)	(4x)	REGISTER	CHAIVIVLL	DESCRIPTION	00/ N	7772
47339- 47342	7338- 7341	P2P SERVER RULE	22	remote ip address	RW	4 BYTE
47343	7342	P2P SERVER RULE	22	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47353	7352	P2P SERVER RULE	23	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47354	7353	P2P SERVER RULE	23	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47355- 47358	7354- 7357	P2P SERVER RULE	23	remote ip address	RW	4 BYTE
47359	7358	P2P SERVER RULE	23	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47369	7368	P2P SERVER RULE	24	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47370	7369	P2P SERVER RULE	24	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47371- 47374	7370- 7373	P2P SERVER RULE	24	remote ip address	RW	4 BYTE
47375	7374	P2P SERVER RULE	24	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47385	7384	P2P SERVER RULE	25	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47386	7385	P2P SERVER RULE	25	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47387- 47390	7386- 7389	P2P SERVER RULE	25	remote ip address	RW	4 BYTE
47391	7390	P2P SERVER RULE	25	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47401	7400	P2P SERVER RULE	26	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47402	7401	P2P SERVER RULE	26	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47403- 47406	7402- 7405	P2P SERVER RULE	26	remote ip address	RW	4 BYTE
47407	7406	P2P SERVER RULE	26	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47417	7416	P2P SERVER RULE	27	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47418	7417	P2P SERVER RULE	27	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47419- 47422	7418- 7421	P2P SERVER RULE	27	remote ip address	RW	4 BYTE
47423	7422	P2P SERVER RULE	27	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47433	7432	P2P SERVER RULE	28	0=disabled, else enabled	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
47434	7433	P2P SERVER RULE	28	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47435- 47438	7434- 7437	P2P SERVER RULE	28	remote ip address	RW	4 BYTE
47439	7438	P2P SERVER RULE	28	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47449	7448	P2P SERVER RULE	29	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47450	7449	P2P SERVER RULE	29	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47451- 47454	7450- 7453	P2P SERVER RULE	29	remote ip address	RW	4 BYTE
47455	7454	P2P SERVER RULE	29	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47465	7464	P2P SERVER RULE	30	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47466	7465	P2P SERVER RULE	30	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47467- 47470	7466- 7469	P2P SERVER RULE	30	remote ip address	RW	4 BYTE
47471	7470	P2P SERVER RULE	30	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47481	7480	P2P SERVER RULE	31	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47482	7481	P2P SERVER RULE	31	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47483- 47486	7482- 7485	P2P SERVER RULE	31	remote ip address	RW	4 BYTE
47487	7486	P2P SERVER RULE	31	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47497	7496	P2P SERVER RULE	32	0=disabled, else enabled	RW	UNSIGNED 16 BIT
47498	7497	P2P SERVER RULE	32	remote channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT
47499- 47502	7498- 7501	P2P SERVER RULE	32	remote ip address	RW	4 BYTE
47503	7502	P2P SERVER RULE	32	local channel value Din1Din32 (031)	RW	UNSIGNED 16 BIT





21.3. R-32DIDO: TABLE OF MODBUS REGISTERS 0x COIL STATUS (FUNCTION CODE 1)

ADDRESS (0x)	ADDRESS (0x) OFFSET	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
1	0	DIGITAL I/O	1	DIGITAL I/O	RW	BIT
2	1	DIGITAL I/O	2	DIGITAL I/O	RW	BIT
3	2	DIGITAL I/O	3	DIGITAL I/O	RW	BIT
4	3	DIGITAL I/O	4	DIGITAL I/O	RW	BIT
5	4	DIGITAL I/O	5	DIGITAL I/O	RW	BIT
6	5	DIGITAL I/O	6	DIGITAL I/O	RW	BIT
7	6	DIGITAL I/O	7	DIGITAL I/O	RW	BIT
8	7	DIGITAL I/O	8	DIGITAL I/O	RW	BIT
9	8	DIGITAL I/O	9	DIGITAL I/O	RW	BIT
10	9	DIGITAL I/O	10	DIGITAL I/O	RW	BIT
11	10	DIGITAL I/O	11	DIGITAL I/O	RW	BIT
12	11	DIGITAL I/O	12	DIGITAL I/O	RW	BIT
13	12	DIGITAL I/O	13	DIGITAL I/O	RW	BIT
14	13	DIGITAL I/O	14	DIGITAL I/O	RW	BIT
15	14	DIGITAL I/O	15	DIGITAL I/O	RW	BIT
16	15	DIGITAL I/O	16	DIGITAL I/O	RW	BIT
17	16	DIGITAL I/O	17	DIGITAL I/O	RW	BIT
18	17	DIGITAL I/O	18	DIGITAL I/O	RW	BIT
19	18	DIGITAL I/O	19	DIGITAL I/O	RW	BIT
20	19	DIGITAL I/O	20	DIGITAL I/O	RW	BIT
21	20	DIGITAL I/O	21	DIGITAL I/O	RW	BIT
22	21	DIGITAL I/O	22	DIGITAL I/O	RW	BIT
23	22	DIGITAL I/O	23	DIGITAL I/O	RW	BIT
24	23	DIGITAL I/O	24	DIGITAL I/O	RW	BIT
25	24	DIGITAL I/O	25	DIGITAL I/O	RW	BIT
26	25	DIGITAL I/O	26	DIGITAL I/O	RW	BIT
27	26	DIGITAL I/O	27	DIGITAL I/O	RW	BIT
28	27	DIGITAL I/O	28	DIGITAL I/O	RW	BIT
29	28	DIGITAL I/O	29	DIGITAL I/O	RW	BIT
30	29	DIGITAL I/O	30	DIGITAL I/O	RW	BIT
31	30	DIGITAL I/O	31	DIGITAL I/O	RW	BIT
32	31	DIGITAL I/O	32	DIGITAL I/O	RW	BIT







21.4. R-32DIDO: TABLE OF MODBUS REGISTERS 1x INPUT STATUS (FUNCTION CODE 2)

ADDRESS (1x)	ADDRESS (0x) OFFSET	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
10001	0	DIGITAL I/O	1	DIGITAL I/O	RW	BIT
10002	1	DIGITAL I/O	2	DIGITAL I/O	RW	BIT
10003	2	DIGITAL I/O	3	DIGITAL I/O	RW	BIT
10004	3	DIGITAL I/O	4	DIGITAL I/O	RW	BIT
10005	4	DIGITAL I/O	5	DIGITAL I/O	RW	BIT
10006	5	DIGITAL I/O	6	DIGITAL I/O	RW	BIT
10007	6	DIGITAL I/O	7	DIGITAL I/O	RW	BIT
10008	7	DIGITAL I/O	8	DIGITAL I/O	RW	BIT
10009	8	DIGITAL I/O	9	DIGITAL I/O	RW	BIT
10010	9	DIGITAL I/O	10	DIGITAL I/O	RW	BIT
10011	10	DIGITAL I/O	11	DIGITAL I/O	RW	BIT
10012	11	DIGITAL I/O	12	DIGITAL I/O	RW	BIT
10013	12	DIGITAL I/O	13	DIGITAL I/O	RW	BIT
10014	13	DIGITAL I/O	14	DIGITAL I/O	RW	BIT
10015	14	DIGITAL I/O	15	DIGITAL I/O	RW	BIT
10016	15	DIGITAL I/O	16	DIGITAL I/O	RW	BIT
10017	16	DIGITAL I/O	17	DIGITAL I/O	RW	BIT
10018	17	DIGITAL I/O	18	DIGITAL I/O	RW	BIT
10019	18	DIGITAL I/O	19	DIGITAL I/O	RW	BIT
10020	19	DIGITAL I/O	20	DIGITAL I/O	RW	BIT
10021	20	DIGITAL I/O	21	DIGITAL I/O	RW	BIT
10022	21	DIGITAL I/O	22	DIGITAL I/O	RW	BIT
10023	22	DIGITAL I/O	23	DIGITAL I/O	RW	BIT
10024	23	DIGITAL I/O	24	DIGITAL I/O	RW	BIT
10025	24	DIGITAL I/O	25	DIGITAL I/O	RW	BIT
10026	25	DIGITAL I/O	26	DIGITAL I/O	RW	BIT
10027	26	DIGITAL I/O	27	DIGITAL I/O	RW	BIT
10028	27	DIGITAL I/O	28	DIGITAL I/O	RW	BIT
10029	28	DIGITAL I/O	29	DIGITAL I/O	RW	BIT
10030	29	DIGITAL I/O	30	DIGITAL I/O	RW	BIT
10031	30	DIGITAL I/O	31	DIGITAL I/O	RW	BIT
10032	31	DIGITAL I/O	32	DIGITAL I/O	RW	BIT



22. MODBUS REGISTER TABLE FOR THE R-16DI-8DO PRODUCT

22.1. R-16DI-8DO: MODBUS 4X HOLDING REGISTERS TABLE (FUNCTION CODE 3)

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	TYPE
40001	0	MACHINE-ID	-	DEVICE IDENTIFICATION	RO	UNSIGNE D 16
40002	1	FIRMWARE REVISION	-	FIRMWARE REVISION	RO	UNSIGNE D 16

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40017	16	COMMAND	-	COMMAND REGISTER	RW	UNSIGNE D 16
40018	17	RESERVED	-	RESERVED	RO	UNSIGNE D 16
40019	18	RESERVED	-	RESERVED	RO	UNSIGNE D 16
40020	19	RESERVED	-	RESERVED	RO	UNSIGNE D 16
40021	20	DIGITAL INPUT [161]	[116]	DIGITAL INPUTS [16 1] THE LEAST SIGNIFICANT BIT IS RELATIVE TO I01 EXAMPLE: 5 decimal = 0000 0000 0000 0101 binary => I01 = High, I02 = LOW, I03 = HIGH, I04 I16 = LOW	RO	UNSIGNE D 16
40022	21	RESERVED	-	RESERVED	RO	UNSIGNE D 16
40023	22	DIGITAL OUT [81]	[81]	DIGITAL OUTPUTS [8 1] THE LEAST SIGNIFICANT BIT IS RELATIVE TO D01 EXAMPLE:	RW	UNSIGNE D 16

R SERIES

5 decimal =
0000 0000
0000 0101
binary =>
D01=High,
D02=LOW,
D03=HIGH,
D04D08=LO
W

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
40101	100	RESET_COUNT ER [116]	161	RESET A BIT OF THE i-TH COUNTER THE LEAST SIGNIFICANT BIT RELATES TO COUNTER 1 EXAMPLE: 5 decimal = 0000 0000 0000 0101 binary => Resets the value of counters 1 and 3	RW	UNSIGNED 16
40102	101	RESERVED	-		RW	UNSIGNED 16
40103	102	COUNTER	1	LSW	RW	UNSIGNED
40104	103			MSW	RW	32
40105	104	COUNTER	2	LSW	RW	UNSIGNED
40106	105			MSW	RW	32
40107	106	COUNTER	3	LSW	RW	UNSIGNED
40108	107			MSW	RW	32
40109	108	COUNTER	4	LSW	RW	UNSIGNED
40110	109			MSW	RW	32
40111	110	COUNTER	5	LSW	RW	UNSIGNED
40112	111			MSW	RW	32
40113	112	COUNTER	6	LSW	RW	UNSIGNED
40114	113			MSW	RW	32
40115	114	COUNTER	7	LSW	RW	UNSIGNED
40116	115			MSW	RW	32
40117	116	COUNTER	8	LSW	RW	UNSIGNED
40118	117			MSW	RW	32
40119	118	COUNTER	9	LSW	RW	UNSIGNED
40120	119			MSW	RW	32
40121	120	COUNTER	10	LSW	RW	UNSIGNED
40122	121			MSW	RW	32
40123	122	COUNTER	11	LSW	RW	UNSIGNED
40124	123			MSW	RW	32





40125	124	COUNTER	12	LSW	RW	UNSIGNED
40126	125			MSW	RW	32
40127	126	COUNTER	13	LSW	RW	UNSIGNED
40128	127			MSW	RW	32
40129	128	COUNTER	14	LSW	RW	UNSIGNED
40130	129			MSW	RW	32
40131	130	COUNTER	15	LSW	RW	UNSIGNED
40132	131			MSW	RW	32
40133	132	COUNTER	16	LSW	RW	UNSIGNED
40134	133			MSW	RW	32

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	TYPE
40201	200	INT MEASURE TLOW	1	Integer measure of Tlow in [ms*10] LSW	RO	UNSIGNED 32
40202	201		2	Integer measure of Tlow in [ms*10] MSW	RO	
40203	202]_	Integer measure of Tlow in [ms*10] LSW	RO	UNSIGNED 32	
40204	203			Integer measure of Tlow in [ms*10] MSW	RO	
40205	204	INT MEASURE TLOW	3	Integer measure of Tlow in [ms*10] LSW	RO	UNSIGNED 32
40206	205			Integer measure of Tlow in [ms*10] MSW	RO	
40207	206	INT MEASURE 4 TLOW		Integer measure of Tlow in [ms*10] LSW	RO	UNSIGNED 32
40208	207			Integer measure of Tlow in [ms*10] MSW	RO	
40209	208	INT MEASURE TLOW	5	Integer measure of	RO	UNSIGNED 32



				1		
				Tlow in [ms*10] LSW		
40210	209			Integer measure of Tlow in [ms*10] MSW	RO	
40211	210	INT MEASURE TLOW	6	Integer measure of Tlow in [ms*10] LSW	RO	UNSIGNED 32
40212	211	INT MEASURE		Integer measure of Tlow in [ms*10] MSW	RO	
40213	212	INT MEASURE TLOW	7	Integer measure of Tlow in [ms*10] LSW	RO	UNSIGNED 32
40214	213			Integer measure of Tlow in [ms*10] MSW	RO	
40215	214	INT MEASURE TLOW	8	Integer measure of Tlow in [ms*10] LSW	RO	UNSIGNED 32
40216	215			Integer measure of Tlow in [ms*10] MSW	RO	
40217	216	INT MEASURE TLOW	9	Integer measure of Tlow in [ms*10] LSW	RO	UNSIGNED 32
40218	217			Integer measure of Tlow in [ms*10] MSW	RO	
40219	218	INT MEASURE TLOW	10	Integer measure of Tlow in [ms*10] LSW	RO	UNSIGNED 32
40220	219			Integer measure of Tlow in [ms*10] MSW	RO	
40221	220	INT MEASURE TLOW	11	Integer measure of	RO	UNSIGNED 32





		I	I			
				Tlow in		
40000	224			[ms*10] LSW	0.0	
40222	221			Integer measure of	RO	
				Tlow in		
				[ms*10] MSW		
40223	222	INT MEASURE	12	Integer	RO	UNSIGNED
40223	222	TLOW	12	measure of	1.0	32
		12011		Tlow in		32
				[ms*10] LSW		
40224	223			Integer	RO	
			measure of			
				Tlow in		
				[ms*10] MSW		
40225	224	INT MEASURE	13	Integer	RO	UNSIGNED
		TLOW		measure of		32
				Tlow in		
				[ms*10] LSW		
40226	225			Integer	RO	
				measure of		
				Tlow in [ms*10] MSW		
40227	226	INT MEASURE	14	Integer	RO	UNSIGNED
40227	220	TLOW		measure of	1.0	32
		12011		Tlow in		32
				[ms*10] LSW		
40228	227			Integer	RO	
				measure of		
				Tlow in		
				[ms*10] MSW		
40229	228	INT MEASURE	15	Integer	RO	UNSIGNED
		TLOW		measure of		32
				Tlow in		
40230	229			[ms*10] LSW Integer	RO	
40230	223			measure of	NO	
				Tlow in		
				[ms*10] MSW		
40231	230	INT MEASURE	16	Integer	RO	UNSIGNED
		TLOW		measure of		32
				Tlow in		
				[ms*10] LSW		
40232	231			Integer	RO	
				measure of		
				Tlow in		
				[ms*10] MSW		





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTIO N	W/ R	ТҮРЕ
40233	232	INT MEASURE THIGH	1	Integer measure of Thigh in [ms*10] LSW	RO	UNSIGNE D 32
40234	233			Integer measure of Thigh in [ms*10] MSW	RO	
40235	234	INT MEASURE THIGH	2	Integer measure of Thigh in [ms*10] LSW	RO	UNSIGNE D 32
40236	235			Integer measure of Thigh in [ms*10] MSW	RO	
40237	236	INT MEASURE THIGH	3	Integer measure of Thigh in [ms*10] LSW	RO	UNSIGNE D 32
40238	237			Integer measure of Thigh in [ms*10] MSW	RO	
40239	238	INT MEASURE THIGH	4	Integer measure of Thigh in [ms*10] LSW	RO	UNSIGNE D 32
40240	239			Integer measure of Thigh in [ms*10] MSW	RO	
40241	240	INT MEASURE THIGH	5	Integer measure of Thigh in [ms*10] LSW	RO	UNSIGNE D 32
40242	241			Integer measure of Thigh in [ms*10] MSW	RO	
40243	242	INT MEASURE THIGH	6	Integer measure of	RO	UNSIGNE D 32



				Thigh in		
40244	243			[ms*10] LSW	RO	
40244	245			Integer measure of	KU	
				Thigh in		
				[ms*10]		
				MSW		
40245	244	INT MEASURE	7	Integer	RO	UNSIGNE
		THIGH		measure of Thigh in		D 32
				[ms*10] LSW		
40246	245			Integer	RO	
				measure of		
				Thigh in		
				[ms*10]		
40247	246	INT MEASURE	8	MSW Integer	RO	UNSIGNE
.0247	210	THIGH		measure of		D 32
			Thigh in			
				[ms*10] LSW		
40248	247			Integer	RO	
				measure of Thigh in		
				[ms*10]		
				MSW		
40249	248	INT MEASURE	9	Integer	RO	UNSIGNE
		THIGH		measure of		D 32
				Thigh in [ms*10] LSW		
40250	249			Integer	RO	
1000				measure of		
				Thigh in		
				[ms*10]		
40251	250	INT MEASURE	10	MSW Integer	RO	UNSIGNE
40251	250	THIGH	10	measure of	KU	D 32
				Thigh in		5 52
				[ms*10] LSW		
40252	251			Integer	RO	
				measure of		
				Thigh in [ms*10]		
				MSW		
40253	252	INT MEASURE	11	Integer	RO	UNSIGNE
	THIGH	THIGH		measure of		D 32
			Thigh in			
40254	253			[ms*10] LSW Integer	RO	
40254	255			measure of	κU	
	<u> </u>			THEUSUIC OF		





				Thigh in [ms*10] MSW		
40255	254	INT MEASURE THIGH	12	Integer measure of Thigh in [ms*10] LSW	RO	UNSIGNE D 32
40256	255	INT MEASURE		Integer measure of Thigh in [ms*10] MSW	RO	
40257	256	INT MEASURE THIGH	13	Integer measure of Thigh in [ms*10] LSW	RO	UNSIGNE D 32
40258	257			Integer measure of Thigh in [ms*10] MSW	RO	
40259	258	INT MEASURE THIGH	14	Integer measure of Thigh in [ms*10] LSW	RO	UNSIGNE D 32
40260	259			Integer measure of Thigh in [ms*10] MSW	RO	
40261	260	INT MEASURE THIGH	15	Integer measure of Thigh in [ms*10] LSW	RO	UNSIGNE D 32
40262	261			Integer measure of Thigh in [ms*10] MSW	RO	
40263	262	INT MEASURE THIGH	16	Integer measure of Thigh in [ms*10] LSW	RO	UNSIGNE D 32
40264	263			Integer measure of Thigh in [ms*10] MSW	RO	



ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTIO N	W/ R	TYPE
40265	264	INT MEASURE PERIOD	1	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40266	265			Integer Period Measure [ms*10] MSW	RO	
40267	266	INT MEASURE PERIOD INT MEASURE	2	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40268	267			Integer Period Measure [ms*10] MSW	RO	
40269	268	INT MEASURE PERIOD	3	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40270	269			Integer Period Measure [ms*10] MSW	RO	
40271	270	INT MEASURE PERIOD	4	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40272	271			Integer Period Measure [ms*10] MSW	RO	
40273	272	INT MEASURE PERIOD	5	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40274	273			Integer Period Measure [ms*10] MSW	RO	







40275	274	INT MEASURE PERIOD	6	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40276	275			Integer Period Measure [ms*10] MSW	RO	
40277	276	INT MEASURE PERIOD	7	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40278	277			Integer Period Measure [ms*10] MSW	RO	
40279	278	INT MEASURE PERIOD	RE 8	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40280	279			Integer Period Measure [ms*10] MSW	RO	
40281	280	INT MEASURE PERIOD	9	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40282	281			Integer Period Measure [ms*10] MSW	RO	
40283	282	INT MEASURE PERIOD	10	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40284	283			Integer Period Measure [ms*10] MSW	RO	
40285	284	INT MEASURE PERIOD	11	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32



			ı			
40286	285			Integer Period Measure [ms*10] MSW	RO	
40287	286	INT MEASURE PERIOD	12	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40288	287			Integer Period Measure [ms*10] MSW	RO	
40289	288	INT MEASURE PERIOD	13	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40290	289			Integer Period Measure [ms*10] MSW	RO	
40291	290	INT MEASURE PERIOD	14	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40292	291			Integer Period Measure [ms*10] MSW	RO	
40293	292	INT MEASURE PERIOD	15	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40294	293			Integer Period Measure [ms*10] MSW	RO	
40295	294	INT MEASURE PERIOD	16	Integer Period Measure [ms*10] LSW	RO	UNSIGNE D 32
40296	295			Integer Period Measure	RO	



R SERIES



	[ms*10]	
	MSW	

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40297	296	INT MEASURE FREQ	1	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40298	297	INT MEASURE FREQ	2	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40299	298	INT MEASURE FREQ	3	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40300	299	INT MEASURE FREQ	4	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40301	300	INT MEASURE FREQ	5	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40302	301	INT MEASURE FREQ	6	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40303	302	INT MEASURE FREQ	7	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40304	303	INT MEASURE FREQ	8	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40305	304	INT MEASURE FREQ	9	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40306	305	INT MEASURE FREQ	10	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40307	306	INT MEASURE FREQ	11	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40308	307	INT MEASURE FREQ	12	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16



40309	308	INT MEASURE FREQ	13	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40310	309	INT MEASURE FREQ	14	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40311	310	INT MEASURE FREQ	15	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16
40312	311	INT MEASURE FREQ	16	Integer measure of the frequency in [Hz]	RO	UNSIGNED 16

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40401	400	FLOAT TLOW	1	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40402	401			Floating point measure of Tlow in [ms] (MSW)	RO	
40403	402	FLOAT TLOW	2	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40404	403			Floating point measure of Tlow in [ms] (MSW)	RO	
40405	404	FLOAT TLOW	3	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40406	405			Floating point measure of Tlow in [ms] (MSW)	RO	
40407	406	FLOAT TLOW	4	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40408	407			Floating point measure of Tlow in [ms] (MSW)	RO	
40409	408	FLOAT TLOW	5	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40410	409			Floating point measure of Tlow in [ms] (MSW)	RO	
40411	410	FLOAT TLOW	6	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32





40412	411			Floating point measure of Tlow in [ms] (MSW)	RO	
40413	412	FLOAT TLOW	7	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40414	413			Floating point measure of Tlow in [ms] (MSW)	RO	
40415	414	FLOAT TLOW	8	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40416	415			Floating point measure of Tlow in [ms] (MSW)	RO	
40417	416	FLOAT TLOW	9	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40418	417	FLOAT TLOW		Floating point measure of Tlow in [ms] (MSW)	RO	
40419	418	FLOAT TLOW	10	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40420	419			Floating point measure of Tlow in [ms] (MSW)	RO	
40421	420	FLOAT TLOW	11	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40422	421			Floating point measure of Tlow in [ms] (MSW)	RO	
40423	422	FLOAT TLOW	12	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40424	423			Floating point measure of Tlow in [ms] (MSW)	RO	
40425	424	FLOAT TLOW	13	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40426	425			Floating point measure of Tlow in [ms] (MSW)	RO	
40427	426	FLOAT TLOW	14	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32





40428	427			Floating point measure of Tlow in [ms] (MSW)	RO	
40429	428	FLOAT TLOW	15	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40430	429			Floating point measure of Tlow in [ms] (MSW)	RO	
40431	430	FLOAT TLOW	16	Floating point measure of Tlow in [ms] (LSW)	RO	FLOAT 32
40432	431			Floating point measure of Tlow in [ms] (MSW)	RO	

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40465	464	FLOAT THIGH	1	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40466	465			Floating point measure of Thigh in [ms] (MSW)	RO	
40467	466	FLOAT THIGH	2	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40468	467			Floating point measure of Thigh in [ms] (MSW)	RO	
40469	468	FLOAT THIGH	3	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40470	469			Floating point measure of Thigh in [ms] (MSW)	RO	
40471	470	FLOAT THIGH	4	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40472	471			Floating point measure of Thigh in [ms] (MSW)	RO	
40473	472	FLOAT THIGH	5	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40474	473			Floating point measure of Thigh in [ms] (MSW)	RO	



(CE	NIC	∩ N [®]
SE	NC	ĿΑ

40475	474	FLOAT THIGH	6	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40476	475			Floating point measure of Thigh in [ms] (MSW)	RO	
40477	476	FLOAT THIGH	7	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40478	477			Floating point measure of Thigh in [ms] (MSW)	RO	
40479	478	FLOAT THIGH	8	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40480	479			Floating point measure of Thigh in [ms] (MSW)	RO	
40481	480	FLOAT THIGH	9	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40482	481			Floating point measure of Thigh in [ms] (MSW)	RO	
40483	482	FLOAT THIGH	10	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40484	483			Floating point measure of Thigh in [ms] (MSW)	RO	
40485	484	FLOAT THIGH	11	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40486	485			Floating point measure of Thigh in [ms] (MSW)	RO	
40487	486	FLOAT THIGH	12	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40488	487			Floating point measure of Thigh in [ms] (MSW)	RO	
40489	488	FLOAT THIGH	13	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40490	489			Floating point measure of Thigh in [ms] (MSW)	RO	



40491	490	FLOAT THIGH	14	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40492	491			Floating point measure of Thigh in [ms] (MSW)	RO	
40493	492	FLOAT THIGH	15	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40494	493			Floating point measure of Thigh in [ms] (MSW)	RO	
40495	494	FLOAT THIGH	16	Floating point measure of Thigh in [ms] (LSW)	RO	FLOAT 32
40496	495			Floating point measure of Thigh in [ms] (MSW)	RO	

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40529	528	FLOAT PERIOD	1	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40530	529			Floating point measure of the Period in [ms] (MSW)	RO	
40531	530	FLOAT PERIOD	2	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40532	531			Floating point measure of the Period in [ms] (MSW)	RO	
40533	532	FLOAT PERIOD	3	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40534	533			Floating point measure of the Period in [ms] (MSW)	RO	
40535	534	FLOAT PERIOD	4	Floating point measure of the	RO	FLOAT 32



				Period in [ms] (LSW)		
40536	535			Floating point measure of the Period in [ms] (MSW)	RO	
40537	536	FLOAT PERIOD	5	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40538	537			Floating point measure of the Period in [ms] (MSW)	RO	
40539	538	FLOAT PERIOD	6	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40540	539			Floating point measure of the Period in [ms] (MSW)	RO	
40541	540	FLOAT PERIOD	7	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40542	541			Floating point measure of the Period in [ms] (MSW)	RO	
40543	542	FLOAT PERIOD	8	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40544	543			Floating point measure of the Period in [ms] (MSW)	RO	
40545	544	FLOAT PERIOD	9	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40546	545			Floating point measure of the Period in [ms] (MSW)	RO	
40547	546	FLOAT PERIOD	10	Floating point measure of the	RO	FLOAT 32

				Period in [ms] (LSW)		
40548	547			Floating point measure of the Period in [ms] (MSW)	RO	
40549	548	FLOAT PERIOD	11	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40550	549			Floating point measure of the Period in [ms] (MSW)	RO	
40551	550	FLOAT PERIOD	12	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40552	551			Floating point measure of the Period in [ms] (MSW)	RO	
40553	552	FLOAT PERIOD	13	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40554	553			Floating point measure of the Period in [ms] (MSW)	RO	
40555	554	FLOAT PERIOD	14	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40556	555			Floating point measure of the Period in [ms] (MSW)	RO	
40557	556	FLOAT PERIOD	15	Floating point measure of the Period in [ms] (LSW)	RO	FLOAT 32
40558	557			Floating point measure of the Period in [ms] (MSW)	RO	
40559	558	FLOAT PERIOD	16	Floating point measure of the	RO	FLOAT 32





		Period in [ms] (LSW)		
40560	559	Floating point measure of the Period in [ms] (MSW)	RO	

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNE L	DESCRIPTIO N	W/ R	TYPE
40593	592	FLOAT FREQUENCY	1	Floating point measure of the Frequency in [Hz] (LSW)	RO	FLOAT 32
40594	593			Floating point measure of the Frequency in [Hz] (MSW)	RO	
40595	594	FLOAT FREQUENCY	2	Floating point measure of the Frequency in [Hz] (LSW)	RO	FLOAT 32
40596	595			Floating point measure of the Frequency in [Hz] (MSW)	RO	
40597	596	FLOAT FREQUENCY	3	Floating point measure of the Frequency in [Hz] (LSW)	RO	FLOAT 32
40598	597			Floating point measure of the Frequency in [Hz] (MSW)	RO	
40599	598	FLOAT FREQUENCY	4	Floating point	RO	FLOAT 32

				measure of the		
				Frequency in		
				[Hz] (LSW)		
40600	599			Floating point	RO	
				measure of		
				the		
				Frequency in [Hz] (MSW)		
40601	600	FLOAT	5	Floating · ·	RO	FLOAT
		FREQUENCY		point measure of		32
				the		
				Frequency in		
40602	601			[Hz] (LSW)	DO.	
40002	601			Floating point	RO	
				measure of		
				the .		
				Frequency in [Hz] (MSW)		
40603	602	FLOAT	6	Floating	RO	FLOAT
		FREQUENCY		point		FLOAT 32
				measure of the		
				Frequency in		
				[Hz] (LSW)		
40604	603			Floating	RO	
				point measure of		
				the		
				Frequency in		
40605	604	FLOAT	7	[Hz] (MSW) Floating	RO	FLOAT
		FREQUENCY	•	point		32
				measure of		
				the Frequency in		
				[Hz] (LSW)		
40606	605			Floating	RO	
				point measure of		
				measure of the		
				Frequency in		
4000-	665	51.6.1		[Hz] (MSW)		FI 6 : =
40607	606	FLOAT FREQUENCY	8	Floating point	RO	FLOAT 32
		THEQUEINCT		measure of		32



				the Frequency in [Hz] (LSW)		
40608	607			Floating point measure of the Frequency in [Hz] (MSW)	RO	
40609	608	FLOAT	9	Floating point measure of the Frequency in [Hz] (LSW)	RO	FLOAT 32
40610	609			Floating point measure of the Frequency in [Hz] (MSW)	RO	
40611	610	FLOAT FREQUENCY	10	Floating point measure of the Frequency in [Hz] (LSW)	RO	FLOAT 32
40612	611			Floating point measure of the Frequency in [Hz] (MSW)	RO	
40613	612	FLOAT FREQUENCY	11	Floating point measure of the Frequency in [Hz] (LSW)	RO	FLOAT 32
40614	613			Floating point measure of the Frequency in [Hz] (MSW)	RO	
40615	614	FLOAT FREQUENCY	12	Floating point measure of the	RO	FLOAT 32





				Frequency in [Hz] (LSW)		
40616	615			Floating point measure of the Frequency in [Hz] (MSW)	RO	
40617	616	FLOAT	13	Floating point measure of the Frequency in [Hz] (LSW)	RO	FLOAT 32
40618	617			Floating point measure of the Frequency in [Hz] (MSW)	RO	
40619	618	FLOAT FREQUENCY	14	Floating point measure of the Frequency in [Hz] (LSW)	RO	FLOAT 32
40620	619			Floating point measure of the Frequency in [Hz] (MSW)	RO	
40621	620	FLOAT FREQUENCY	15	Floating point measure of the Frequency in [Hz] (LSW)	RO	FLOAT 32
40622	621			Floating point measure of the Frequency in [Hz] (MSW)	RO	
40623	622	FLOAT FREQUENCY	16	Floating point measure of the	RO	FLOAT 32







		Frequency in [Hz] (LSW)	
40624	623	Floating point measure of the Frequency in [Hz] (MSW)	RO



22.2. R-16DI-8DO: CONSECUTIVE REGISTERS MODBUS 4x COPY (WITH INTEGER MEASURE REGISTERS)

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	TYPE
48001	8000	DIGITAL INPUT [161]	[116]	DIGITAL INPUTS [16 1] THE LEAST SIGNIFICANT BIT IS RELATIVE TO IO1 EXAMPLE: 5 decimal = 0000 0000 0000 0101 binary => IO1 = High, IO2 = LOW, IO3 = HIGH, IO4 I16 = LOW	RO	UNSIGNED 16
48002	8001	DIGITAL OUT [81]	[81]	DIGITAL OUTPUTS [8 1] THE LEAST SIGNIFICANT BIT IS RELATIVE TO D01 EXAMPLE: 5 decimal = 0000 0000 0000 0101 binary => D01=High, D02=LOW, D03=HIGH, D04D08=LO W	RW	UNSIGNED 16
48003 48004	8002 8003	COUNTER	1	LSW	RW RW	UNSIGNED 32
48004	8003	COUNTER	2	MSW LSW	RW	UNSIGNED
48006	8005	COOMILIN	_	MSW	RW	32
48007	8006	COUNTER	3	LSW	RW	UNSIGNED
48008	8007			MSW	RW	32
48009	8008	COUNTER	4	LSW	RW	UNSIGNED
48010	8009			MSW	RW	32
48011	8010	COUNTER	5	LSW	RW	





48012	8011			MSW	RW	UNSIGNED 32
48013	8012	COUNTER	6	LSW	RW	UNSIGNED
48014	8013			MSW	RW	32
48015	8014	COUNTER	7	LSW	RW	UNSIGNED
48016	8015			MSW	RW	32
48017	8016	COUNTER	8	LSW	RW	UNSIGNED
48018	8017			MSW	RW	32
48019	8018	COUNTER	9	LSW	RW	UNSIGNED
48020	8019			MSW	RW	32
48021	8020	COUNTER	10	LSW	RW	UNSIGNED
48022	8021			MSW	RW	32
48023	8022	COUNTER	11	LSW	RW	UNSIGNED
48024	8023			MSW	RW	32
48025	8024	COUNTER	COUNTER 12	LSW	RW	UNSIGNED
48026	8025			MSW	RW	32
48027	8026	COUNTER	13	LSW	RW	UNSIGNED
48028	8027			MSW	RW	32
48029	8028	8028 COUNTER 14 8029	14	LSW	RW	UNSIGNED
48030	8029			MSW	RW	32
48031	8030	COUNTER	15	LSW	RW	UNSIGNED
48032	8031			MSW	RW	32
48033	8032	COUNTER	16	LSW	RW	UNSIGNED
48034	8033			MSW	RW	32
48035	8034	INT MEASURE TLOW	1	Tlow Integer measure [x 50us] LSW	RO	UNSIGNED 32
48036	8035			Tlow Integer measure [x 50us] MSW	RO	
48037	8036	INT MEASURE TLOW	2	Tlow Integer measure [x 50us] LSW	RO	UNSIGNED 32
48038	8037			Tlow Integer measure [ms] MSW	RO	
48039	8038	INT MEASURE TLOW	3	Tlow Integer measure [x 50us] LSW	RO	UNSIGNED 32
48040	8039			Tlow Integer measure [x 50us] MSW	RO	
48041	8040	INT MEASURE TLOW	4	Tlow Integer measure [ms] LSW	RO	UNSIGNED 32





48042	8041			Tlow Integer measure	RO	
48043	8042	INT MEASURE TLOW	5	[x 50us] MSW Tlow Integer measure [x 50us] LSW	RO	UNSIGNED 32
48044	8043			Tlow Integer measure [x 50us] MSW	RO	
48045	8044	INT MEASURE TLOW	6	Tlow Integer measure [x 50us] LSW	RO	UNSIGNED 32
48046	8045			Tlow Integer measure [ms] MSW	RO	
48047	8046	INT MEASURE TLOW	7	Tlow Integer measure [x 50us] LSW	RO	UNSIGNED 32
48048	8047			Tlow Integer measure [x 50us] MSW	RO	
48049	8048	INT MEASURE TLOW	8	Tlow Integer measure [x 50us] LSW	RO	UNSIGNED 32
48050	8049			Tlow Integer measure [x 50us] MSW	RO	
48051	8050	INT MEASURE TLOW	9	Tlow Integer measure [x 50us] LSW	RO	UNSIGNED 32
48052	8051			Tlow Integer measure [x 50us] MSW	RO	
48053	8052	INT MEASURE TLOW	10	Tlow Integer measure [x 50us] LSW	RO	UNSIGNED 32
48054	8053			Tlow Integer measure [x 50us] MSW	RO	
48055	8054	INT MEASURE TLOW	11	Tlow Integer measure [x 50us] LSW	RO	UNSIGNED 32
48056	8055			Tlow Integer measure [x 50us] MSW	RO	
48057	8056	INT MEASURE TLOW	12	Tlow Integer measure [ms] LSW	RO	UNSIGNED 32





40050	2057			Tles 1 : 1	D					
48058	8057			Tlow Integer	RO					
				measure [x 50us] MSW						
48059	8058	INT	13	Tlow Integer	RO	UNSIGNED				
48033	0030	MEASURE	15	measure	NO	32				
		TLOW		[x 50us] LSW		32				
48060	8059			Tlow Integer	RO					
				measure						
				[x 50us] MSW						
48061	8060	INT	14	Tlow Integer	RO	UNSIGNED				
		MEASURE		measure		32				
		TLOW		[x 50us] LSW						
48062	8061			Tlow Integer	RO					
				measure [ms]						
48063	8062	INT	15	MSW Tlow Integer	RO	UNSIGNED				
46005	0002	MEASURE	15	Tlow Integer measure	KU	32				
		TLOW		[x 50us] LSW		J2				
48064	8063			Tlow Integer	RO					
				measure						
				[x 50us] MSW						
48065	8064	INT	16	Tlow Integer	RO	UNSIGNED				
		MEASURE TLOW			measure		32			
				[x 50us] LSW						
48066	8065			Tlow Integer	RO					
				measure [x 50us] MSW						
48067	8066	INT	1	Thigh Integer	RO	UNSIGNED				
40007	0000	MEASURE	_	measure	1.0	32				
		THIGH		[x 50us] LSW						
48068	8067			Thigh Integer	RO					
				measure [ms]						
				MSW						
48069	8068	INT	2	Thigh Integer	RO	UNSIGNED				
		MEASURE		measure		32				
40070	9060	THIGH		[x 50us] LSW	DO.					
48070	8069			Thigh Integer measure	RO					
				[x 50us] MSW						
48071	8070	INT	3	Thigh Integer	RO	UNSIGNED				
	33.3	MEASURE		measure		32				
		THIGH		[x 50us] LSW		32				
48072	8071			Thigh Integer	RO					
									measure	
				[x 50us] MSW						
48073	8072	INT	4	Thigh Integer	RO	UNSIGNED				
		MEASURE		measure		32				
		THIGH		[x 50us] LSW						





4007	2072			T L. 1. 1. 1.	D C	
48074	8073			Thigh Integer measure	RO	
				[x 50us] MSW		
48075	8074	INT	5	Thigh Integer	RO	UNSIGNED
		MEASURE		measure		32
48076	8075	THIGH		[x 50us] LSW	DO.	
46076	8075			Thigh Integer measure	RO	
				[x 50us] MSW		
48077	8076	INT	6	Thigh Integer	RO	UNSIGNED
		MEASURE		measure		32
48078	8077	THIGH		[x 50us] LSW	RO	
46076	8077			Thigh Integer measure [ms]	KU	
				MSW		
48079	8078	INT	7	Thigh Integer	RO	UNSIGNED
		MEASURE		measure		32
48080	8079	THIGH		[x 50us] LSW Thigh Integer	RO	
48080	8079			measure	NO	
				[x 50us] MSW		
48081	8080	INT	8	Thigh Integer	RO	UNSIGNED
		MEASURE		measure		32
48082	8081	THIGH		[x 50us] LSW Thigh Integer	RO	
40002	0001			measure	1.0	
				[x 50us] MSW		
48083	8082	INT	9	Thigh Integer	RO	UNSIGNED
		MEASURE THIGH		measure [x 50us] LSW		32
48084	8083	IIIIGII		Thigh Integer	RO	
				measure		
				[x 50us] MSW		
48085	8084	INT	10	Thigh Integer	RO	UNSIGNED
		MEASURE THIGH		measure [x 50us] LSW		32
48086	8085			Thigh Integer	RO	
				measure		
				[x 50us] MSW		
48087	8086	INT MEASURE	11	Thigh Integer	RO	UNSIGNED
		THIGH		measure [x 50us] LSW		32
48088	8087	IIIIGII		Thigh Integer	RO	
				measure		
40000	0000		4.5	[x 50us] MSW	D 0	
48089	8088	INT MEASURE	12	Thigh Integer measure	RO	UNSIGNED 32
		THIGH		[x 50us] LSW		52





		I	ı			
48090	8089			Thigh Integer measure [x 50us] MSW	RO	
48091	8090	INT MEASURE THIGH	13	Thigh Integer measure [ms] LSW	RO	UNSIGNED 32
48092	8091			Thigh Integer measure [x 50us] MSW	RO	
48093	8092	INT 14 MEASURE THIGH	14	Thigh Integer measure [x 50us] LSW	RO	UNSIGNED 32
48094	8093			Thigh Integer measure [ms] MSW	RO	
48095	8094	INT MEASURE THIGH	15 E	Thigh Integer measure [x 50us] LSW	RO	UNSIGNED 32
48096	8095			Thigh Integer measure [x 50us] MSW	RO	
48097	8096	INT MEASURE THIGH	16	Thigh Integer measure [x 50us] LSW	RO	UNSIGNED 32
48098	8097			Thigh Integer measure [x 50us] MSW	RO	
48099	8098	INT MEASURE PERIOD	1	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32
48100	8099			Period Integer measure [x 50us] MSW	RO	
48101	8100	INT MEASURE PERIOD	2	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32
48102	8101			Period Integer measure [x 50us] MSW	RO	
48103	8102	INT MEASURE PERIOD	3	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32





48104	8103			Period Integer measure [x 50us] MSW	RO	
48105	8104	INT MEASURE PERIOD	4	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32
48106	8105			Period Integer measure [x 50us] MSW	RO	
48107	8106	INT MEASURE PERIOD	5	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32
48108	8107			Period Integer measure [x 50us] MSW	RO	
48109	8108	INT MEASURE PERIOD	6	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32
48110	8109			Period Integer measure [x 50us] MSW	RO	
48111	8110	INT MEASURE PERIOD	MEASURE	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32
48112	8111			Period Integer measure [x 50us] MSW	RO	
48113	8112	INT MEASURE PERIOD	8	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32
48114	8113			Period Integer measure [x 50us] MSW	RO	
48115	8114	INT MEASURE PERIOD	9	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32





48116	8115			Period Integer measure [x 50us] MSW	RO			
48117	8116	INT MEASURE PERIOD	10	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32		
48118	8117			Period Integer measure [x 50us] MSW	RO			
48119	8118	INT MEASURE PERIOD	11	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32		
48120	8119			Period Integer measure [x 50us] MSW	RO			
48121	8120	INT MEASURE PERIOD	MEASURE	MEASURE	12	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32
48122	8121			Period Integer measure [x 50us] MSW	RO			
48123	8122	INT MEASURE PERIOD	13	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32		
48124	8123			Period Integer measure [x 50us] MSW	RO			
48125	8124	INT MEASURE PERIOD	14	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32		
48126	8125			Period Integer measure [x 50us] MSW	RO			
48127	8126	INT MEASURE PERIOD	15	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32		





48128	8127			Period Integer measure [x 50us] MSW	RO	
48129	8128	INT MEASURE PERIOD	16	Period Integer measure [x 50us] LSW	RO	UNSIGNED 32
48130	8129			Period Integer measure [x 50us] MSW	RO	
48131	8130	INT MEASURE FREQ	1	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48132	8131	INT MEASURE FREQ	2	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48133	8132	INT MEASURE FREQ	3	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48134	8133	INT MEASURE FREQ	4	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48135	8134	INT MEASURE FREQ	5	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48136	8135	INT MEASURE FREQ	6	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48137	8136	INT MEASURE FREQ	7	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48138	8137	INT MEASURE FREQ	8	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48139	8138	INT MEASURE FREQ	9	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48140	8139	INT MEASURE FREQ	10	Frequency Integer Measure [Hz]	RO	UNSIGNED 16





48141	8140	INT MEASURE FREQ	11	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48142	8141	INT MEASURE FREQ	12	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48143	8142	INT MEASURE FREQ	13	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48144	8143	INT MEASURE FREQ	14	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48145	8144	INT MEASURE FREQ	15	Frequency Integer Measure [Hz]	RO	UNSIGNED 16
48146	8145	INT MEASURE FREQ	16	Frequency Integer Measure [Hz]	RO	UNSIGNED 16







22.3. R-16DI-8DO: TABLE OF MODBUS REGISTERS 0x COIL STATUS (FUNCTION CODE 1)

ADDRESS (0x)	OFFSET ADDRESS (0x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
1	0	DIGITAL INPUT	1	DIGITAL INPUT	RO	BIT
2	1	DIGITAL INPUT	2	DIGITAL INPUT	RO	BIT
3	2	DIGITAL INPUT	3	DIGITAL INPUT	RO	BIT
4	3	DIGITAL INPUT	4	DIGITAL INPUT	RO	BIT
5	4	DIGITAL INPUT	5	DIGITAL INPUT	RO	BIT
6	5	DIGITAL INPUT	6	DIGITAL INPUT	RO	BIT
7	6	DIGITAL INPUT	7	DIGITAL INPUT	RO	BIT
8	7	DIGITAL INPUT	8	DIGITAL INPUT	RO	BIT
9	8	DIGITAL INPUT	9	DIGITAL INPUT	RO	BIT
10	9	DIGITAL INPUT	10	DIGITAL INPUT	RO	BIT
11	10	DIGITAL INPUT	11	DIGITAL INPUT	RO	BIT
12	11	DIGITAL INPUT	12	DIGITAL INPUT	RO	BIT
13	12	DIGITAL INPUT	13	DIGITAL INPUT	RO	BIT
14	13	DIGITAL INPUT	14	DIGITAL INPUT	RO	BIT
15	14	DIGITAL INPUT	15	DIGITAL INPUT	RO	BIT
16	15	DIGITAL INPUT	16	DIGITAL INPUT	RO	BIT





ADDRESS (0x)	OFFSET ADDRESS (0x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
33	32	DIGITAL OUT	1	DIGITAL OUTPUT	RW	BIT
34	33	DIGITAL OUT	2	DIGITAL OUTPUT	RW	BIT
35	34	DIGITAL OUT	3	DIGITAL OUTPUT	RW	BIT
36	35	DIGITAL OUT	4	DIGITAL OUTPUT	RW	BIT
37	36	DIGITAL OUT	5	DIGITAL OUTPUT	RW	BIT
38	37	DIGITAL OUT	6	DIGITAL OUTPUT	RW	BIT
39	38	DIGITAL OUT	7	DIGITAL OUTPUT	RW	BIT
40	39	DIGITAL OUT	8	DIGITAL OUTPUT	RW	BIT

ADDRESS (0x)	OFFSET ADDRESS (0x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
101	100	COUNTER RESET	1	COUNTER RESET	RW	BIT
102	101	COUNTER RESET	2	COUNTER RESET	RW	BIT
103	102	COUNTER RESET	3	COUNTER RESET	RW	BIT
104	103	COUNTER RESET	4	COUNTER RESET	RW	BIT
105	104	COUNTER RESET	5	COUNTER RESET	RW	BIT
106	105	COUNTER RESET	6	COUNTER RESET	RW	BIT
107	106	COUNTER RESET	7	COUNTER RESET	RW	BIT
108	107	COUNTER RESET	8	COUNTER RESET	RW	BIT
109	108	COUNTER RESET	9	COUNTER RESET	RW	BIT
110	109	COUNTER RESET	10	COUNTER RESET	RW	BIT
111	110	COUNTER RESET	11	COUNTER RESET	RW	BIT
112	111	COUNTER RESET	12	COUNTER RESET	RW	BIT
113	112	COUNTER RESET	13	COUNTER RESET	RW	BIT
114	113	COUNTER RESET	14	COUNTER RESET	RW	BIT
115	114	COUNTER RESET	15	COUNTER RESET	RW	BIT
116	115	COUNTER RESET	16	COUNTER RESET	RW	BIT





22.4. R-16DI-8DO: TABLE OF REGISTERS 1x INPUT STATUS (FUNCTION CODE 2)

ADDRESS (1x)	OFFSET ADDRESS (1x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
10001	0	DIGITAL INPUT	1	DIGITAL INPUT	RO	BIT
10002	1	DIGITAL INPUT	2	DIGITAL INPUT	RO	BIT
10003	2	DIGITAL INPUT	3	DIGITAL INPUT	RO	BIT
10004	3	DIGITAL INPUT	4	DIGITAL INPUT	RO	BIT
10005	4	DIGITAL INPUT	5	DIGITAL INPUT	RO	BIT
10006	5	DIGITAL INPUT	6	DIGITAL INPUT	RO	BIT
10007	6	DIGITAL INPUT	7	DIGITAL INPUT	RO	BIT
10008	7	DIGITAL INPUT	8	DIGITAL INPUT	RO	BIT
10009	8	DIGITAL INPUT	9	DIGITAL INPUT	RO	BIT
10010	9	DIGITAL INPUT	10	DIGITAL INPUT	RO	BIT
10011	10	DIGITAL INPUT	11	DIGITAL INPUT	RO	BIT
10012	11	DIGITAL INPUT	12	DIGITAL INPUT	RO	BIT
10013	12	DIGITAL INPUT	13	DIGITAL INPUT	RO	BIT
10014	13	DIGITAL INPUT	14	DIGITAL INPUT	RO	BIT
10015	14	DIGITAL INPUT	15	DIGITAL INPUT	RO	BIT
10016	15	DIGITAL INPUT	16	DIGITAL INPUT	RO	BIT



23. MODBUS REGISTER TABLE FOR THE R-8AI-8DIDO DEVICE

23.1. R-8AI-8DIDO: MODBUS 4X HOLDING REGISTERS TABLE (FUNCTION CODE 3)

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40001	0	MACHINE-ID	-	Device ID	RO	UNSIGNED 16 BIT
40002	1	FIRMWARE REVISION (Maior/Minor)	-	FW revision	RO	UNSIGNED 16 BIT
40003	2	FIRMWARE REVISION (Fix/Build)	-	FW revision	RO	UNSIGNED 16 BIT
40004	3	FW CODE	-	FW code	RO	UNSIGNED 16 BIT
40005	4	RESERVED	-	-	RO	UNSIGNED 16 BIT
40006	5	RESERVED	-	-	RO	UNSIGNED 16 BIT
40007	6	BOARD-ID	-	HW revision	RO	UNSIGNED 16 BIT
40008	7	BOOT REVISION (Maior/Minor)	-	FW Bootloader revision	RO	UNSIGNED 16 BIT
40009	8	BOOT REVISION (Fix/Build)	-	FW Bootloader revision	RO	UNSIGNED 16 BIT
40010	9	RESERVED	-	-	RO	UNSIGNED 16 BIT
40011	10	RESERVED	-	-	RO	UNSIGNED 16 BIT
40012	11	RESERVED	-	-	RO	UNSIGNED 16 BIT
40013	12	COMMAND	-	Supported command list: 49568 decimal to perform a Reboot	RW	UNSIGNED 16 BIT
40014 40058	1357	RESERVED	-	-	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40059	58	DIGITAL OUT	[81]	Digital output values 0 = Not active output 1 = Active output THE LEAST SIGNIFICANT BIT RELATES TO IO1 EXAMPLE: 5 decimal = 0000 0000 0000 0101 binary => OUT1= Active OUT2= Not Active OUT3= Active OUT4OUT8=Not Active	RW	UNSIGNED 16 BIT
40060	59	DIGITAL IN	[81]	Digital input values 0 = Low 1 = High THE LEAST SIGNIFICANT BIT RELATES TO IO1 EXAMPLE: 5 decimal = 0000 0000 0000 0101 binary => IN1 = High IN2 = Low IN3 = High OUT4OUT8 = Low	RO	UNSIGNED 16 BIT
40117	116	CHANNEL INTEGER VALUE	1	OUT4OUT8 = Low Channel measurement (unit of measurement depending on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled		SIGNED INTEGER 16 BIT





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40118	117	CHANNEL INTEGER VALUE	2	Channel measurement (unit of measurement depending on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	SIGNED INTEGER 16 BIT
40119	118	CHANNEL INTEGER VALUE	3	Channel measurement (unit of measurement depending on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	SIGNED INTEGER 16 BIT
40120	119	CHANNEL INTEGER VALUE	4	Channel measurement (unit of measurement depending on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	SIGNED INTEGER 16 BIT
40121	120	CHANNEL INTEGER VALUE	5	Channel measurement (unit of measurement depending on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	SIGNED INTEGER 16 BIT
40122	121	CHANNEL INTEGER VALUE	6	Channel measurement (unit of measurement depending on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	SIGNED INTEGER 16 BIT





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40123	122	CHANNEL INTEGER VALUE	7	Channel measurement (unit of measurement depending on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	SIGNED INTEGER 16 BIT
40124	123	CHANNEL INTEGER VALUE	8	Channel measurement (unit of measurement depending on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	SIGNED INTEGER 16 BIT
40317	316		1	Channel measurement (unit of measurement depending on the type of	RO	
40318	317	CHANNEL VALUE		measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	FLOAT 32
40319	318			Channel measurement (unit of measurement depending	RO	
40320	319	CHANNEL VALUE	2	on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	FLOAT 32
40321	320		3	Channel measurement (unit of measurement depending	RO	
40322	321	CHANNEL VALUE		on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	FLOAT 32



ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40323	322			Channel measurement (unit of measurement depending	RO	FLOAT 32
40324	323	CHANNEL VALUE	4	on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	
40325	324			Channel measurement (unit of measurement depending	RO	
40326	325	CHANNEL VALUE	5	on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	FLOAT 32
40327	326			Channel measurement (unit of measurement depending	RO	
40328	327	CHANNEL VALUE	6	on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	FLOAT 32
40329	328			Channel measurement (unit of	RO	
40330	329	CHANNEL VALUE	7	measurement depending on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	FLOAT 32
40331	330			Channel measurement (unit of measurement depending	RO	
40332	CHANNEL VALUE	8	on the type of measurement or configuration) [V] or [mV] or [mA] or [°C] or [Ohm] or Scaled	RO	FLOAT 32	



ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40381	380	ERRORS	-	Measurement errors Bit = 0 OK Bit = 1 FAIL Bit[15] CJ Err IN7&IN8 Bit[14]=CJ Err IN5&IN6 Bit[13]=CJ Err IN3&IN4 Bit[12]=CJ Err IN2&IN1 Bit[0]=GENERIC FAULT	RO	UNSIGNED 16
40382	381	ERRORS2	Measurement errors 2 Bit = 0 OK Bit = 1 FAIL Bit[15]=OVERFLOW IN8 Bit[14]=OVERFLOW IN7 Bit[13]=OVERFLOW IN6 Bit[12]=OVERFLOW IN5 Bit[11]=OVERFLOW IN4 Bit[10]=OVERFLOW IN3 Bit[9]=OVERFLOW IN1 Bit[9]=OVERFLOW IN1 Bit[7]=BURNOUT IN8 Bit[6]=BURNOUT IN7 Bit[5]=BURNOUT IN5 Bit[3]=BURNOUT IN4 Bit[2]=BURNOUT IN3 Bit[1]=BURNOUT IN3 Bit[1]=BURNOUT IN1		RO	UNSIGNED 16 BIT
40383	382	DIP SWITCH ERRORS	-	Configuration Dip switch Errors Bit = 0 OK Bit = 1 FAIL Bit[7]=DIP SWITCH ERR IN8 Bit[6]= DIP SWITCH ERR IN7 Bit[5]= DIP SWITCH ERR IN6 Bit[4]= DIP SWITCH ERR IN5 Bit[3]= DIP SWITCH ERR IN4 Bit[2]= DIP SWITCH ERR IN3 Bit[1]= DIP SWITCH ERR IN2 Bit[0]= DIP SWITCH ERR IN1		UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40416	415	SECONDARY		Secondary Channel measurement (unit of measurement depending	RO	FLOAT 32
40417	416	CHANNEL VALUE	1	on the type of measurement or configuration) [V] or [mV] or [mA] or [Ohm]	RO	
40418	417			Secondary Channel measurement (unit of measurement depending	RO	
40419	418	SECONDARY CHANNEL VALUE	2	on the type of measurement or configuration) [V] or [mV] or [mA] or [Ohm]	RO	FLOAT 32
40420	419	SECONDARY	3	Secondary Channel measurement (unit of measurement depending	RO	
40421	420	CHANNEL VALUE		on the type of measurement or configuration) [V] or [mV] or [mA] or [Ohm]	RO	FLOAT 32
40422	421			Secondary Channel measurement (unit of measurement depending	RO	
40423	422	SECONDARY CHANNEL VALUE	4	on the type of measurement or configuration) [V] or [mV] or [mA] or [Ohm]	RO	FLOAT 32
40424	423	SECONDARY		Secondary Channel measurement (unit of measurement depending	RO	
40425	424	CHANNEL VALUE	5	on the type of measurement or configuration) [V] or [mV] or [mA] or [Ohm]	RO	FLOAT 32
40426	425	SECONDARY CHANNEL VALUE	6	Secondary Channel measurement (unit of	RO	FLOAT 32





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40427	426			measurement depending on the type of measurement or configuration) [V] or [mV] or [mA] or [Ohm]	RO	
40428	427			Secondary Channel measurement (unit of	RO	
40429	428	SECONDARY CHANNEL VALUE	7	measurement depending on the type of measurement or configuration) [V] or [mV] or [mA] or [Ohm]	RO	FLOAT 32
40430	429			Secondary Channel measurement (unit of measurement depending	RO	
40431	SECONDARY CHANNEL VALUE 430	8	on the type of measurement or configuration) [V] or [mV] or [mA] or [Ohm]	RO	FLOAT 32	





23.2. R-8AI-8DIDO: TABLE OF MODBUS REGISTERS 0x COIL STATUS (FUNCTION CODE 1)

ADDRESS (0x)	OFFSET ADDRESS (0x)	REGISTER	CHANNE L	DESCRIPTION	W/ R	TYP E
1	0	DIGITAL INPUT/OUTPU T	1	DIGITAL INPUT/OUTPUT	RW	BIT
2	1	DIGITAL INPUT/OUTPU T	2	DIGITAL INPUT/OUTPUT	RW	BIT
3	2	DIGITAL INPUT/OUTPU T	3	DIGITAL INPUT/OUTPUT	RW	BIT
4	3	DIGITAL INPUT/OUTPU T	4	DIGITAL INPUT/OUTPUT	RW	BIT
5	4	DIGITAL INPUT/OUTPU T	5	DIGITAL INPUT/OUTPUT	RW	BIT
6	5	DIGITAL INPUT/OUTPU T	6	DIGITAL INPUT/OUTPUT	RW	BIT
7	6	DIGITAL INPUT/OUTPU T	7	DIGITAL INPUT/OUTPUT	RW	BIT
8	7	DIGITAL INPUT/OUTPU T	8	DIGITAL INPUT/OUTPUT	RW	BIT







23.3. R-8AI-8DIDO: TABLE OF MODBUS REGISTERS 1x INPUT STATUS (FUNCTION CODE 2)

ADDRESS (1x)	OFFSET ADDRESS (1x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
10001	0	DIGITAL INPUT	1	DIGITAL INPUT/OUTPUT	RO	BIT
10002	1	DIGITAL INPUT	2	DIGITAL INPUT/OUTPUT	RO	BIT
10003	2	DIGITAL INPUT	3	DIGITAL INPUT/OUTPUT	RO	BIT
10004	3	DIGITAL INPUT	4	DIGITAL INPUT/OUTPUT	RO	BIT
10005	4	DIGITAL INPUT	5	DIGITAL INPUT/OUTPUT	RO	BIT
10006	5	DIGITAL INPUT	6	DIGITAL INPUT/OUTPUT	RO	BIT
10007	6	DIGITAL INPUT	7	DIGITAL INPUT/OUTPUT	RO	BIT
10008	7	DIGITAL INPUT	8	DIGITAL INPUT/OUTPUT	RO	BIT



24. MODBUS REGISTER TABLE FOR THE R-SG3 DEVICE

24.1. R-SG3: MODBUS 4X HOLDING REGISTERS TABLE (FUNCTION CODE 3)

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
40001	0	MACHINE-ID	-	DEVICE IDENTIFICATIO N	RO	UNSIGNED 16
40002	1	FIRMWARE REVISION	-	FIRMWARE REVISION	RO	UNSIGNED 16
40003	2	MEASURE UNIT	-	Select the unit of measurement between: 0 = Kg 1=g 2=t 3=lb 4=l 5=N 6=bar 7=atm 8=other	RW	UNSIGNED 16
40004	3	UNIPOLAR	-	0 = compression and traction (Bipolar) 1 = Balance (Unipolar)	RW	UNSIGNED 16
40005	4	ANALOG OUTPUT TYPE (Only Model ZE-SG3, Z- SG3)	-	0 = Voltage, 1 = Current	RW	UNSIGNED 16





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
40006	5	DIGITAL IN TYPE/ DIGITAL IN-OUT		(MSB) DIGITAL IN TYPE: Select the input digital 1/2 type BIT[8] 0 = digital input 1 acquires the tare 1 = Status of the digital input 1 is shown on Modbus BIT[9] 0 = digital input 2 acquires the tare 1 = Status of the digital input 2 is shown on Modbus BIT[9] 0 = DIDO1 CONFIGURE (LSB) DIGITAL IN-OUT BIT[0] 0 = DIDO1 configured as Input 1 = DIDO1 configured as output BIT[1] 0 = DIDO2 configured as Input 1 = DIDO2 configured as output BIT[1] 0 = DIDO2 configured as output a configured as output bir[1] configured as output a configured as output bir[1] configured as output	RW	UNSIGNED 16





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	TYPE
40007	6	CALIBRATION MODE	-	Set the calibration type mode: 0 = Factory calibration 1 = Calibration with standard weight	RW	UNSIGNED 16
40008	7			RESERVED MSW	RW	UNSIGNED
40009	8	RESERVED	-	RESERVER LSW	RW	32
40010	9	RESERVED		RESERVED MSW	RW	UNSIGNED
40011	10	RESERVED		RESERVER LSW	RW	32
40012	11	DECEDI/ED		RESERVED MSW	RW	UNSIGNED
40013	12	RESERVED	-	RESERVER LSW	RW	32
40014	13	CELL SENSE RATIO		Load cell sensitivity value in [mV/V] MSW	RW	FLOATING
40015	14	[mV/V]	-	Load cell sensitivity value in [mV/V] LSW	RW	POINT 32 BIT
40016	15	CELL FULL SCALE [kg/g/t]	-	Full scale value of the load cell in technical units [kg/g/t] MSW	RW	FLOATING POINT 32 BIT
40017	16			Full scale value of the load cell	RW	







ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
	. ,			in technical units [kg/g/t] LSW		
40018	17	STANDARD WEIGHT CELL FLOAT [kg/g/t]	_	Standard weight value in technical units to use in calibration mode with sample weight [kg/g/t] MSW	RW	FLOATING POINT 32
40019	18		[kg/g/t]		Standard weight value in technical units to use in calibration mode with sample weight [kg/g/t] LSW	RW
40020	19	THRESHOLD DO1 [kg/g/t]	-	Alarm threshold value in technical units for digital output 1 [kg/g/t] MSW	RW	FLOATING POINT 32
40021	20			Alarm threshold value in technical units for digital output 1 [kg/g/t] LSW	RW	BIT
40022	21	OUTPUT WEIGHT START SCALE [kg/g/t] (Only for model ZE-SG3, Z-SG3)	-	Initial scale value of the net weight for the analog output [kg/g/t] MSW	RW	FLOATING POINT 32 BIT
40023	22			Initial scale value of the net weight for the analog	RW	





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
				output [kg/g/t] LSW		
40024	23	OUTPUT WEIGHT STOP SCALE [kg/g/t] (Only for model ZE-SG3, Z-SG3)	-	Full scale value of the net weight for the analog output [kg/g/t] MSW	RW	FLOATING POINT 32
40025	24			Full scale value of the net weight for the analog output [kg/g/t] LSW	RW	BIT
40026	25	OUTPUT STOP SCALE [V/mA] (Only for model ZE-SG3, Z-SG3)		Full scale value of the analog output in [V/mA] MSW	RW	FLOATING POINT 32
40027	26			Full scale value of the analog output in [V/mA] LSW	RW	BIT
40028	27	OUTPUT START SCALE [V/mA]	-	Initial scale value of the analog output in [V/mA] MSW	RW	FLOATING POINT 32
40029	28	(Only for model ZE-SG3, Z-SG3)		Initial scale value of the analog output in [V/mA] LSW	RW	BIT
40030	29	DELTA WEIGHT [kg/g/t]	-	Delta weight value in technical units for stable weighing condition [kg/g/t] MSW	RW	FLOATING POINT 32 BIT
40031	30			Delta weight value in technical units for stable weighing	RW	



ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
				condition [kg/g/t] LSW		
40032	31	DELTA TIME [*100 ms]	-	Value of the delta time in 100ms quantities for the stable weighing condition	RW	UNSIGNED 16 BIT
40033	32	DOUT MODE	1-2	BIT[0] 0 = DOUT1 NORMALLY OPEN 1 = DOUT1 NORMALLY CLOSE BIT[1] 0 = DOUT2 NORMALLY OPEN 1 = DOUT2 NORMALLY CLOSE BIT[27] NOT USED BIT[811] 0 = DOUT1 MODE FULL SCALE 1 = DOUT1 MODE OVERTHRESH OLD 2 = DOUT1 STABLE WEIGHT 3 = DOUT1 FROM MODBUS 4 = DOUT1 OVERTHRESH OLD WITH HYSTERESIS	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
				BIT[1215] 0 = DOUT2 MODE FULL SCALE 1 = DOUT2 MODE OVERTHRESH OLD 2 = DOUT2 STABLE WEIGHT 3 = DOUT2 FROM MODBUS 4 = DOUT2 OVERTHRESH OLD WITH HYSTERESIS		
40034	33	ADVANCED ADC SPEED	-	Configure the sampling rate of the ADC. It is active only if you set the filtering at level 7 (advanced). $0 = 960 \text{ Hz}$ $1 = 300 \text{ Hz}$ $2 = 150 \text{ Hz}$ $3 = 100 \text{ Hz}$ $4 = 60 \text{ Hz}$ $5 = 12 \text{ Hz}$ $6 = 4.7 \text{ Hz}$	RW	UNSIGNED 16 BIT
40035	34	AUTOMATIC TARE RESET	-	0 = Disable the tare tracker If >= 1 it is the value of ADC points within which the tare automatically will be reset. If after 5 seconds of stable weighing	RW	UNSIGNED 32



ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
	·			condition the ADC value of the net weight deviates by less than this value then a new tare is acquired ADC POINTS MSW		
40036	35		-	ADC POINTS LSW	RW	
40037	36	THRESHOLD HYSTERESIS DO 1 [kg/g/t]	-	Hysteresis value for digital output 1 threshold MSW	RW	FLOATING POINT 32
40038	37		-	Hysteresis value for digital output 1 threshold LSW	RW	BIT
40039	38	ADVANCED DENOISE FILTER VARIATION	-	It represents the change in ADC points due to noise alone. It is active only if you set the filtering at level 7 (advanced). ADC VALUE MSW	RW	FLOATING POINT 32 BIT
40040	39		-	ADC VALUE LSW	RW	
40041	40	ADVANCED DENOISE FILTER RESPONSE	-	Represents a parameter related to the response speed of the filter, it can vary from 0.001	RW	FLOATING POINT 32 BIT



ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
				(Slowest Response) to 1 (Fast Response). It is active only if you set the filtering at level 7 (advanced). RESPONSE SPEED MSW		
40042	41		-	RESPONSE SPEED LSW	RW	
40043	42	DENOISE FILTER VALUE	-	It is possible to configure a pre-established filter level The higher the filter level is, plus the weight measurement will be stable but slow. A value other than 7 will override the advanced parameters. In the "Advanced" mode it will be possible to act on the individual parameters of the ADVANCED NOISE FILTER VARIATION, ADVANCED NOISE FILTER RESPONSE,	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
				ADVANCED ADC SPEED		
				0 = FILTER RESPONSE TIME 2 ms 1 = FILTER RESPONSE TIME 6,7 ms 2 = FILTER RESPONSE TIME 13 ms 3 = FILTER RESPONSE TIME 30 ms 4 = FILTER RESPONSE TIME 50 ms 5 = FILTER RESPONSE TIME 50 ms 6 = FILTER RESPONSE TIME 250 ms 6 = FILTER RESPONSE TIME 850 ms 7 = ADVANCED		
40044	43	RESOLUTION MODE	-	Select the type of resolution to be used in the Weight measurement: 0 = Automatic Resolution (calculated on the basis of the full scale to obtain about 20000 points) 1 = Manual resolution (Taken from MANUAL RESOLUTION register)	RW	UNSIGNED 16 BIT



ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
				2 = Max resolution (Full 24 bits resolution)		
40045	44	DENOISE FILTER ENABLE	-	0 = Noise filter disabled (advanced mode enabled) 1 = Noise filter enabled	RW	UNSIGNED 16 BIT
40046	45	MANUAL RESOLUTION [kg/g/t]	-	Sets the manual resolution with which the weight measure is displayed in technical units [kg/g/t]	RW	FLOATING POINT 32
40047	46		-	Sets the manual resolution with which the weight measure is displayed in technical units [kg/g/t] LSW	RW	BIT
40048	47	ONE PIECE WEIGHT [kg/g/t]	-	Sets the weight of a single piece (used for pieces counter) MSW	RW	FLOATING POINT 32
40049	48		-	Sets the weight of a single piece (used for pieces counter) LSW	RW	BIT
40050	49	THRESHOLD DO2 [kg/g/t]	-	Alarm threshold value in	RW	FLOATING POINT 32 BIT



ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	TYPE
	, ,			technical units for digital output 2 [kg/g/t] MSW		
40051	50		-	Alarm threshold value in technical units for digital output 2 [kg/g/t] LSW	RW	
40052	51	THRESHOLD HYSTERESIS DO 2 [kg/g/t]	-	Hysteresis value for digital output 1 threshold MSW	RW	FLOATING
40053	52		-	Hysteresis value for digital output 1 threshold LSW	RW	POINT 32 BIT
40061	60			Reserved	RO	FLOATING
40062	61	RESERVED	-	Reserved	RO	POINT 32 BIT
40063	62	16 BIT ADC FILTERED	-	ADC Converted in 16 Bit filtered value	RO	UNSIGNED 16 BIT
40064	63	NET WEIGHT VALUE		Net weight in technical units MSW	RO	FLOATING
40065	64	[Kg/g/t]	-	Net weight in technical units LSW	RO	POINT 32 BIT
40066	65	GROSS WEIGHT VALUE		Gross weight in technical units MSW	RO	FLOATING
40067	66	[Kg/g/t]	-	Gross weight in technical units LSW	RO	POINT 32 BIT
40068	67	TARE WEIGHT VALUE [kg/g/t]	-	Tare weight in technical units MSW	RO	FLOATING POINT 32 BIT





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
40069	68		-	Tare weight in technical units LSW	RO	
40070	69	INTEGER NET WEIGHT VALUE [kg/g/t]	-	Net weight in technical units MSW	RO	SIGNED 32
40071	70		-	Net weight in technical units LSW	RO	BIT
40072	71	INTEGER GROSS WEIGHT VALUE [kg/g/t]	-	Gross weight in technical units MSW	RO	SIGNED 32
40073	72		-	Gross weight in technical units LSW	RO	BIT
40074	73	INTEGER TARE	-	Tare weight in technical units MSW	RO	SIGNED 32
40075	74	WEIGHT VALUE [kg/g/t]	-	Tare weight in technical units LSW	RO	BIT
40076	75	FACTORY	-	Value to use for the manual tare in the factory mode calibration (MSW)	RW	FLOATING POINT 32
40077	76	MANUAL TARE [kg/g/t]	-	Value to use for the manual tare in the factory mode calibration (LSW)	RW	BIT





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
40078	77	STATUS		Status register: BIT 0 LSBIT (RO) Bit 0 = 1 THRESHOLD AND STABLE WEIGHT for DIDO 1 BIT 1 (RO) Bit 1 = 1 FULL SCALE CELL BIT 2 (RO) Bit 2 = 1 NET WEIGHT < 0 BIT 3 (RO) Bit 3 = 1 THRESHOLD AND STABLE WEIGHT for DIDO 2 BIT 4 (RO) Bit 4 = 1 Stable weight BIT 5-6 (R/W) Only if the output mode commandable from modbus has been chosen: Bit 5 = 1 digital output 2 on Bit 5 = 0 digital output 2 off Bit 6 = 1 digital output 1 on Bit 6 = 0 digital output 1 on Bit 6 = 0 digital output 1 on Bit 7 (RO) Bit 7 = 1 Threshold with hysteresis for DIDO 1 BIT 8 (RO) Bit 8 = 1 tare	RW	UNSIGNED 16 BIT



ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	TYPE
				tracker (if enabled) BIT 9 (RO) Bit 9 = 1 Threshold with hysteresis for DIDO 2 BIT 1015 Not used		
40079	78	PASSWORD	-	Reserved	RW	UNSIGNED 16 BIT
40080	79	COMMAND REGISTER	-	Command register once the command has been executed, the register returns to the value 0 43948 (decimal) Reboot the device 49594 (decimal) Acquires the	RW	UNSIGNED 16 BIT



(decimal) Acquires the tare in Flash for the calibration procedure in both operating modes (factory calibration and with sample weight)

50700 (decimal) Acquires the sample weight value in Flash for calibration with standard weight

50773 (decimal) Acquires the tare value from the register MANUAL TARE (only for the factory calibration mode)

SENECA		User	Manual			R SERIES	
	ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
					tare in RAM (at reboot is lost)		
					19911		

ALL RIGHTS RESERVED. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT PRIOR PERMISSION.

49151 (decimal) Reset the maximum net weight





ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
				45056 (decimal) Reset the register with the minimum net weight		
40081	80	PIECES NR	-	PIECES COUNTER VALUE	RO	UNSIGNED 16 BIT
40082	81	MAX NET	-	Maximum weight value net in technical units from last reboot [MSW]	RO	FLOATING POINT 32
40083	82	WEIGHT [Kg/g/t]	-	Maximum weight value net in technical units from last reboot [LSW]	RO	BIT
40084	83	MIN NET	-	Minimum weight value net in technical units from last reboot [MSW]	RO	FLOATING POINT 32
40085	84	WEIGHT [Kg/g/t]	-	Minimum weight value net in technical units from last reboot [LSW]	RO	BIT
40086	85	RESERVED	-	Reserved	RO	UNSIGNED
40087	86	MEDELLAED	-	Reserved	RO	32 BIT

ADDRESS (4x)	OFFSET ADDRESS (4x)	REGISTER	CHANNEL	DESCRIPTION	W/ R	ТҮРЕ
40088	87		-	Reserved	RO	UNSIGNED
40089	88	RESERVED	-	Reserved	RO	32 BIT
40090	89	RESERVED	-	Reserved	RO	UNSIGNED
40091	90		-	Reserved	RO	32 BIT
40092	91	ADC RAW 24 BIT	-	ADC 24 bit value not filtered	RO	UNSIGNED
40093	92	ADC RAW 24 BH	-	ADC 24 bit value not filtered	RO	32 BIT
40094	93	ADC RAW 24 BIT FILTERED	-	ADC 24 bit value filtered	RO	UNSIGNED
40095	94		-	ADC 24 bit value filtered	RO	32 BIT

25. MODBUS REGISTER TABLE FOR THE R-4AO-8DIDO PRODUCT

25.1. R-4AO-8DIDO: MODBUS 4X HOLDING REGISTERS TABLE (FUNCTION CODE 3)

ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40001	0	MACHINE-ID	-	Device identification	RO	UNSIGNED 16 BIT
40002	1	FW REVISION (Maior/Minor)	-	Fw Revision	RO	UNSIGNED 16 BIT
40003	2	FW REVISION (Fix/Build)	-	- Fw Revision	RO	UNSIGNED 16 BIT
40004	3	FW CODE	-	Fw Code	RO	UNSIGNED 16 BIT
40005	4	BOARD-ID	-	Hw Revision	RO	UNSIGNED 16 BIT
40006	5	MODBUS ID	R0		RO	UNSIGNED 16 BIT
40007	6	BOOT REVISION (Maior/Minor)	-	Bootloader Revision	RO	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40008	7	BOOT REVISION (Fix/Build)	-	Bootloader Revision	RO	UNSIGNED 16 BIT
40009	8	BOOTLOADER CODE	-	Bootloader Code	RO	UNSIGNED 16 BIT
40010	9	RESERVED	-	-	RO	UNSIGNED 16 BIT
40011	10	RESERVED	-	-	RO	UNSIGNED 16 BIT
40012	11	RESERVED	-	-	RO	UNSIGNED 16 BIT
40013	12	COMMAND_AUX _3H	-	Aux Command Register	RW	UNSIGNED 16 BIT
40014	13	COMMAND_AUX _3L	-	Aux Command Register	RW	UNSIGNED 16 BIT
40015	14	COMMAND_AUX 2	-	Aux Command Register	RW	UNSIGNED 16 BIT
40016	15	COMMAND_AUX 1	-	- Aux Command Register		UNSIGNED 16 BIT
40017	16	COMMAND	-	Aux Command Register 0xC1A0 = reset device 0x0100 = set factory default 0x0101 = clear al counters	RW	UNSIGNED 16 BIT
40018	17	STATUS	-	Device Status	R	UNSIGNED 16 BIT
40019	18	RESERVED	-	-	RW	UNSIGNED 16 BIT
40020	19	RESERVED	-	-	RW	UNSIGNED 16 BIT
40021	20	ANALOG STATUS BIT	-	bit 0: under-scale AO1 bit 1: under-scale AO2 bit 2: under-scale AO3 bit 3: under-scale AO4 bit 4: over-scale AO1 bit 5: over-scale AO2 bit 6: over-scale AO3 bit 7: over-scale AO4 bit 8: fail watchdog AO1 bit 9: fail watchdog AO2 bit 10: fail watchdog AO3 bit 11: fail watchdog AO4 bit 1215: not used	R	UNSIGNED 16 BIT
40022	21	DIGITAL I/O	81	Digital IO Value [Channel 81]	RW	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ	
40023	22	RESERVED	-	-	RW	UNSIGNED 16 BIT	
40024	23	COUNTER	1	MSW	RW	UNSIGNED	
40025	24	COUNTER	1	LSW	RW	32 BIT	
40026	25	COUNTER	2	MSW	RW	UNSIGNED	
40027	26	COONTER		LSW	RW	32 BIT	
40028	27	COUNTER	3	MSW	RW	UNSIGNED	
40029	28	COONTEN	J	LSW	RW	32 BIT	
40030	29	COUNTER	4	MSW	RW	UNSIGNED	
40031	30	COOMILIA	·	LSW	RW	32 BIT	
40032	31	COUNTER	5	MSW	RW	UNSIGNED	
40033	32	333111211		LSW	RW	32 BIT	
40034	33	COUNTER	6	MSW	RW	UNSIGNED	
40035	34	333111211	<u> </u>	LSW	RW	32 BIT	
40036	35	COUNTER	7	MSW	RW	UNSIGNED	
40037	36			LSW	RW	32 BIT	
40038	37	COUNTER	8	MSW	RW	UNSIGNED	
40039	38		_	LSW	RW	32 BIT	
40040	39	DEDIOD [2]	1	MSW	R	FLOATING	
40041	40	PERIOD [s]	1	LSW	R	POINT 32 BIT	
40042	41	25202 []			MSW	R	FLOATING
40043	42	PERIOD [s]	2	LSW	R	POINT 32 BIT	
40044	43			MSW	R	FLOATING	
40045	44	PERIOD [s]	3	LSW	R	POINT 32 BIT	
40046	45			MSW	R	FLOATING	
40047	46	PERIOD [s]	4	LSW	R	POINT 32 BIT	
40048	47			MSW	R	FLOATING	
40049	48	PERIOD [s]	5	LSW	R	POINT 32 BIT	
40050	49			MSW	R	FLOATING	
40051	50	PERIOD [s]	6	LSW	R	POINT 32 BIT	
40052	51			MSW	R	FLOATING	
40053	52	PERIOD [s]	7	LSW	R	POINT 32 BIT	
40054	53			MSW	R	FLOATING	
40055	54	PERIOD [s]	8	LSW	R	POINT 32 BIT	
40056	55			MSW	R	FLOATING	
40057	56	FREQUENCY [Hz]	1	LSW	R	POINT 32 BIT	





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
40058	57			MSW	R	FLOATING
40059	58	FREQUENCY [Hz]	2	LSW	R	POINT 32 BIT
40060	59			MSW	R	FLOATING
40061	60	FREQUENCY [Hz]	3	LSW	R	POINT 32 BIT
40062	61			MSW	R	FLOATING
40063	62	FREQUENCY [Hz]	4	LSW	R	POINT 32 BIT
40064	63			MSW	R	FLOATING
40065	64 FREQUENCY [Hz]		5	LSW	R	POINT 32 BIT
40066	65			MSW	R	FLOATING
40067	66	FREQUENCY [Hz]	6	LSW	R	POINT 32 BIT
40068	67			MSW	R	FLOATING
40069	68	FREQUENCY [Hz]	7	LSW	R	POINT 32 BIT
40070	69			MSW	R	FLOATING
40071	70	FREQUENCY [Hz]	8	LSW	R	POINT 32 BIT
40072	71	ANALOG OUTPUT ENG (SCALED)	1	ENG. SCALED FLOAT ANALOG OUTPUT VALUE	R/W	FLOATING POINT
40073	72	VALUE FLOAT		(default mV/uA)		32 BIT
40074	73	ANALOG OUTPUT ENG (SCALED)	2	ENG. SCALED FLOAT ANALOG OUTPUT VALUE	R/W	FLOATING POINT
40075	74	VALUE FLOAT		(default mV/uA)	I TY VV	32 BIT
40076	75	ANALOG OUTPUT ENG (SCALED)	3	ENG. SCALED FLOAT ANALOG OUTPUT VALUE	R/W	FLOATING POINT
40077	76	VALUE FLOAT		(default mV/uA)	.,,	32 BIT
40078	77	ANALOG OUTPUT ENG (SCALED)	4	ENG. SCALED FLOAT ANALOG OUTPUT VALUE	R/W	FLOATING POINT
40079	78	VALUE FLOAT	4	(default mV/uA)	11/ 11/	32 BIT
40080	79	ANALOG OUTPUT ENG (SCALED) VALUE INTEGER	1	ENG. SCALED INTEGER ANALOG OUTPUT VALUE (default mV/uA)	R/W	SIGNED INTEGER 16 BIT
40081	80	ANALOG OUTPUT ENG (SCALED) VALUE INTEGER	2	ENG. SCALED INTEGER ANALOG OUTPUT VALUE (default mV/uA)	R/W	SIGNED INTEGER 16 BIT
40082	81	ANALOG OUTPUT ENG (SCALED) VALUE INTEGER	3	ENG. SCALED INTEGER ANALOG OUTPUT VALUE (default mV/uA)	R/W	SIGNED INTEGER 16 BIT



ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ
		ANALOG OUTPUT		ENG. SCALED INTEGER		SIGNED
40083	82	ENG (SCALED)	4	ANALOG OUTPUT VALUE	R/W	INTEGER 16
		VALUE INTEGER		(default mV/uA)		BIT

25.2. R-4AO-8DIDO: TABLE OF MODBUS REGISTERS 0x COIL STATUS (FUNCTION CODE 1)

ADDRESS (0x)	OFFSET ADDRESS (0x)	REGISTER	CHANNE L	DESCRIPTION	W/ R	TYPE
1	0	DIGITAL INPUT/OUTPUT	1	DIGITAL INPUT/OUTPUT	RW	BIT
2	1	DIGITAL INPUT/OUTPUT	2	DIGITAL INPUT/OUTPUT	RW	BIT
3	2	DIGITAL INPUT/OUTPUT	3	DIGITAL INPUT/OUTPUT	RW	BIT
4	3	DIGITAL INPUT/OUTPUT	4	DIGITAL INPUT/OUTPUT	RW	BIT
5	4	DIGITAL INPUT/OUTPUT	5	DIGITAL INPUT/OUTPUT	RW	BIT
6	5	DIGITAL INPUT/OUTPUT	6	DIGITAL INPUT/OUTPUT	RW	BIT
7	6	DIGITAL INPUT/OUTPUT	7	DIGITAL INPUT/OUTPUT	RW	BIT
8	7	DIGITAL INPUT/OUTPUT	8	DIGITAL INPUT/OUTPUT	RW	BIT

25.3. R-4AO-8DIDO: TABLE OF MODBUS REGISTERS 1x INPUT STATUS (FUNCTION CODE 2)

ADDRESS (1x)	OFFSET ADDRESS (1x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
10001	0	DIGITAL INPUT	1	DIGITAL INPUT/OUTPUT	RO	BIT
10002	1	DIGITAL INPUT	2	DIGITAL INPUT/OUTPUT	RO	BIT
10003	2	DIGITAL INPUT	3	DIGITAL INPUT/OUTPUT	RO	BIT
10004	3	DIGITAL INPUT	4	DIGITAL INPUT/OUTPUT	RO	BIT
10005	4	DIGITAL INPUT	5	DIGITAL INPUT/OUTPUT	RO	BIT
10006	5	DIGITAL INPUT	6	DIGITAL INPUT/OUTPUT	RO	BIT
10007	6	DIGITAL INPUT	7	DIGITAL INPUT/OUTPUT	RO	BIT



10008	7	DIGITAL	8	DIGITAL	RO	BIT
		INPUT		INPUT/OUTPUT		

26. MODBUS REGISTER TABLE FOR THE R-4RTD-8DIDO PRODUCT

26.1. R-4RTD-8DIDO: MODBUS 4X HOLDING REGISTERS TABLE (FUNCTION CODE 3)

ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40001	0	MACHINE-ID	-	Device identification	RO	UNSIGNED 16 BIT
40002	1	FW REVISION (Maior/Minor)	-	Fw Revision	RO	UNSIGNED 16 BIT
40003	2	FW REVISION (Fix/Build)	-	Fw Revision	RO	UNSIGNED 16 BIT
40004	3	FW CODE	-	Fw Code	RO	UNSIGNED 16 BIT
40005	4	BOARD-ID	-	Hw Revision	RO	UNSIGNED 16 BIT
40006	5	MODBUS ID	-	-	RO	UNSIGNED 16 BIT
40007	6	BOOT REVISION (Maior/Minor)	-	Bootloader Revision	RO	UNSIGNED 16 BIT
40008	7	BOOT REVISION (Fix/Build)	-	Bootloader Revision	RO	UNSIGNED 16 BIT
40009	8	BOOTLOADER CODE	-	Bootloader Code	RO	UNSIGNED 16 BIT
40010	9	RESERVED	-	-	RO	UNSIGNED 16 BIT
40011	10	RESERVED	-	-	RO	UNSIGNED 16 BIT
40012	11	RESERVED	-	-	RO	UNSIGNED 16 BIT
40013	12	COMMAND	-	Command Register 0xC1A0 = reset device 0x0100 = set factory default	RW	UNSIGNED 16 BIT
40014 40029	1339	RESERVED	-	-	RO	UNSIGNED 16 BIT
40030	29	STATUS	-	bit 0 : OVERRANGE RTD1 bit 1 : OVERRANGE RTD2 bit 2 : OVERRANGE RTD3 bit 3 : OVERRANGE RTD4 bit 4 : BURN RTD1 bit 5 : BURN RTD2 bit 6 : BURN RTD3 bit 7 : BURN RTD4	RO	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE	
				bit 15 : FAIL			
40031	30	DIGITAL OUTPUT	18	bit 0 = OUTPUT 1 bit 1 = OUTPUT 2 bit 7= OUTPUT 8	RW	UNSIGNED 16 BIT	
40032	31	DIGITAL INPUT	18	bit 0 = INPUT 1 bit 1 = INPUT 2 bit 7= INPUT 8	RO	UNSIGNED 16 BIT	
40033	32	CHANNEL	1	TEMADEDATUDE	MSW RO	FLOAT 32	
40034	33	TEMPERATURE FLOAT	1	TEMPERATURE	LSW RO	BIT	
40035	34	CHANNEL TEMPERATURE	2	TEMPERATURE	MSW RO LSW	FLOAT 32 BIT	
40036	35	FLOAT			RO	ы	
40037	36	CHANNEL TEMPERATURE	3	TEMPERATURE	RO LSW	FLOAT 32	
40038	37	FLOAT		3 TEIWI EIVATORE		BIT	
40039	38	CHANNEL TEMPERATURE	4	TEMPERATURE	MSW RO	FLOAT 32 BIT	
40040	39	FLOAT	4	TEMPERATURE	LSW RO		
40041	32	CHANNEL		DECICTANCE	MSW RO	FLOAT 32	
40042	33	RESITANCE FLOAT	1	RESISTANCE	LSW RO	BIT	
40043	34	CHANNEL			MSW RO	FLOAT 32	
40044	35	RESITANCE FLOAT	2	RESISTANCE	LSW RO	BIT	
40045	36	CHANNEL		DEGIG= - 1:05	MSW RO	FLOAT 32	
40046	37	RESITANCE FLOAT	3	RESISTANCE	LSW RO	BIT	
40047	38	CHANNEL	_		MSW RO	FLOAT 32	
40048	39	RESITANCE FLOAT	4	RESISTANCE	LSW RO	BIT	
40049	48	CHANNEL ENG.			MSW RO	FLOAT 32	
40050	49	VALUE FLOAT	1	RESISTANCE	LSW RO	BIT	





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40051	50	CHANNEL ENG.	2	RESISTANCE	MSW RO	FLOAT 32
40052	51	VALUE FLOAT	2	RESISTANCE	LSW RO	BIT
40053	52	CHANNEL ENG.	3	DECISTANCE	MSW RO	FLOAT 32
40054	53	VALUE FLOAT	3	RESISTANCE	LSW RO	BIT
40055	54	CHANNEL ENG.	4	RESISTANCE	MSW RO	FLOAT 32
40056	55	VALUE FLOAT	4	RESISTANCE	LSW RO	BIT
40057	56	CHANNEL TEMPERATURE INT	1	TEMPERATURE	RO	SIGNED 16 BIT
40058	57	CHANNEL TEMPERATURE INT	2	TEMPERATURE	RO	SIGNED 16 BIT
40059	58	CHANNEL TEMPERATURE INT	3	TEMPERATURE	RO	SIGNED 16 BIT
40060	59	CHANNEL TEMPERATURE INT	4	TEMPERATURE	RO	SIGNED 16 BIT
40061	60	ADC RAW	1	ADC RAW VALUE	RO	UNSIGNED 16 BIT
40062	61	ADC RAW	2	ADC RAW VALUE	RO	UNSIGNED 16 BIT
40063	62	ADC RAW	3	ADC RAW VALUE	RO	UNSIGNED 16 BIT
40064	63	ADC RAW	4	ADC RAW VALUE	RO	UNSIGNED 16 BIT
41847	1846	COUNTER	1	DIGITAL INPUT COUNTER MSW	RW	UNSIGNED
41848	1847	COUNTER	1	DIGITAL INPUT COUNTER LSW	RW	32 BIT
41849	1848	COUNTER	2	DIGITAL INPUT COUNTER MSW	RW	UNSIGNED
41850	1849	COUNTER	2	DIGITAL INPUT COUNTER LSW	RW	32 BIT
41851	1850	COUNTER	3	DIGITAL INPUT COUNTER MSW	RW	UNSIGNED 32 BIT
41852	1851			DIGITAL INPUT COUNTER LSW	RW	
41853	1852	COUNTER	4	DIGITAL INPUT COUNTER MSW	RW	UNSIGNED 32 BIT



ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	ТҮРЕ	
41854	1853			DIGITAL INPUT COUNTER LSW	RW		
41855	1854	COLINTER	5	DIGITAL INPUT COUNTER MSW	RW	UNSIGNED	
41856	1855	COUNTER	5	DIGITAL INPUT COUNTER LSW	RW	32 BIT	
41857	1856	COUNTER	6	DIGITAL INPUT COUNTER MSW	RW	UNSIGNED	
41858	1857	COUNTER	О	DIGITAL INPUT COUNTER LSW	RW	32 BIT	
41859	1858	COUNTER	7	DIGITAL INPUT COUNTER MSW	RW	UNSIGNED 32 BIT	
41860	1859			DIGITAL INPUT COUNTER LSW	RW		
41861	1860	COUNTER	8	DIGITAL INPUT COUNTER MSW	RW	UNSIGNED 32 BIT	
41862	1861			DIGITAL INPUT COUNTER LSW	RW		

26.2. R-4RTD-8DIDO: TABLE OF MODBUS REGISTERS 0x COIL STATUS (FUNCTION CODE 1)

ADDRESS (0x)	OFFSET ADDRESS (0x)	REGISTER	CHANNE L	DESCRIPTION	W/ R	TYP E
1	0	DIGITAL INPUT/OUTPU T	1	DIGITAL INPUT/OUTPUT	RW	BIT
2	1	DIGITAL INPUT/OUTPU T	2	DIGITAL INPUT/OUTPUT	RW	BIT
3	2	DIGITAL INPUT/OUTPU T	3	DIGITAL INPUT/OUTPUT	RW	BIT
4	3	DIGITAL INPUT/OUTPU T	4	DIGITAL INPUT/OUTPUT	RW	BIT
5	4	DIGITAL INPUT/OUTPU T	5	DIGITAL INPUT/OUTPUT	RW	BIT
6	5	DIGITAL INPUT/OUTPU T	6	DIGITAL INPUT/OUTPUT	RW	BIT
7	6	DIGITAL INPUT/OUTPU T	7	DIGITAL INPUT/OUTPUT	RW	BIT

8	7	DIGITAL	8	DIGITAL	RW	BIT
		INPUT/OUTPU		INPUT/OUTPUT		
		Т				

26.3. R-4RTD-8DIDO: TABLE OF MODBUS REGISTERS 1x INPUT STATUS (FUNCTION CODE 2)

ADDRESS (1x)	OFFSET ADDRESS (1x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
10001	0	DIGITAL INPUT	1	DIGITAL INPUT/OUTPUT	RO	BIT
10002	1	DIGITAL INPUT	2	DIGITAL INPUT/OUTPUT	RO	BIT
10003	2	DIGITAL INPUT	3	DIGITAL INPUT/OUTPUT	RO	BIT
10004	3	DIGITAL INPUT	4	DIGITAL INPUT/OUTPUT	RO	BIT
10005	4	DIGITAL INPUT	5	DIGITAL INPUT/OUTPUT	RO	BIT
10006	5	DIGITAL INPUT	6	DIGITAL INPUT/OUTPUT	RO	BIT
10007	6	DIGITAL INPUT	7	DIGITAL INPUT/OUTPUT	RO	BIT
10008	7	DIGITAL INPUT	8	DIGITAL INPUT/OUTPUT	RO	BIT

27. R-SG3: LOAD CELL CALIBRATION THROUGH MODBUS REGISTERS

It is not always possible to use the Web server to calibrate the load cell, for example if a PLC or an HMI is to be used.

It is also possible to implement the calibration of a load cell in a simple way by sending Modbus RTU / TCP-IP commands according to the type of operation chosen.

27.1. CELL CALIBRATION PROCEDURE WITH FACTORY PARAMETERS AND WITH TARE ACQUIRED FROM THE FIELD

- 1) Place the tare on the load cell
- 2) Wait for the measurement to stabilize
- 3) Write the decimal value 49914 in the COMMAND REGISTER
- 4) The device saves the new tare value in flash and resets the COMMAND REGISTER value
- 5) The load cell is calibrated



27.2. CELL CALIBRATION PROCEDURE WITH FACTORY PARAMETERS AND MANUALLY ENTERED TARE

- 1) Write the tare value in technical units in the FACTORY MANUAL TARE registers
- 2) Write the decimal value 50773 in the COMMAND REGISTER
- 3) The device acquires the new flash tare value and resets the COMMAND REGISTER value
- 4) The load cell is calibrated

27.3. PROCEDURE FOR CALIBRATION OF THE CELL WITH A STANDARD WEIGHT

- 1) Place the tare on the load cell
- 2) Wait for the measurement to stabilize
- 3) Write the decimal value 49914 in the COMMAND REGISTER
- 4) The device saves the new tare value in flash and resets the COMMAND REGISTER value
- 5) Enter the weight value of the standard weight in technical units in the STANDARD WEIGHT VALUE registers
- 6) Place the standard weight on the load cell
- 7) Wait for the measurement to stabilize
- 8) Write the decimal value 50700 in the COMMAND REGISTER
- 9) The device saves the new standard weight value in flash and resets the COMMAND REGISTER value
- 10) The load cell is calibrated

28. MODBUS REGISTER TABLE FOR THE R-2AI-6DIDO PRODUCT

28.1. R-2AI-6DIDO: MODBUS 4X HOLDING REGISTERS TABLE (FUNCTION CODE 3)

ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40001	0	MACHINE-ID	-	Device identification	RO	UNSIGNED 16 BIT
40002	1	FW REVISION (Maior/Minor)	-	Fw Revision	RO	UNSIGNED 16 BIT
40003	2	FW REVISION (Fix/Build)	-	Fw Revision	RO	UNSIGNED 16 BIT
40004- 40018	317	Reserved	-			UNSIGNED 16 BIT
40019	18	COMMAND	-	256 decimal = set factory default 49568 decimal = reboot device	RW	UNSIGNED 16 BIT
40020	19	STATUS	-	bit 0 : Digital I/O Fault bit 1 : Digital VBUS present bit 2 : Ain1 Overrange bit 3 : Ain2 Overrange	RO	UNSIGNED 16 BIT





ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTI	ON	W/R	TYPE
40021- 40026	2025	Reserved					UNSIGNED 16 BIT
40027	26	Digital I/O state :		bit 0 = I/O 1,bi	t 5= I/O 6	RW	UNSIGNED 16 BIT
40028	27	Digital Input state		: bit 0 = I/O 1,	.bit 5= I/O	RO	UNSIGNED 16 BIT
40029- 40030	28-29	COUNTER	1	DIGITAL COUNTER	INPUT	RW	UNSIGNED 32 BIT
40031- 40032	30-31	COUNTER	2	DIGITAL COUNTER	INPUT	RW	UNSIGNED 32 BIT
40033- 40034	32-33	COUNTER	3	DIGITAL COUNTER	INPUT	RW	UNSIGNED 32 BIT
40035- 40036	34-35	COUNTER	4	DIGITAL COUNTER	INPUT	RW	UNSIGNED 32 BIT
40037- 40038	36-37	COUNTER	5	DIGITAL COUNTER	INPUT	RW	UNSIGNED 32 BIT
40039- 40040	38-39	COUNTER	6	DIGITAL COUNTER	INPUT	RW	UNSIGNED 32 BIT
40041- 40042	40-41	PERIOD	1	PERIOD [s] INPUT	DIGITAL	R	FLOATING POINT 32 BIT
40043- 40044	42-43	PERIOD	2	PERIOD [s] INPUT	DIGITAL	R	FLOATING POINT 32 BIT
40045- 40046	44-45	PERIOD	3	PERIOD [s] INPUT	DIGITAL	R	FLOATING POINT 32 BIT
40047- 40048	46-47	PERIOD	4	PERIOD [s] INPUT	DIGITAL	R	FLOATING POINT 32 BIT
40049- 40050	48-49	PERIOD	5	PERIOD [s] INPUT	DIGITAL	R	FLOATING POINT 32 BIT
40051- 40052	50-51	PERIOD	6	PERIOD [s] INPUT	DIGITAL	R	FLOATING POINT 32 BIT
40053- 40054	52-53	FREQUENCY	1	FREQUENCY DIGITAL INPUT	[Hz]	R	FLOATING POINT 32 BIT
40055- 40056	54-55	FREQUENCY	2	FREQUENCY DIGITAL INPUT	[Hz]	R	FLOATING POINT 32 BIT



ADDRESS (4x)	OFFSET (4x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
40057- 40058	56-57	FREQUENCY	3	FREQUENCY [Hz] DIGITAL INPUT	R	FLOATING POINT 32 BIT
40059- 40060	58-59	FREQUENCY	4	FREQUENCY [Hz] DIGITAL INPUT	R	FLOATING POINT 32 BIT
40061- 40062	60-61	FREQUENCY	5	FREQUENCY [Hz] DIGITAL INPUT	R	FLOATING POINT 32 BIT
40063- 40064	62-63	FREQUENCY	6	FREQUENCY [Hz] DIGITAL INPUT	R	FLOATING POINT 32 BIT
40065	64	ADC RAW	1	ADC 16 BIT RAW VALUE	R	UNSIGNED 16 BIT
40066	65	ADC RAW	2	ADC 16 BIT RAW VALUE	R	UNSIGNED 16 BIT
40067- 40068	66-67	Analog Input	1	ANALOG INPUT VALUE	R	FLOATING POINT 32 BIT
40069- 40070	68-69	Analog Input	2	ANALOG INPUT VALUE	R	FLOATING POINT 32 BIT
40071- 40072	70-71	Analog Input Engineering Value	1	ANALOG INPUT ENGINEERING (SCALED) VALUE	R	FLOATING POINT 32 BIT
40073- 40074	72-73	Analog Input Engineering Value	2	ANALOG INPUT ENGINEERING (SCALED) VALUE	R	FLOATING POINT 32 BIT

28.2. R-2AI-6DIDO: TABLE OF MODBUS REGISTERS 0x COIL STATUS (FUNCTION CODE 1)

ADDRESS (0x)	OFFSET ADDRESS (0x)	REGISTER	CHANNE L	DESCRIPTION	W/ R	TYP E
1	0	DIGITAL INPUT/OUTPU T	1	DIGITAL INPUT/OUTPUT	RW	BIT
2	1	DIGITAL INPUT/OUTPU T	2	DIGITAL INPUT/OUTPUT	RW	BIT
3	2	DIGITAL INPUT/OUTPU T	3	DIGITAL INPUT/OUTPUT	RW	BIT

4	3	DIGITAL INPUT/OUTPU T	4	DIGITAL INPUT/OUTPUT	RW	BIT
5	4	DIGITAL INPUT/OUTPU T	5	DIGITAL INPUT/OUTPUT	RW	BIT
6	5	DIGITAL INPUT/OUTPU T	6	DIGITAL INPUT/OUTPUT	RW	BIT

28.3. R-2AI-6DIDO: TABLE OF MODBUS REGISTERS 1x INPUT STATUS (FUNCTION CODE 2)

ADDRESS (1x)	OFFSET ADDRESS (1x)	REGISTER	CHANNEL	DESCRIPTION	W/R	TYPE
10001	0	DIGITAL INPUT	1	DIGITAL INPUT/OUTPUT	RO	BIT
10002	1	DIGITAL INPUT	2	DIGITAL INPUT/OUTPUT	RO	BIT
10003	2	DIGITAL INPUT	3	DIGITAL INPUT/OUTPUT	RO	BIT
10004	3	DIGITAL INPUT	4	DIGITAL INPUT/OUTPUT	RO	BIT
10005	4	DIGITAL INPUT	5	DIGITAL INPUT/OUTPUT	RO	BIT
10006	5	DIGITAL INPUT	6	DIGITAL INPUT/OUTPUT	RO	BIT


29. CABLE HARNESS FOR MODELS WITH DOUBLE ETHERNET PORT

Models with double Ethernet port can be connected in daisy chain and take advantage of the Lan Fault Bypass.

29.1. CHAIN ETHERNET CONNECTION (DAISY CHAIN)

Using the daisy chain connection it is not necessary to use switches to connect the devices. An example (in this case on R-16DI-8DO) of connection of 3 devices is as follows:




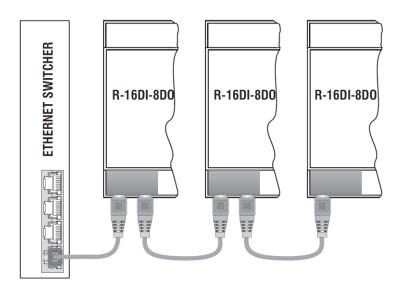

ATTENTION!


IT IS NOT POSSIBLE CREATE LOOPS WITH ETHERNET CABLES

If it is necessary to connect the devices to the switches, correct wiring is as follows:

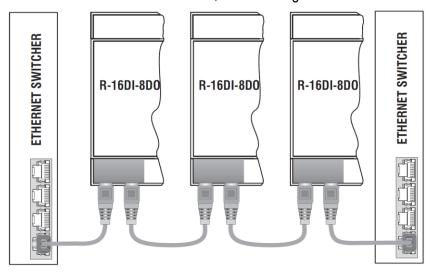



In the Ethernet wiring there must be no loop, otherwise the communication will not work, some examples of incorrect wiring are the following:

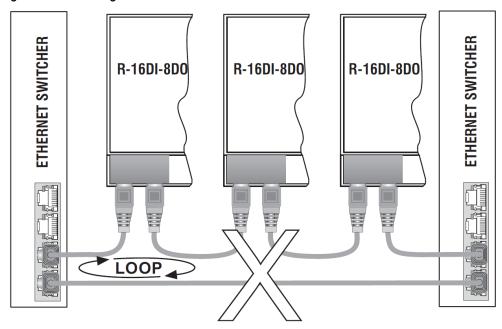


29.2. LAN FAULT-BYPASS FUNCTION

The LAN fault-bypass function allows you to keep the connection between the two Ethernet ports of the device ON, in the event of power failure problems.

If a device turns off, the chain is not interrupted and the devices downstream of the switched-off one will still be accessible.

This function has a limited duration: the connection remains active for a few days, typically 4.

The Lan fault-bypass function requires that the sum of the lengths of the two cables connected to the switched off module is less than 100m.

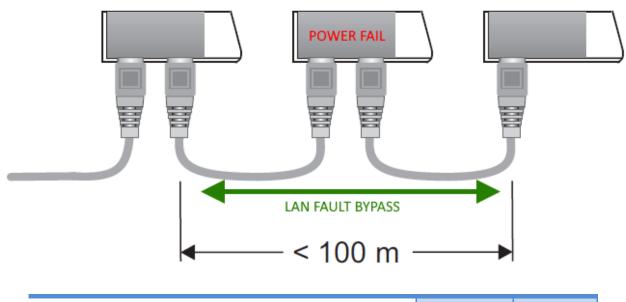



30. SEARCH AND MODIFICATION OF THE DEVICE IP WITH THE SENECA DISCOVERY DEVICE TOOL

The search and modification of an IP of the device can be performed via the Seneca Discovery Device software

If Seneca devices that are not part of the R series are also used, it is more convenient to set the addresses with a single software.

When in the R series device the STS LED is on steady, it is possible to obtain the IP address which has been set using the "Seneca Discovery Device" tool too.


The software can be downloaded from:

https://www.seneca.it/en/linee-di-prodotto/software/easy/sdd


Pressing the "search" button starts the search for all Seneca devices present in the network even if with IP addresses not compatible with the current PC configuration:



It is now possible to change the address by pressing the "Assign" button:





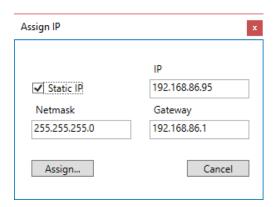

The software works on layer 2 level and it is therefore not necessary to have an Ethernet configuration compatible with the device you are looking for.