

USER MANUAL

MULTIPROTOCOL “KEY-C” GATEWAYS SERIES

MODBUS TO CLOUD (MQTTs/HTTPs) GATEWAYS



SENECA S.r.l.

Via Austria 26 – 35127 – Z.I. - PADOVA (PD) - ITALY

Tel. +39.049.8705355 – 8705355 Fax +39 049.8706287

+

www.seneca.it

ORIGINAL INSTRUCTIONS

CAUTION

SENECA does not guarantee that all specifications and/or aspects of the product and firmware, included in them, will meet the requirements of the actual final application even if the product referred to in this documentation is in compliance with the technological state of the art.

The user assumes full responsibility and/or risk with regard to the configuration of the product to achieve the intended results in relation to the specific installation and/or end application.

SENECA may, with prior agreement, provide consultancy services for the successful completion of the final application, but under no circumstances can it be held responsible for its proper functioning.

The SENECA product is an advanced product, the operation of which is specified in the technical documentation supplied with the product itself and/or can be downloaded, if desired prior to purchase, from the www.seneca.it website.

SENECA has a policy of continuous development and accordingly reserves the right to make and/or introduce - without prior notice - changes and/or improvements to any product described in this documentation.

The product described in this documentation may solely and exclusively be used by personnel qualified for the specific activity and in accordance with the relevant technical documentation, with particular attention being paid to the safety instructions.

Qualified personnel means personnel who, on the basis of their training, competence and experience, are able to identify risks and avoid potential hazards that could occur during the use of this product.

SENECA products may only be used for the applications and in the manner described in the technical documentation relating to the products themselves.

To ensure proper operation and prevent the occurrence of malfunctions, the transport, storage, installation, assembly, maintenance of SENECA products must comply with the safety instructions and environmental conditions specified in this documentation.

SENECA's liability in relation to its products is governed by the general conditions of sale, which can be downloaded from www.seneca.it.

Neither SENECA nor its employees, within the limits of applicable law, will in any case be liable for any lost profits and/or sales, loss of data and/or information, higher costs incurred for goods and/or replacement services, damage to property and/or persons, interruption of activities and/or provision of services, any direct, indirect, incidental, pecuniary and non-pecuniary, consequential damages in any way caused and/or caused, due to negligence, carelessness, incompetence and/or other liabilities arising from the installation, use and/or inability to use the product.

CONTACT US

Technical support	supporto@seneca.it
Product information	commerciale@seneca.it

Document revisions

DATE	REVISION	NOTES	AUTHOR
14/02/2025	0	First revision	MM
24/02/2025	1	Added chapter on the meaning of LEDs	MM
01/07/2025	2	Added logic rules Added datalogger Added Cloud Seneca Cloudbox 2 Document revision	MM
06/10/2025	3	Modified calculation by no. of logs in flash memory. Added TAG scaling Added sampling group management Added Cloud editing of group sampling time Modified operating block diagram	MM
17/03/2026	4	Fixed the behaviour of logic rule actions when period = 0 Aligned with firmware rev 119	MM
15/04/2026	5	Fixed support for remote Modbus TCP/IP clients Fixed various typos Fixed support for Modbus TCP/IP servers Fixed writes from the cloud to the device Fixed timer operation scheme Removed 'send on value change' mode Added sections on certificates, message sending and clock synchronisation Explained the watchdog function Fixed diagnostics Screenshots updated to reflect the latest firmware version 119 Behaviour of the initial value specified The concept of tags and their states explained in greater detail Tables for cloud publishing updated to firmware version 119 and examples of publishing added.	MM

This document is the property of SENECA srl.
Copies and reproduction are prohibited unless authorised.

TABLE OF CONTENTS

1.	DESCRIPTION	7
1.1.	MODBUS, MQTTS, HTTPS Protocols	7
1.2.	FEATURES OF THE "KEY" SERIES COMMUNICATION PORTS.....	7
2.	DEVICE HARDWARE REVISION	8
3.	FLEX TECHNOLOGY FOR PROTOCOL CHANGE	9
3.1.	CHANGING PROTOCOLS WITH THE SENECA DISCOVERY DEVICE SOFTWARE	10
4.	LED MEANING	11
4.1.	Z-KEY-C LED	11
4.2.	R-KEY-LT-C LED	12
4.3.	Z-KEY-2ETH-C LED	13
5.	ETHERNET PORT.....	14
6.	FIRMWARE UPDATE.....	14
7.	DATA ACQUISITION AND PROCESSING, DATA TRANSMISSION AND ALARMS	15
7.1.	DATA BUS AND MODBUS INDUSTRIAL PROTOCOLS	16
7.1.1.	MODBUS PROTOCOLS	16
7.2.	TAGS DATA SHARED MEMORY	17
7.3.	DATA LOGGER AND CACHE	17
7.4.	TAG PROCESSING: LOGICAL RULES	18
7.5.	CONNECTION TO CLOUDS VIA "EASY CLOUD" TECHNOLOGY	18
7.6.	ALARMS.....	18
8.	OPERATING MODE	19
8.1.	MODBUS MASTER / CLIENT TO CLOUD	19
8.2.	THE TAG	20
8.3.	MODBUS TCP-IP SERVER.....	21
8.4.	SIMPLIFIED TAG DIAGNOSTICS	22
8.5.	EXTENDED TAG DIAGNOSTICS	22
9.	"-C" GATEWAY WEBSERVERS	24
9.1.	STEP BY STEP GUIDE FOR THE FIRST ACCESS TO THE WEBSERVER	24
10.	WEBSERVER DEVICE CONFIGURATION	25
10.1.	"SETUP" PAGE.....	25
10.1.1.	GENERAL CONFIGURATION PARAMETERS	25

10.1.	"DATA LOGGER" PAGE	29
10.2.	"SETUP TAG" PAGE	29
10.2.1.	Real-time view of the Modbus Gateway: "STATUS" PAGE	35
10.3.	"SETUP TEXT MESSAGE" PAGE (ALARM)	36
10.4.	"SETUP TIMER" PAGE	36
10.5.	"SETUP RULES" PAGE	38
10.5.1.	RULE CONFIGURATION	38
10.5.2.	IF CONDITION: TYPE	39
10.5.3.	IF CONDITION OPERATOR	42
10.5.4.	THEN/ELSE ACTION	44
10.6.	"CLOUD SETUP" PAGE	49
10.6.1.1.	CERTIFICATES	55
10.6.2.	DIREL ADM4.0	55
10.7.	"FIRMWARE UPDATE" PAGE	55
10.8.	"UTC TIME SETUP" PAGE	56
10.9.	"CERTIFICATE/DATABASE UPDATE" PAGE	56
10.10.	"SERIAL TRAFFIC MONITOR" PAGE	56
11.	WRITING FROM CLOUD TO DEVICE	58
11.1.	WRITE TAGS FROM THE CLOUD TO THE DEVICE VIA MQTT (GENERIC CLOUD)	58
11.1.1.	WRITING A TAG FROM THE CLOUD WITHOUT EXPLICITLY SPECIFYING THE NAME IN THE PAYLOAD	58
11.1.2.	WRITING A TAG FROM THE CLOUD BY EXPLICITLY SPECIFYING THE NAME IN THE PAYLOAD	59
11.1.3.	WRITING MULTIPLE TAGS FROM THE CLOUD	59
12.	SENDING MESSAGES AND ALERTS TO THE MQTT CLOUD	60
13.	MODIFYING SAMPLING TIME FROM MQTT	61
14.	RESETTING THE DEVICE TO ITS FACTORY CONFIGURATION	62
15.	CLOCK SYNCHRONISATION	62
16.	CERTIFICATES	62
16.1.	MQTT CA CERTIFICATE	63
16.2.	MQTT CLIENT CERTIFICATE	63
16.3.	MQTT CLIENT CERTIFICATE PRIVATE KEY	63
16.4.	SECURITY RECOMMENDATIONS	64
16.5.	File format	64
17.	TEMPLATE EXCEL	65
18.	INSTALLING MULTIPLE DEVICES IN A NETWORK USING THE "DHCP FAIL ADDRESS".	65
19.	THE DB9 RS232 CABLE	65

20.	SUPPORTED MODBUS COMMUNICATION PROTOCOLS	66
20.1.	Supported Modbus function codes.....	66
21.	INFORMATION ABOUT MODBUS REGISTERS	67
21.1.	NUMBERING OF "0-BASED" OR "1-BASED" MODBUS ADDRESSES	67
21.2.	NUMBERING OF MODBUS ADDRESSES WITH "0-BASED" CONVENTION	68
21.3.	NUMBERING OF MODBUS ADDRESSES WITH "1 BASED" CONVENTION (STANDARD).....	68
21.4.	BIT CONVENTION WITHIN A MODBUS HOLDING REGISTER	69
21.5.	MSB and LSB BYTE CONVENTION WITHIN A MODBUS HOLDING REGISTER.....	69
21.6.	REPRESENTATION OF A 32-BIT VALUE IN TWO CONSECUTIVE MODBUS HOLDING REGISTERS	70
21.7.	TYPE OF 32-BIT FLOATING POINT DATA (IEEE 754).....	71

1. DESCRIPTION

The Z-KEY-C, R-KEY-LT-C, Z-KEY-2ETH-C products allow you to acquire data from serial or ethernet buses based on Modbus protocols and send them to clouds with the MQTT(s) or http(s) protocols.

Writing from cloud to Modbus is also supported.

1.1. MODBUS, MQTTS, HTTPS PROTOCOLS



The supported Modbus protocols are:

Modbus RTU Master

Modbus RTU Slave

Modbus ASCII Master

Modbus ASCII Slave

Modbus TCP-IP Server

Modbus TCP-IP Client

For further information on these protocols, see the Modbus specification website:

<https://www.modbus.org/specs.php>



The MQTT protocol supported is version 3.1.1



The HTTPS protocol for tags publication on cloud is based on API Rest



The TLS protocol supported is version 1.2



Keys certifications according to X.509 standard


1.2. FEATURES OF THE "KEY" SERIES COMMUNICATION PORTS

PRODUCT	ETHERNET PORTS No.	SERIAL PORTS NO.	ISOLATED SERIAL PORTS
Z-KEY-C	1	2	Yes, both ports
R-KEY-LT-C	1	1	NO
Z-KEY-2ETH-C	2	2	Yes, both ports

2. DEVICE HARDWARE REVISION

With a view to continuous improvement, Seneca updates and makes the hardware of its devices increasingly more sophisticated. It is possible to know the hardware revision of a product via the label on the side of the device.

An example of an R-KEY-LT product label is the following:

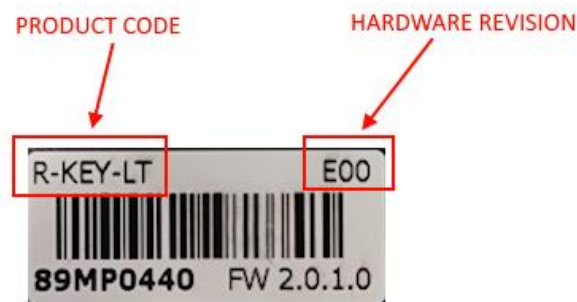

The label also shows the firmware revision present in the device (in this case 2.0.1.0) at the time of sale, the hardware revision (in this case) is E00.

To improve performance or extend functionality, Seneca recommends updating the firmware to the latest available version (see the section dedicated to the product on www.seneca.it).

3. FLEX TECHNOLOGY FOR PROTOCOL CHANGE



Starting from the hardware revision indicated in the following table, the KEY series devices include Flex technology.

GATEWAY	FLEX TECHNOLOGY SUPPORTED BY HARDWARE REVISION
Z-KEY	"G00"
R-KEY-LT	"E00"
Z-KEY-2ETH	"C00"

Flex allows you to change the combination of industrial communication protocols supported by the gateways at will from a list of available ones, the development is continuously updated, for a complete list refer to the page: <https://www.seneca.it/flex/>


Some examples of supported protocols are:




The gateway thus becomes 'universal' and compatible with Siemens, Rockwell, Schneider, etc. systems without the need to purchase different hardware.

3.1. CHANGING PROTOCOLS WITH THE SENECA DISCOVERY DEVICE SOFTWARE

From revision 2.8 the Seneca Discovery Device software identifies the devices that support the "Flex" technology:

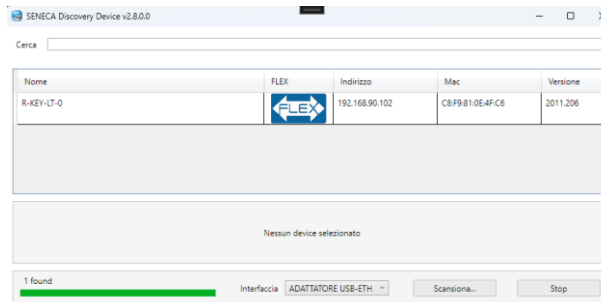

For example, in the case in the figure it is possible to press the "Change Protocol" button and select the destination protocol from those in the list:

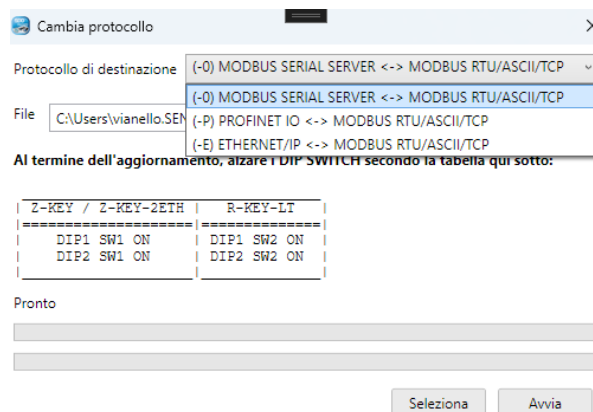

At the end of the operation, bring (only at the first power-on) the dip switches 1 and 2 to "ON" to force the device to default (see also the chapter "RESETTING THE DEVICE TO ITS FACTORY CONFIGURATION").

Always refer to the user manual of the communication protocol installed in the device by downloading it from the Seneca website.

4. LED MEANING

The devices are equipped with LEDs whose meaning is as follows:

4.1. Z-KEY-C LED

LED	STATUS
PWR	Steady on: device powered and IP address set
	Flashing: IP address not yet set
	Off: device not powered
COM	Steady on: No cloud connection error
	Flashing: Cloud connection error (for more details on the error, refer to the webserver status page)
	Off: device not powered
TX1	Flashing: data transmission on serial port #1
	Off: no transmission on serial port #1
RX1	Flashing: data reception on serial port #1
	Steady on: check wiring on serial port #1
	Off: no reception on serial port #1
TX2	Flashing: data transmission on serial port #2
	Off: no transmission on serial port #2
RX2	Flashing: data reception on serial port #2
	Steady on: check wiring on serial port #2
	Off: no reception on serial port #2
ETH ACT (GREEN)	Flashing: presence of data on ethernet port
	Steady on: ethernet port connected but no data present
	Off: check wiring of the ethernet port

ETH LNK (YELLOW)	<p>Steady on: ethernet cable connected</p> <p>Off: check the wiring of the ethernet port</p>
---------------------	--

4.2. R-KEY-LT-C LED

LED	STATUS
PWR	<p>Steady on: device powered and IP address set</p> <p>Flashing: IP address not yet set</p> <p>Off: device not powered</p>
COM	<p>Steady on: No cloud connection error</p> <p>Flashing: Cloud connection error (for more details on the error, refer to the webserver status page)</p> <p>Off: device not powered</p>
TX	<p>Flashing: data transmission on serial port</p> <p>Off: no transmission on serial port</p>
RX	<p>Flashing: data reception on serial port</p> <p>Steady on: check wiring on serial port</p> <p>Off: no reception on serial port</p>
ETH ACT (GREEN)	<p>Flashing: presence of data on ethernet port</p> <p>Steady on: ethernet port connected but no data present</p> <p>Off: check wiring of the ethernet port</p>
ETH LNK (YELLOW)	<p>Steady on: ethernet cable connected</p> <p>Off: check the wiring of the ethernet port</p>

4.3. Z-KEY-2ETH-C LED

LED	STATUS
PWR	<p>Steady on: device powered and IP address set</p> <p>Flashing: IP address not yet set</p> <p>Off: device not powered</p>
COM	<p>Steady on: No cloud connection error</p> <p>Flashing: Cloud connection error (for more details on the error, refer to the webserver status page)</p> <p>Off: device not powered</p>
TX1	<p>Flashing: data transmission on serial port #1</p> <p>Off: no transmission on serial port #1</p>
RX1	<p>Flashing: data reception on serial port #1</p> <p>Steady on: check wiring on serial port #1</p> <p>Off: no reception on serial port #1</p>
TX2	<p>Flashing: data transmission on serial port #2</p> <p>Off: no transmission on serial port #2</p>
RX2	<p>Flashing: data reception on serial port #2</p> <p>Steady on: check wiring on serial port #2</p> <p>Off: no reception on serial port #2</p>
ET1	<p>Flashing: presence of data on ethernet port #1</p> <p>Steady on: ethernet port #1 connected but no data present</p> <p>Off: check wiring of ethernet port #1</p>
ET2	<p>Flashing: presence of data on ethernet port #2</p> <p>Steady on: ethernet port #2 connected but no data present</p> <p>Off: check wiring of ethernet port #2</p>

5. ETHERNET PORT

The factory configuration of the Ethernet port is:

STATIC IP: 192.168.90.101

SUBNET MASK: 255.255.255.0

GATEWAY: 192.168.90.1

Multiple devices must not be inserted on the same network with the same static IP.

 **ATTENTION!**

**DO NOT CONNECT 2 OR MORE FACTORY-CONFIGURED DEVICES ON THE SAME NETWORK, OR THE DEVICE WILL NOT WORK
(CONFLICT OF IP ADDRESSES 192.168.90.101)**

6. FIRMWARE UPDATE

In order to improve, add or optimize the functions of the product, Seneca releases firmware updates on the device section on the www.seneca.it website

The firmware update is performed using Seneca tools or the webserver.

 **ATTENTION!**

NOT TO DAMAGE THE DEVICE DO NOT REMOVE THE POWER SUPPLY DURING THE FIRMWARE UPDATE OPERATION.

 **ATTENTION!**


THE FIRMWARE UPDATE WILL DELETE THE DATA ACQUIRED BY THE DATALOGGER. SAVE THE DATA BEFORE PROCEEDING WITH THE UPDATE.

7. DATA ACQUISITION AND PROCESSING, DATA TRANSMISSION AND ALARMS

The devices in the 'KEY-C' series allow data to be acquired from buses (via the Modbus RTU/ASCII and Modbus TCP-IP industrial communication protocols). This data is saved in a shared memory and can be processed using scaling or logic rules. Once processed, the data is saved in the internal memory and can be extracted via the web server or sent to the cloud or FTP/Email servers, etc.

Alarms are generated by logic rules and can also be sent to the cloud.

Please refer to the following block diagram:

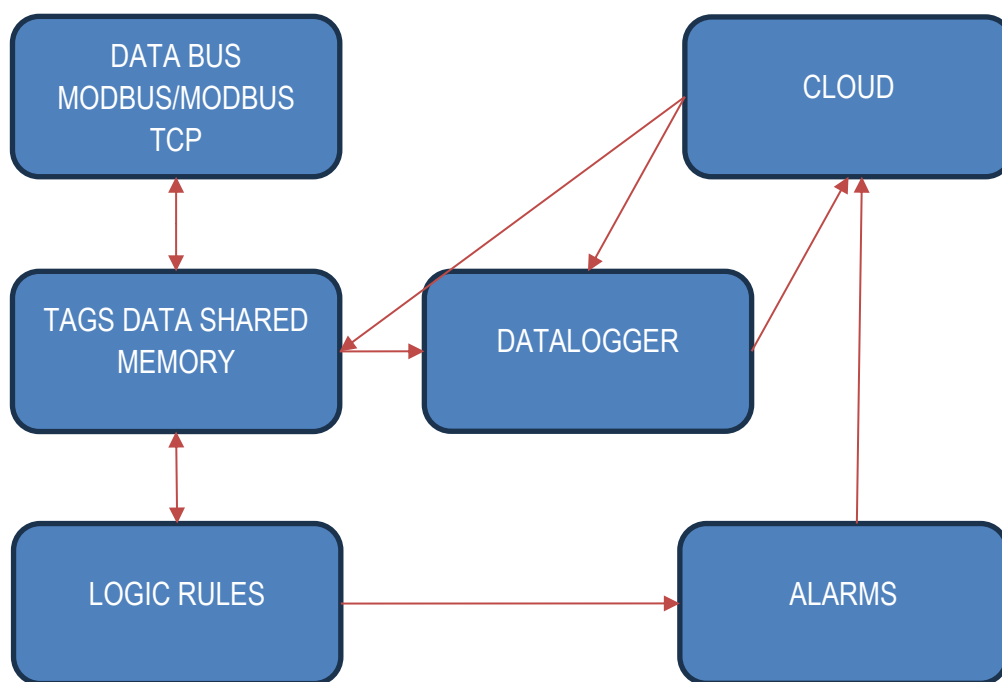

Data acquisition (Tags) in buses (Data Bus) takes place via Modbus industrial protocols.

This data flows into shared memory (Tags Data Shared Memory), where logic rules (Logic Rules) perform data processing.

The data logger acquires the processed data from the Shared Memory, stores it and sends it to the cloud.

Logic rules generate alarms that can be sent to the Cloud in real time.

The Cloud can access and write already processed data in the Shared Memory and can change group sampling time.

The shared tag memory is also accessible via Modbus TCP/IP; up to three remote Modbus TCP/IP clients can be managed.

Below we will analyse the main components of the block diagram in the data logger.

7.1. DATA BUS AND MODBUS INDUSTRIAL PROTOCOLS

The data resides in external devices and must be connected via industrial protocols.

The device includes the Modbus RTU/ASCII master and Modbus TCP-IP client protocols so that it can connect to a wide range of third-party manufacturers. The shared memory is also accessible from the outside via the Modbus protocol.

7.1.1. MODBUS PROTOCOLS



Modbus was born as a serial communication protocol by Modicon (a company now part of the Schneider Electric group) to connect their programmable logic controllers (PLCs). It has become a de facto standard in industrial communication, and is currently one of the most widespread connection protocols in the world among industrial electronic devices. In addition to the serial version, Seneca devices also support the Ethernet-based version.

The supported Modbus protocols are:

Modbus RTU Master protocol

Modbus RTU Slave protocol

Modbus TCP-IP Client protocol (max 3 remote server modbus TCP-IP)

Modbus TCP-IP Server protocol (max 3 remote client modbus TCP-IP)

For further information, see website:

<https://modbus.org/>

Thanks to these protocols it is possible to acquire variables in the memory directly from external Modbus RTU slave or Modbus TCP-IP server devices.

7.2. TAGS DATA SHARED MEMORY

The data acquired by the buses is sent to the shared memory, which can be accessed from outside the device using Modbus protocols.

Each piece of data is identified by a mnemonic name and a type (integer, floating point etc.), thus characterized it takes the name of "Tag".

On these Tags it is possible to perform various types of processing as we will see later in the manual.

7.3. DATA LOGGER AND CACHE

Seneca's 'KEY-C' series gateways include a powerful data logger that allows you to manage up to 300 variables simultaneously (TAG). It is also possible to scale each variable and perform further processing with logic rules. The data acquired by the data logger can then be sent to various clouds or saved in the internal memory (cache).

The cache logs are stored in flash memory, so if data transfer to the cloud temporarily fails, it can be transferred successfully at a later time by retrieving data from this internal memory.

When the limit on the number of logs in the cache is reached, a "rotation" takes place, meaning that the oldest data is overwritten by the newest.

The memory available for the log cache is divided into 464 4Kb-sectors. One sector is used for rotation, therefore only the first 463 sectors can be used.

The number of samples that can be saved in the memory (NS) is given by the following formula:

$$NS = 463 * \left(DIV \left(\frac{4096}{10 * N_{TAG} + 22} \right) \right)$$

Where:

DIV is the integer division

N_{TAG} is the number of configured TAGS

For example, by setting 100 TAGs you have:

$$NS = 463 * \left(DIV \left(\frac{4096}{(10 * 100) + 22} \right) \right) = 463 * 4 = 1852$$

The maximum duration of the acquisition buffer depends on the acquisition time. For example, see table below:

NO. OF TAGS	NO. OF SAMPLES	ACQUISITION TIME [s]	CACHE BUFFER DURATION [h]
1	59264	30	493 hrs
10	15279	30	127 hrs
100	1852	30	15 hrs

1	59264	60	987 hrs
10	15279	60	254 hrs
100	1852	60	30 hrs

Cache data can also be exported from the web server in CSV format.
When the system is rebooted, the data in the cache is retained.

WARNING !

When a firmware update is performed, the cache data is deleted!

WARNING !

When the TAG structure is modified (a TAG is added, deleted or modified), the cache data is cleared!

7.4. TAG PROCESSING: LOGICAL RULES

KEY-C series devices allow you to define a set of rules that will execute a program. No knowledge of programming languages is required, as the rules are straightforward: 'If this event occurs, then perform this operation; otherwise, perform that operation.'

For more information, refer to the respective chapters of this manual.

7.5. CONNECTION TO CLOUDS VIA "EASY CLOUD" TECHNOLOGY

The "Easy Cloud" technology is based on the MQTT protocol and allows bidirectional connection with the main available clouds.

7.6. ALARMS

The TAG alarm logic utilises logical rules (via the message-sending function); an alarm consists of a text message and several placeholders that may include information about the tag and the machine.

For further information, please refer to section 10.3.

8. OPERATING MODE


The Gateway operates in the following mode:


MODBUS SERIAL-ETHERNET MASTER/CLIENT TO CLOUD

8.1. MODBUS MASTER / CLIENT TO CLOUD

You can send data from Modbus RTU/ASCII Slave and/or TCP Server remote I/O to a cloud (and vice versa).

Below are some examples of possible connections:

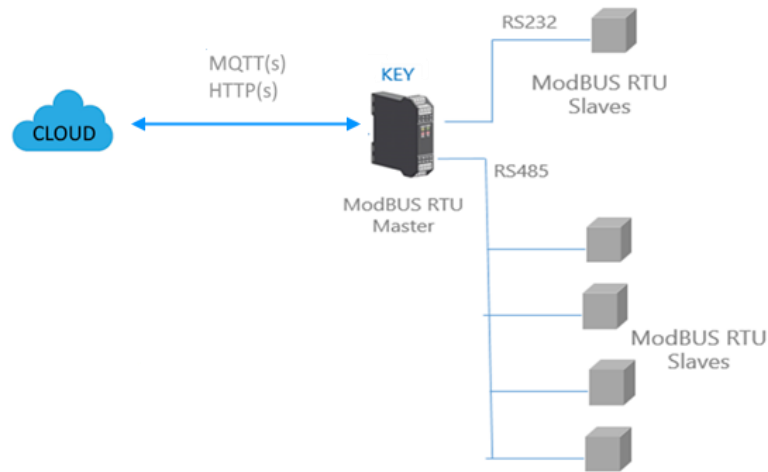

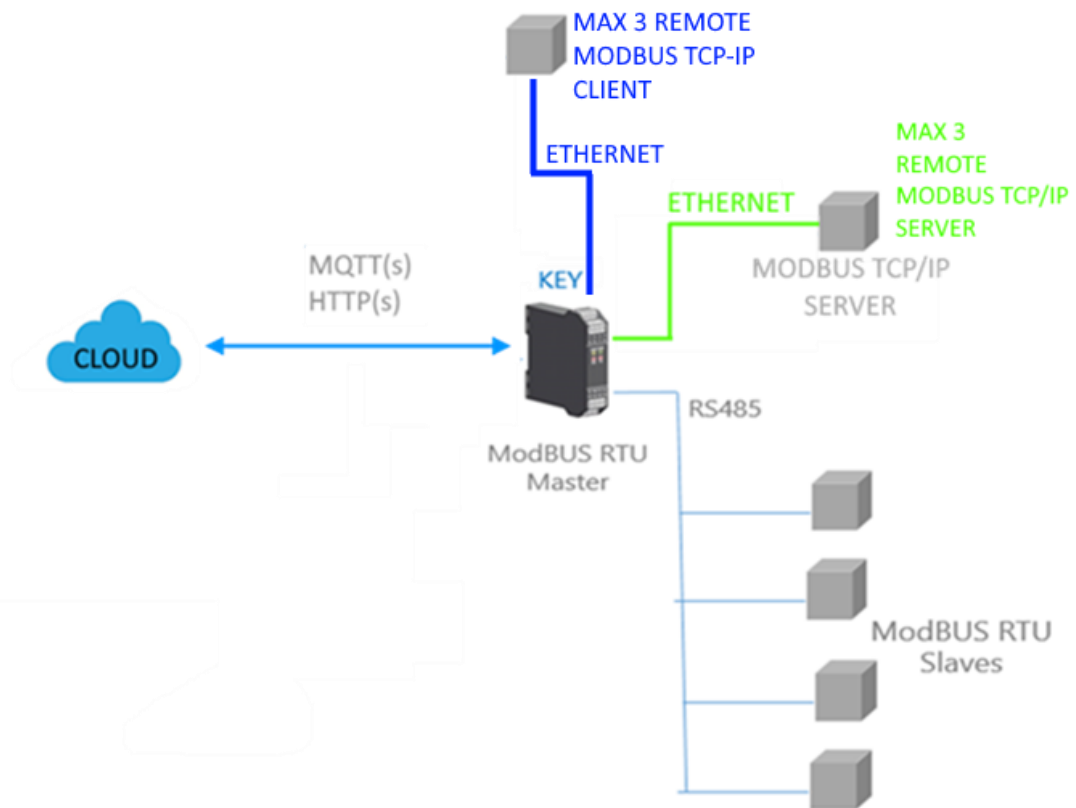

On the field side, the Gateway acts as a Modbus master/Modbus client, and on the other side as a client to the MQTTs broker or HTTPS server via Ethernet.

Modbus requests to slaves (read or write commands) are configured in the gateway device by defining tags. In addition to serial devices, it is also possible to connect up to three remote Modbus TCP/IP servers, thereby allowing serial resources to be combined with Ethernet-connected resources.

It is possible to write to TAGs (and therefore Modbus registers) from the cloud and via Modbus TCP/IP, as the gateway always activates a Modbus TCP/IP server (supporting up to 3 remote clients).

8.2. THE TAG

The tag is a variable (of type Boolean, integer, floating point, etc.) that can be read, written, processed and published to the cloud.

Tags are updated as quickly as possible; the firmware automatically optimises requests to minimise the number of Modbus commands (for example, if two read tags with consecutive addresses are specified, the firmware will send a single Modbus request to the slave device and then automatically retrieve the data from both tags).

The states that a tag can assume are as follows:

TAG READ STATUS	MEANING
OK	Il tag è correttamente letto/scritto
TIMEOUT	The tag response has timed out, but it will be queried again at the next cycle.
DELAYED	Too many failures; the tag polling is delayed (the tag will be queried again after the configured quarantine period).
EXCEPTION	Modbus exception response, but the tag will be queried again at the next cycle.
CRC ERROR	Modbus CRC exception response, but the tag will be queried again at the next cycle.

All states are temporary, meaning that a subsequent polling request resets the state. The "Delayed" state reduces the polling frequency of a failing tag (typically in Timeout) in order to slow down the system as little as possible.

8.3. MODBUS TCP-IP SERVER

For remote access to the Tags, a Modbus TCP/IP server is available on the device. To access it, use any slave address from 1 to 240. The memory contents are summarized on the "Status" web page:

GATEWAY TAG NR	GATEWAY TAG NAME	GATEWAY MODBUS START REGISTER	TAG DATA TYPE	TAG VALUE	TAG READING STATUS	
1	PIPPO	40001	16BIT SIGNED	33	--	<input type="button" value="CHANGE"/>
2	TAG2	40002	16BIT SIGNED	-17401	--	<input type="button" value="CHANGE"/>
3	TAG3	40003	32BIT REAL MSW	3.141500	--	<input type="button" value="CHANGE"/>
4	TAG4	40005	16BIT SIGNED	12789	--	<input type="button" value="CHANGE"/>

So, for example, the tag "TAG4" is available at holding register 40005 (offset 4).

8.4. SIMPLIFIED TAG DIAGNOSTICS

Tag diagnostics can be viewed via Modbus registers.

The first Modbus address, from which the simplified diagnostics starts, is by default 49001 (Holding Register 9000).

Each bit represents a tag with the following meaning:

1 = TAG OK

0 = TAG FAIL

The least significant bit is the status of tag no. 1

The next is the status of tag no. 2 and so on ...

For example, the reading of the following registers:

49001 0 0 0 0 0 0 0 0 0 0 0 0 1 0 0 1

49002 0 0 0 0 0 0 0 0 0 0 0 0 1 1 1 1

Means: TAG 1, TAG 4, TAG17, TAG 18, TAG 19, TAG 20 OK, all the others in FAIL.

At the start, all tags are in a failure state (all 0).

8.5. EXTENDED TAG DIAGNOSTICS

When a tag is in an error state it is possible to get more information using extended diagnostics.

Extended diagnostics reserves 1 byte for each tag (since the limit is 300 tags, there are 300 bytes = 150 Modbus registers for extended diagnostics).

This diagnostic is found at the end of the simplified diagnostics (default starting Modbus address is 49033, Holding registers 32).

Each Modbus register contains 2 tags, so for example:

49033 TAG02_TAG01

49034 TAG04_TAG03

...

49182 TAG300_TAG299

49183 LAST_LOOP_TIME_COM1 [x1 ms]

49184 LAST_LOOP_TIME_COM2 [x1 ms]

The meaning of the advanced diagnostics byte is:

BYTE VALUE	MEANING	NOTE
0	OK	The tag is read/written correctly
1	TIMEOUT	The response of the tag timed out, but will be queried again
2	DELAYED	Too many fails, tag polling is delayed (tag will be interrogated again after the configured quarantine time)

3	EXCEPTION	Modbus exception response but the tag will be queried again
4	CRC ERROR	CRC Modbus exception response but the tag will be queried again

For example:

49033 0x0000
49034 0x0002

It means that:

TAGs 1 and 2 are OK (0x00 and 0x00)
TAG 03 is in a delayed state (0x02)
TAG 4 is OK (0x00)

LAST_LOOP_TIME_COMx is a register that contains the last interrogation time of all serial tags (in how many of 10 ms) so, for example:

49183 25
49184 42

It means that the serial 1 loop was 250ms, the serial 2 loop was 420ms.


9. "-C" GATEWAY WEBSERVERS

9.1. STEP BY STEP GUIDE FOR THE FIRST ACCESS TO THE WEBSERVER

STEP 1: POWER THE DEVICE AND CONNECT THE ETHERNET PORT

SENECA DISCOVERY DEVICE SOFTWARE STEP 2

If you need to change the IP address of the device (default 192.168.90.101), launch the Seneca Discovery Device software and perform the SCAN, select the device and press the "Assign IP" button, set a configuration compatible with your PC, for example:

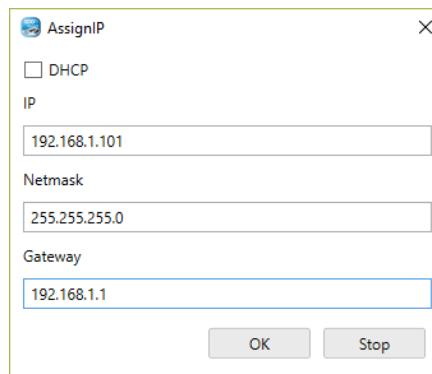

The screenshot shows a dialog box titled "AssignIP" with a close button (X) in the top right corner. It contains the following fields and options:

- DHCP
- IP: 192.168.1.101
- Netmask: 255.255.255.0
- Gateway: 192.168.1.1

At the bottom of the dialog box, there are two buttons: "OK" and "Stop".

Confirm with OK. Now the device can be reached via Ethernet from your PC.

STEP 3 ACCESS TO THE CONFIGURATION WEBSERVER

ENTER your access credentials:

user: admin

password: admin

ATTENTION!

**THE WEB BROWSERS WHICH HAVE BEEN TESTED FOR COMPATIBILITY WITH THE DEVICE
WEBSERVER ARE:**

MOZILLA FIREFOX AND GOOGLE CHROME.

THEREFORE, THE OPERATION WITH OTHER BROWSERS IS NOT GUARANTEED

10. WEBSERVER DEVICE CONFIGURATION

⚠ ATTENTION!

THE WEB BROWSERS WHICH HAVE BEEN TESTED FOR COMPATIBILITY WITH THE DEVICE WEBSERVER ARE:
MOZILLA FIREFOX AND GOOGLE CHROME.
 THEREFORE, THE OPERATION WITH OTHER BROWSERS IS NOT GUARANTEED

⚠ ATTENTION!

AFTER THE FIRST ACCESS CHANGE USER NAME AND PASSWORD IN ORDER TO PREVENT ACCESS TO THE DEVICE TO UNAUTHORIZED PEOPLE.

⚠ ATTENTION!

IF THE PARAMETERS TO ACCESS THE WEBSERVER HAVE BEEN LOST, TO ACCESS IT, IT IS NECESSARY TO GO THROUGH THE PROCEDURE TO RESET THE FACTORY-SET CONFIGURATION

10.1. "SETUP" PAGE

Scegli file Nessun file selezionato Load conf file

Save conf file

	CURRENT	UPDATED
ETHERNET DHCP	Disabled	Disabled ▾
ETHERNET STATIC IP	192.168.90.101	192.168.90.101
ETHERNET STATIC IP MASK	255.255.255.0	255.255.255.0
ETHERNET STATIC GATEWAY	192.168.90.1	192.168.90.1
WORKING MODE	MODBUS GATEWAY ON PORT#1	MODBUS GATEWAY ON PORT#1 ▾
TIMEOUT RESPONSE MODE	NONE	NONE ▾
TCPIP PORT	502	502

The first column represents the name of the parameter, the second column "current" is the current value of the parameter. The last column "updated" is used to modify the current configuration.

When a configuration has been entered it is necessary to confirm it with the "APPLY" button, at this point the new configuration is operational.

If you want to restore the default parameters, click on the "FACTORY DEFAULT" button.

10.1.1. GENERAL CONFIGURATION PARAMETERS

The general configuration parameters are explained below:

DHCP

Disabled: A static Network Configuration is set up

Enabled: The IP address, IP mask and gateway address are obtained from the DHCP server.

The gateway address can be found by the Seneca Discovery Device software.

ETHERNET STATIC IP

Static IP address when the DHCP is disabled

ETHERNET STATIC IP MASK

Mask when the DHCP is disabled

ETHERNET STATIC GATEWAY

Gateway address when the DHCP is disabled

TCP/IP PORT

TCP-IP port for Modbus TCP-IP Server protocol (Up to a maximum of 3 clients can be connected to the gateway)

PORT#n MODBUS PROTOCOL

Select the Modbus RTU or Modbus ASCII serial protocol

PORT#n BAUDRATE

Select the baudrate of the serial port

PORT#n BIT

Select the number of bits for the serial communication.

PORT#n PARITY

Select the type of parity of the serial port (None, Even or Odd)

PORT#n STOP BITS

Set the number of stop bits of the port (1 or 2), note that if parity is set, only 1 stop bit can be used.

PORT#n TIMEOUT [ms]

Set the waiting time for a response from the Modbus slave serial device, after this time without any response there will be a TIMEOUT.

PORT#n DELAY BETWEEN POLLS [ms]

Set the pause between two successive serial Modbus master requests.

PORT#n WRITING RETRIES

Set the number of attempts to write to the TAG(s) before setting the FAIL status.

PORT#n MAX READ NUM

Set the maximum number of registers that can be read with the multiple reading functions (the gateway will optimize readings with this maximum number of registers). It must be adjusted according to the maximum number of registers that can be read at the same time by the slave device.

PORT#1 MAX WRITE NUM

Set the maximum number of registers that can be written with the multiple writing functions (the gateway will optimize writings with this maximum number of registers).

WEB SERVER PORT

Set the TCP-IP port for the Webserver.

WEB SERVER AUTHENTICATION USERNAME

Set the username for accessing the Webserver (if the user name and password are left blank, no authentication is required to access the Webserver)

WEB SERVER AUTHENTICATION PASSWORD

Set the password for accessing the Webserver (if the username and password are left blank, no authentication is required to access the Webserver)



CHANGE THE DEFAULT USERNAME AND PASSWORD IN THE WEBSERVER TO RESTRICT ACCESS.



**IF THE TWO TEXT BOXES IN THE AUTHENTICATION PARAMETERS ARE LEFT BLANK,
AUTHENTICATION WILL BE DISABLED.**

WEBSERVER HTTPS

It forces the webserver to use the https secure protocol instead of http one

IP CHANGE FROM DISCOVERY

Set whether a user is authorized to change the IP configuration from the "Seneca Discovery Device" software.

DIAGNOSTIC REGISTERS MAPPING

Set the type of register that will contain simplified and advanced diagnostics. It is possible to select between holding registers or input registers.

DIAGNOSTIC REGISTER START ADDRESS

Set the starting address for the diagnostic registers (default offset 9000 -> 49001 in case of holding registers or 39001 in case of input registers)

PORT #n TAGS QUARANTINE [s]

When a TAG is in FAIL it is placed in quarantine and is no longer interrogated for the set time.

MODBUS TCP-IP CLIENT

Enable or not the Modbus TCP-IP clients, the gateway can connect to a maximum of 3 Modbus TCP-IP servers.

TCP-IP PORT SERVER #n (Only if Modbus TCP-IP client is active)

Used to set the TCP-IP server port #n

TCP-IP ADDRESS SERVER #n (Only if Modbus TCP-IP client is active)

Used to set the IP address of the #n server

MODBUS TCP-IP CLIENT TIMEOUT [ms] (Only if Modbus TCP-IP client is active)

Used to set the connection time out for Modbus TCP-IP clients.

MODBUS TCP-IP CLIENT DELAY BETWEEN POLLS [ms] (Only if Modbus TCP-IP client is active)

Set the pause between two successive Modbus TCP-IP client requests.

MODBUS TCP-IP CLIENT WRITING RETRIES (Only if Modbus TCP-IP client is active)

Set the number of attempts to write to the TAG(s) before setting the FAIL status.

MODBUS TCP-IP CLIENT MAX READ NUM (Only if Modbus TCP-IP client is active)

Set the maximum number of registers that can be read with the multiple reading functions (the gateway will optimize readings with this maximum number of registers).

MODBUS TCP-IP CLIENT MAX WRITE NUM (Only if Modbus TCP-IP client is active)

Set the maximum number of registers that can be written with the multiple writing functions (the gateway will optimize writings with this maximum number of registers).

SYNC CLOCK WITH INTERNET TIME

Allows you to enable date/time updating via connection to NTP servers ([RFC 5905](#)).

 **ATTENTION!**

EACH TIME THE DEVICE IS SWITCHED OFF, IT MUST BE ABLE TO RECOVER THE DATE/TIME SETTINGS FROM AN NTP SERVER. IF NOT, THE SETTINGS WILL BE RETRIEVED FROM THE LAST LOG ACQUIRED.

NTP SERVER 1 ADDRESS

This is the IP address of the first NTP server (for example 193.204.114.232 for INRIM's NTP)

NTP SERVER 2 ADDRESS

This is the IP address of the second NTP server (in case the first one does not respond)

 **ATTENTION!**

**PLEASE REMEMBER THAT NTP SERVERS USE THE UDP 123 PORT (WHICH MUST THEREFORE ALWAYS BE OPEN IN THE CONFIGURATION OF THE NETWORK USED)
WATCHDOG ENABLE**

WATCHDOG ENABLE

Enable or disable the time restart of gateway. If enabled, it forces a device reboot based on the configured timeout value.

WATCHDOG TIMEOUT [hours]

Set the time in hours after which the gateway will perform a forced reboot (only if the WATCHDOG ENABLE parameter is enabled).

10.1. "DATA LOGGER" PAGE

On this page, you can select the data logger acquisition time and download the logs from the device's internal memory in CSV text format.

You can define up to 11 TAG groups. Each of these groups can send its own TAGS at different times (multiples of the log time).

10.2. "SETUP TAG" PAGE

In Modbus Tags Gateway mode it is necessary to define the Modbus tags (i.e. variables), to do this it is possible to use:

- *The webservice*
- *An excel template*

In this chapter we will explain the configuration of the tag from the webservice.

To edit the TAGs via webservice, access the "Setup tag" section of the navigation menu:

R-KEY-LT-C-HWE Setup TAG Firmware Version : 2027_107

Nessun file selezionato

PRESS "CTRL" KEY TO SELECT MORE ROWS
MODBUS ADDRESSES ARE 1-BASED (1-4000/30001...)
HOVER TO THE INPUT BOX TO SEE EQUIVALENT SENECA ADDRESS

GATEWAY TAG NR	GATEWAY MODBUS START REGISTER	GATEWAY TAG NAME	TARGET MODBUS DEVICE	TARGET RESOURCE	TARGET CONNECTED TO	TARGET MODBUS STATION ADDRESS	TARGET MODBUS REQUEST TYPE	TARGET MODBUS START REGISTER	TARGET REGISTER DATA TYPE	TAG INTERNAL INITIAL VALUE	GROUP TYPE	SCALE M FACTOR	SCALE Q FACTOR
1	1	TEST1	CUSTOM		PORT#1	1	HOLDING REGISTER	1	16BIT UNSIGNED	0	None	1.0	0.0
2	2	TEST2	CUSTOM		PORT#1	2	HOLDING REGISTER	1	16BIT UNSIGNED	0	None	1.0	0.0
3	3	TEST3	CUSTOM		PORT#1	3	HOLDING REGISTER	1	16BIT UNSIGNED	0	None	1.0	0.0
4	4	TEST4	CUSTOM		PORT#1	4	HOLDING REGISTER	1	16BIT UNSIGNED	0	None	1.0	0.0

By selecting a row with the mouse (it will turn yellow, as shown in the figure), you can clone, delete or move it. You can select multiple rows by clicking on the row with the mouse and holding down the CTRL key.

GATEWAY TAG NR

It indicates the tag number. You can define up to 300 tags.

GATEWAY MODBUS START ADDRESS

Set the address of the Gateway memory location where the TAG is saved, these registers are accessible via Modbus TCP/IP (the device supports up to 3 remote Modbus TCP/IP clients). The format is 1-based, meaning that the first register (address 1) corresponds, for example, to holding register 40001.

GATEWAY TAG NAME

Set the mnemonic name of the tag (it will be displayed on the 'STATUS' page and will be used in the logic rules).

TARGET MODBUS DEVICE

Select the Modbus RTU slave model from the Seneca device database or select "custom" if you are not using a Seneca Modbus RTU slave.

TARGET RESOURCE

If you are using a Seneca Modbus RTU Slave select the resource name from the Seneca database.

TARGET CONNECTED TO

Select which serial port of the gateway the Modbus RTU slave device is connected to.

(in the case of R-KEY-LT only the COM 1 port is available).

In addition to the serial ports, you can retrieve data from up to 3 remote Modbus TCP-IP servers.

A tag may not be linked to a Modbus acquisition but may be an internal variable that will be used in logical rules.

In this case, select 'INTERNAL'.

TARGET MODBUS STATION ADDRESS

Defines the Modbus Station Address (also called the Modbus node address) of the slave device.

TARGET MODBUS REQUEST TYPE

Select the type of Modbus register:

Coil

Discrete Input
Holding Register
Input Register

TARGET MODBUS START REGISTER ADDRESS

Defines the starting register of the TAG to be acquired by the Modbus RTU slave. The format is 1-based, meaning that the first register (address 1) corresponds, for example, to holding register 40001. This value is only set on the first start-up; on subsequent start-ups, the value it had before the system was shut down is used.

TARGET REGISTER DATA

Select the TAG variable type:

16 BIT SIGNED: 16 bit variable from -32768 to +32767

16 BIT UNSIGNED: 16 bit variable from 0 to 65535

32 BIT SIGNED MSW: 2 Modbus registers, whose Modbus register with the lower address contains the most significant word, can assume values from -2147483648 to +2147483647

32 BIT UNSIGNED MSW: 2 Modbus registers, whose Modbus register with the lower address contains the most significant word, can assume values from 0 to 4294967295

32 BIT SIGNED LSW: 2 Modbus registers whose Modbus, register with the lower address contains the least significant word, can assume values from -2147483648 to +2147483647

32 BIT UNSIGNED LSW: 2 Modbus registers, whose Modbus register with the lower address contains the least significant word, can assume values from 0 to 4294967295

32 BIT REAL MSW: 2 Modbus registers, whose Modbus register with the lower address contains the most significant word, single precision floating point value (IEEE 758-2008)

32 BIT REAL LSW: 2 Modbus registers, whose Modbus register with the lower address contains the least significant word, single precision floating point value (IEEE 758-2008)

BIT: 1 Boolean Coil or Discrete Input, value true or false.

64 BIT SIGNED MSW 4 Modbus registers whose Modbus register with the lower address contains the most significant word and can assume values from -9223372036854775808 to +9223372036854775807

64 BIT SIGNED LSW 4 Modbus registers whose Modbus register with the lower address contains the least significant word and can assume values from -9223372036854775808 to +9223372036854775807

64 BIT UNSIGNED MSW 4 Modbus registers whose Modbus register with the lower address contains the most significant word and can assume values from 0 to 18446744073709551615

64 BIT UNSIGNED LSW 4 Modbus registers whose Modbus register with the lower address contains the least significant word and can assume values from 0 to 18446744073709551615

16 BIT SIGNED SCALED TO REAL MSW reads a 16-bit signed register from Modbus and converts it to a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+"SCALE Q FACTOR".

16 BIT SIGNED SCALED TO REAL LSW reads a 16-bit signed register from Modbus and converts it to a real value where the lower address contains the least significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+"SCALE Q FACTOR".

16 BIT UNSIGNED SCALED TO REAL MSW reads a 16-bit unsigned register from Modbus and converts it to a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

16 BIT UNSIGNED SCALED TO REAL LSW reads a 16-bit unsigned register from Modbus and converts it to a real value where the lower address contains the least significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

32 BIT SIGNED MSW SCALED TO REAL MSW reads two registers, interpreting them as 32 bit signed from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

32 BIT SIGNED MSW SCALED TO REAL LSW reads two registers, interpreting them as 32 bit signed from Modbus, and converts them into a real value where the lower address contains the least significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

32 BIT UNSIGNED MSW SCALED TO REAL MSW reads two registers, interpreting them as 32 bit unsigned from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

32 BIT UNSIGNED MSW SCALED TO REAL LSW reads two registers, interpreting them as 32 bit unsigned where the lower address contains the most significant word from Modbus, and converts them into a real value where the lower address contains the least significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

32 BIT SIGNED LSW SCALED TO REAL MSW reads two registers, interpreting them as 32 bit signed where the lower address contains the least significant word from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

32 BIT SIGNED LSW SCALED TO REAL LSW reads two registers, interpreting them as 32 bit signed where the lower address contains the least significant word from Modbus, and converts them into a real value where the lower address contains the least significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

32 BIT UNSIGNED LSW SCALED TO REAL MSW reads two registers, interpreting them as 32 bit unsigned where the lower address contains the least significant word from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

32 BIT UNSIGNED LSW SCALED TO REAL LSW reads two registers, interpreting them as 32 bit unsigned where the lower address contains the least significant word from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

64 BIT SIGNED MSW SCALED TO REAL MSW reads 4 registers, interpreting them as 64 bit signed where the lower address contains the most significant word from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

64 BIT SIGNED MSW SCALED TO REAL MSW reads 4 registers, interpreting them as 64 bit signed where the lower address contains the most significant word from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

64 BIT UNSIGNED MSW SCALED TO REAL MSW reads 4 registers, interpreting them as 64 bit unsigned where the lower address contains the most significant word from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

64 BIT UNSIGNED MSW SCALED TO REAL LSW reads 4 registers, interpreting them as 64 bit unsigned where the lower address contains the most significant word from Modbus, and converts them into a real value where the lower address contains the least significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

64 BIT SIGNED LSW SCALED TO REAL MSW reads 4 registers, interpreting them as 64 bit signed where the lower address contains the least significant word from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

64 BIT SIGNED LSW SCALED TO REAL LSW reads 4 registers, interpreting them as 64 bit signed where the lower address contains the least significant word from Modbus, and converts them into a real value where the lower address contains the least significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

64 BIT UNSIGNED MSW SCALED TO REAL MSW reads 4 registers, interpreting them as 64 bit unsigned where the lower address contains the most significant word from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

64 BIT UNSIGNED LSW SCALED TO REAL LSW reads 4 registers, interpreting them as 64 bit unsigned where the lower address contains the least significant word from Modbus, and converts them into a real value where

the lower address contains the least significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

32 BIT REAL MSW SCALED TO REAL MSW reads 2 registers, interpreting them as real values, where the lower address contains the most significant word from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

32 BIT REAL LSW SCALED TO REAL MSW reads 2 registers, interpreting them as real values, where the lower address contains the least significant word from Modbus, and converts them into a real value where the lower address contains the most significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

32 BIT REAL LSW SCALED TO REAL LSW reads 2 registers, interpreting them as real values, where the lower address contains the least significant word from Modbus, and converts them into a real value where the lower address contains the least significant word. If desired, you can also scale the tag before conversion according to the formula: TAG SCALED = (TAG * "SCALE M FACTOR")+ "SCALE Q FACTOR".

N.B. This field is automatically filled in if a Seneca slave device has been selected in the "TARGET MODBUS DEVICE" field.

 **ATTENTION!**

**All 32-bit values are stored in 2 consecutive registers, for example:
The 32-bit unsigned MSW TAG 1 Totalizer is stored in the addresses 40016 and 40017:
The most significant word is 40016, the least significant is 40017.
So the 32bit value is obtained from the following relationship:**

$$1 = (40017) + ((40016) \times 65536)$$

Similarly, all 64-bit values are stored in 4 consecutive registers.

INTERNAL TAG INITIAL VALUE

Select the initial value of the internal Tag (i.e. a tag that does not come from Modbus but is defined as an internal variable for logic rules).

GROUP TYPE

Select the group associated with the TAG

SCALE M FACTOR / SCALE Q FACTOR

Selects the scaling to apply to the TAG based on the formula:


$$Scaled\ Tag = (TAG * M) + Q$$

Scaling is not available for all TARGET REGISTER DATA.

10.2.1. Real-time view of the Modbus Gateway: "STATUS" PAGE

Once the TAGs are configured, it is possible to view the status of the Modbus communication in real time, from the Status section of the navigation menu.

The live view will show the current network configuration, operation mode and TAG information.

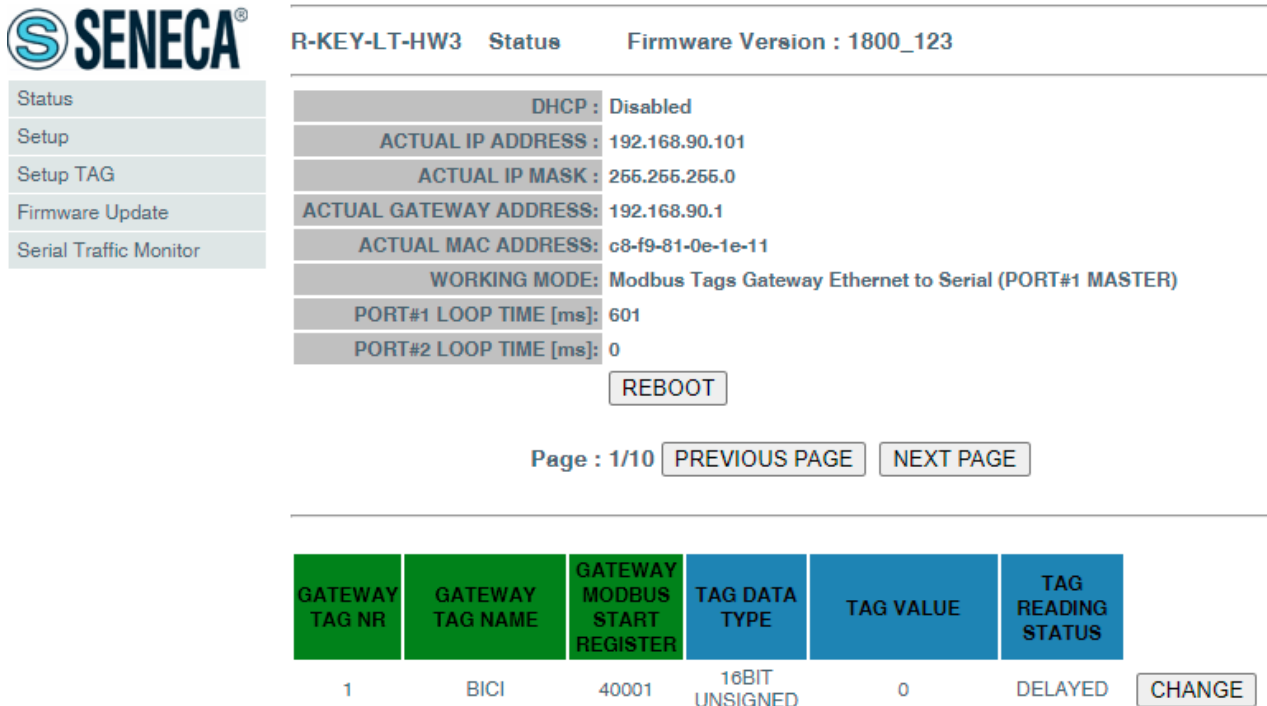

R-KEY-LT-HW3 Status Firmware Version : 1800_123

Status	DHCP : Disabled
Setup	ACTUAL IP ADDRESS : 192.168.90.101
Setup TAG	ACTUAL IP MASK : 255.255.255.0
Firmware Update	ACTUAL GATEWAY ADDRESS: 192.168.90.1
Serial Traffic Monitor	ACTUAL MAC ADDRESS: c8-f9-81-0e-1e-11
	WORKING MODE: Modbus Tags Gateway Ethernet to Serial (PORT#1 MASTER)
	PORT#1 LOOP TIME [ms]: 601
	PORT#2 LOOP TIME [ms]: 0

Page : 1/10

GATEWAY TAG NR	GATEWAY TAG NAME	GATEWAY MODBUS START REGISTER	TAG DATA TYPE	TAG VALUE	TAG READING STATUS
1	BICI	40001	16BIT UNSIGNED	0	DELAYED

Tag information includes: Name, Modbus Gateway address, value, and status.

The following legend applies to the status field:

OK = TAG free of errors

FAIL_TO = TAG reading time out

DELAYED = Once the set retry number has been reached, the polling of the tag is delayed (the tag will be interrogated again after the configured quarantine time)

EXC = Modbus protocol exception response

10.3. "SETUP TEXT MESSAGE" PAGE (ALARM)

Here you can define the text of the alarms that will be sent to the cloud.

The message text can only contain ASCII characters.

It is possible to use the {TAG_NAME} syntax to include the current value of a tag in the text.

For example, the message text:

"WATER LEVEL = {LEVEL} m"

Will provide a text with the tag value as text, if the tag "LEVEL" is 1,232 you will have:

WATER LEVEL = 1.232 m

This syntax can be used more than once in a message text.

Each message has an ID field which is used to associate the message with the alarm in the logical rules.

In addition to this, you can also add the following placeholders:

Legenda for message code Format	
Format	Meaning
%c	device Client ID
%m	device MAC Address
%M	device MAC Address without dot separator
%d	date-time
%t	timestamp (number of seconds since the "epoch")
%u	timestamp (number of milliseconds since the "epoch")

Alarm messages are published to the topic specified in the field:

"Cloud Topic to send message" in the cloud setup section.

10.4. "SETUP TIMER" PAGE

This section allows you to define the timers to be used in logic rules.


The ID represents the mnemonic of the timer that must be used in the rules.

"Enable" selects whether the timer is active or not.

"Duration" is the activation value in [ms].

Note

The timers are in stop mode by default, they need an action to start and an action to restore, according to the following scheme:

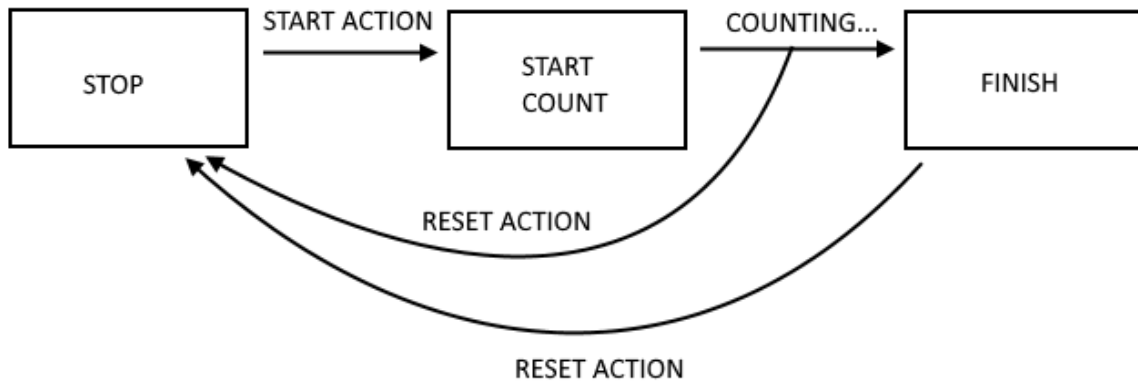

10.5. "SETUP RULES" PAGE

In this section you can define a set of logical rules that will implement a program.

Please note that Tag writing takes place 'During execution', i.e. tag writing is performed immediately after the write action has been executed.

To configure a rule, the following parameters are available:

10.5.1. RULE CONFIGURATION

ID

Rule execution order (1 = First rule to be executed)

Enabled

Indicates whether the rule is enabled or should be excluded from execution

Description

Mnemonic textual description of the rule

Period [ms]

If the value is 0, the actions are executed in 'one time' or 'repeat' mode (in which case they will be executed at the maximum possible speed).

In 'one time' mode, the action will only be executed if there is a change in the result of the condition (if or else) (i.e. when the state changes from false to true).

In "repeat" mode, the action will be executed at every loop, attempting to adhere to the specified timing.

If the value is > 0, the actions are executed only in "repeat" mode.

WARNING!

Use appropriate time-out values for MQTTs/HTTPs requests!

If Period > 0, the actions are always performed in "repeat" mode.

Message-sending actions are executed in one-time mode (only once when the condition changes from false to true) if period = 0; they are repeated in repeat mode if period > 0.

10.5.2.IF CONDITION: TYPE

This section defines the type of condition, the following types are possible:

None

No conditions to be assessed

Always True

The If condition is always true.

Please note that the rule is only executed once if Period is = 0 ms or if the 'ACTION MODE' field of the action is set to 'One Time' mode.

If you need to execute a rule at each cycle, you need to put the actions in "repeat mode".

If you need to run a rule over time (every x ms), you must set Period > 0ms.

Always False

The If condition is always false.

This can be used for debugging purposes (by quickly blocking the condition).

Digital Tag

The condition depends on the state of a digital tag:

Field	Meaning
Tag	Selects the tag to be used for the condition
Operator	Only "=" may apply
Tag / Constant value	Selects whether the comparison is between another digital tag or a constant boolean value (TRUE or FALSE)

Analog Tag

The condition depends on a comparison with an analog TAG


Field	Meaning
Tag	Selects the tag to be used for the condition
Operator	It may be: "="
	">"
	"<"
	">="
	"<="
Tag / Constant value	Selects whether the comparison is between another analog tag or a constant value

Timer

The condition depends on the state of the selected timer

Field	Meaning
ID	Selects the timer ID to use
Expired	It can be: "OFF" or "ON" With "ON" the condition is only true when the timer expires (FINISH status). With "OFF" the condition is true until the timer is in STOP or COUNTING. When the timer is in FINISH state the condition becomes false.

The operation of the Timer is shown in the following diagram:

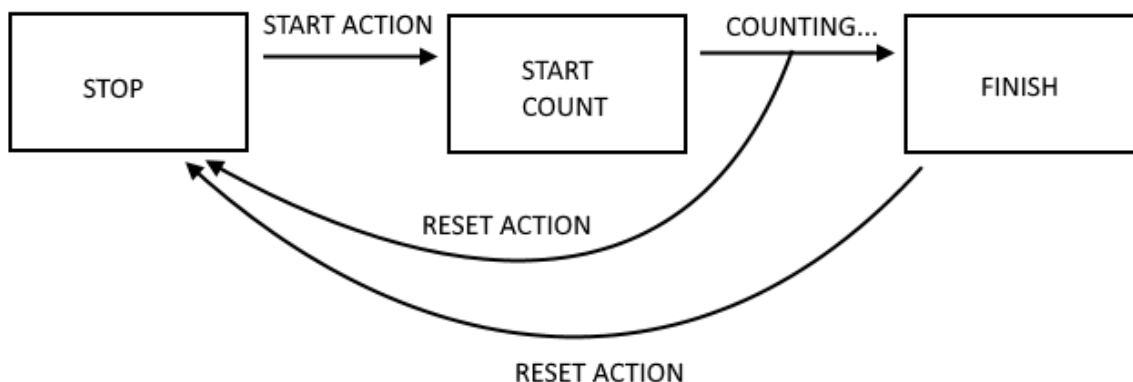

Scheduler

The condition depends on the set scheduler (calendar):

Field	Meaning
Type	<p>It may be: Every Day, Every week, Every Month</p> <p>Every Day: the condition is true every day at the configured hour and minute</p> <p>Every Week: the condition is true once a week on the selected day of the week at the selected hour and minute</p> <p>Every Month: the condition is true once a month on the selected day of the month at the selected hour and minute</p>
Day	<p>If the type is Weekly sets the day of the week:</p> <p>0 = Sunday 1 = Monday 2 = Tuesday 3 = Wednesday 4 = Thursday 5 = Friday 6 = Saturday</p> <p>If the type is Monthly: Selects the day of the month from 1 to 31</p>
Hour	Hours
Minute	Minutes

Rule Status

The condition depends on whether a rule is enabled or not:

Field	Meaning
ID	Selects the rule ID
Enabled	<p>Selects between "enabled" or "disabled"</p> <p>If "Enabled" the condition is REAL if the selected rule is enabled.</p> <p>If "Disabled" the condition is REAL if the selected rule is disabled.</p>

Bitmask

The condition depends on masking a tag with a hexadecimal constant:

Field	Meaning
Tag	Selects the tag to apply the bitmask to from a list containing all tags with data type "16Bit Unsigned"
Mask	The bit mask represented as a string of 4 hexadecimal digits

The "Bit mask" condition is TRUE if the AND operation bit by bit between the Tag and the Data Mask is different from 0; FALSE otherwise.

Example:

Tag=0x1233 (hexadecimal) = 0b 0001 0010 0011 0011 (binary)

Mask=0x8001 (hexadecimal) = 0b 1000 0000 0000 0001 (binary)

It means that the mask analyses bit 0 (least significant) and bit 15 (most significant) of the Tag.

The AND bit by bit provides:

0001 0010 0011 0011


1000 0000 0000 0001

0000 0000 0000 0001

So the condition is TRUE.

10.5.3. IF CONDITION OPERATOR

The "IF conditions" can be combined together in "OR" or "AND" logic, in practice:

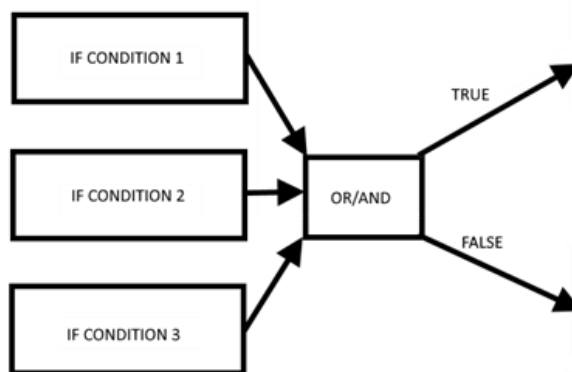

The "IF conditions" linked together by "OR" go to the TRUE state if at least one of the conditions is true.

The "IF conditions" linked together by "AND" only go to the TRUE state if all of them are true.

More details are given in the following table:

IF CONDITION 1	IF CONDITION 2	IF CONDITION 3	"OR"	"AND"
----------------	----------------	----------------	------	-------

FALSE	FALSE	FALSE	FALSE	FALSE
FALSE	FALSE	TRUE	TRUE	FALSE
FALSE	TRUE	FALSE	TRUE	FALSE
FALSE	TRUE	TRUE	TRUE	FALSE
TRUE	FALSE	FALSE	TRUE	FALSE
TRUE	FALSE	TRUE	TRUE	FALSE
TRUE	TRUE	FALSE	TRUE	FALSE
TRUE	TRUE	TRUE	TRUE	TRUE

10.5.4.THEN/ELSE ACTION

In this section you can define the action that must be performed if the conditions result in TRUE (THEN action) or FALSE (ELSE action).

NONE

No action to take

Digital Tag

Performs a write to a digital tag.

Field	Meaning
Action Mode	Allows you to select between "One Time" or "Repeat". With "One Time", the action is executed only if there is a change in the result of the IF or ELSE condition, from false to true. With "Repeat", the action is performed at every loop (or at the interval specified by the period).
Destination Tag	This is the tag where the calculated TRUE/FALSE result is copied
Operator	This is the Boolean operator to use, selected from =, NOT, OR etc ...
Source Tag 1 / Constant value 1	Selects the first tag to use in the boolean calculation. It is also possible to use a boolean constant
Source Tag 2 / Constant value 2	Select the second Tag if the operator needs 2 inputs (For example operator "OR"). It is also possible to use a boolean constant

Analog Tag

Performs a write to an analog type Tag.

Field	Meaning
Action Mode	Select from "One Time" or "Repeat". With "One Time", the action is executed only if there is a change in the result of the IF or ELSE condition, from false to true. With "Repeat", the action is performed at every loop (or at the interval specified by the period).
Destination Tag	This is the tag where the calculated result is copied to
Operator	It is the mathematical operator to use; you can select from: "="
	copies the source tag 1 or the constant value 1 to the destination tag

	<p>Example: Destination tag = Origin tag 1 Or Target tag = constant value 1</p> <p>"+" = Add the value of the source tag1 or the constant value 1 to the target tag and copy the result to the target tag.</p> <p>Example: Destination tag = Destination tag + Origin tag 1</p> <p>"-" = Subtracts the value of the source tag1 from the target tag and copies the result to the target tag.</p> <p>Example: Destination tag = Destination tag - Origin tag 1</p> <p>"*" = Multiply the target tag by the value of source tag 1 and copy the result to the target tag.</p> <p>Example: Destination tag = Destination tag * Origin tag 1</p> <p>"/" = Splits the target tag with the source tag value 1 and copies the result to the target tag.</p> <p>Example: Destination tag = Destination tag / Origin tag 1</p> <p>"%" = Calculates the rest of the division from the target tag and the value of the source tag1 and copies the result to the target tag. (Note that 53% 7 = 4)</p> <p>Example: Destination tag = Destination tag% Source tag1</p> <p>"abs" Calculates the absolute value of Source Tag 1 or Constant value 1 and copies the result to the Destination Tag (Note that abs (-4) = 4)</p>
--	---

	<p style="text-align: center;">Example: Target tag = abs (Source tag 1)</p> <p style="text-align: center;">"Sqrt"</p> <p style="text-align: center;">Calculates the square root value of source tag 1 or constant value 1 and copies the result to the target tag. (Note that sqrt (9) = $\sqrt{9} = 3$)</p> <p style="text-align: center;">Example: Destination tag = sqrt (origin tag 1)</p> <p style="text-align: center;">"Sqr"</p> <p style="text-align: center;">Calculates the square value of the source tag 1 or constant value 1 and copies the result to the target tag. (Note that sqr (3) = $3^2 = 9$)</p> <p style="text-align: center;">Example: Destination tag = sqr (origin tag 1)</p> <p style="text-align: center;">"Log"</p> <p style="text-align: center;">Calculates the decimal logarithm of source tag 1 or constant value 1 and copies the result to the target tag. (Note that log (3) = 0.4771212)</p> <p style="text-align: center;">Example: Destination tag = log (origin tag 1)</p> <p style="text-align: center;">"Ln"</p> <p style="text-align: center;">Calculates the natural logarithm of the source tag 1 or constant value 1 and copies the result to the target tag. (Note that ln (3) = 1.09861228867)</p> <p style="text-align: center;">Example: Target tag = ln (Source tag 1)</p> <p style="text-align: center;">"Exp"</p> <p style="text-align: center;">Calculate the number of Euler elevated to Source Tag 1 or Constant value 1 and copy the result to the Destination Tag.</p> <p style="text-align: center;">Please note that: ln (exp 3) = 3</p> <p style="text-align: center;">Example: Destination tag = expiration (origin tag 1)</p> <p style="text-align: center;">"+"</p>
--	--

	<p>Adds Source Tag 1 or Constant value 1 to the value of Source Tag 2 or Constant value 2 and copies the result to the Destination Tag.</p> <p>Example: Target tag = Source tag 1+ Source tag 2</p> <p>"_"</p> <p>Subtracts the source tag 1 or constant value 1 with the value of source tag 2 or constant value 2 and copies the result to the target tag.</p> <p>Example: Destination tag = Origin tag 1- Origin tag 2</p> <p>"**"</p> <p>Multiply the source tag 1 or constant value 1 with the source tag 2 or constant value 2 and copy the result to the target tag.</p> <p>Example: Target tag = Source tag 1 * Source tag 2</p> <p>"/"</p> <p>Splits the source tag 1 or constant value 1 with the source tag 2 or constant value 2 and copies the result to the target tag.</p> <p>Example: Target Tag = Source Tag 1 / Source Tag 2</p> <p>"%"</p> <p>Calculates the rest of the division between source tag 1 or constant value 1 and source tag 2 or constant value 2 and copies the result to the target tag. (Note that 53% 7 = 4)</p> <p>Example: Target tag = Source tag 1% Source tag 2</p> <p>"Pow"</p> <p>Calculates the Source Tag1 or Constant value 1 elevated to the power of the Source Tag2 / Constant value 2 and copies the result to the destination tag.</p> <p>Example: Target tag = (Source Tag1) ^ (Source Tag2)</p>
<p>Source Tag 1 / Constant value 1</p>	<p>Selects the tag to be used as input 1 for the operator used. You can also use a constant value.</p>

Source Tag 2 / Constant value 2	Selects the Tag to use as input 2 in the calculation if the operator needs 2 inputs. A constant value can also be used
---------------------------------	---

Timer

It is possible to select the action to be performed in the selected timer

Field	Meaning
Id	Selects the timer from those configured
Action	Selects the type of action to perform on the selected timer. "Start" performs the start action on the selected timer "Reset" performs the reset action on the timer to the stop state

Rule Status

The action enables or disables a rule.

Field	Meaning
Id	Selects the rule
Enable	Selects whether or not the action should enable the selected rule: "OFF" disables the selected rule "ON" enables the selected rule

Bitmask

This action allows you to set a configurable number of bits of a given tag to the value 1 or to the value 0.

Field	Meaning
Action Mode	Selects from "One Time" or "Repeat". With "One Time", the action is executed only if there is a change in the result of the IF or ELSE condition, from false to true. With "Repeat", the action is performed at every loop (or at the interval specified by the period).
Destination Tag	It is the tag in which the result of the action is copied, the tag must be of type "16 bit unsigned"
Source Tag	Selects the tag to use in the calculation. It is also possible to insert the same source tag and destination tag in order to perform the action on the same TAG. The tag must be of the "16 bit unsigned" type

Mask	It is the mask in hexadecimal format that allows the masking of the bits to be controlled.
Action	You can choose between "Set" or set the bits to 1, or "Reset" or set the bits to 0.

Send Message

Performs a write to a string-type Tag.

Field	Meaning
Message	This is the ID of the message to be sent via MQTT/HHTP.

10.6. "CLOUD SETUP" PAGE

On this page, you can configure the connection to the cloud of the configured Tags.

CLOUD PROTOCOL

Selects the protocol to use between MQTT and https.

WARNING!

FOR MORE INFORMATION FOR SENDING DATA TO THE CLOUD VIA HTTPS PROTOCOL, REFER TO THE DOCUMENT "HTTP POST Communication Protocol"

CUSTOM CLOUD

Select whether or not to use the pre-configured fields for a specific cloud.

Currently, you can configure:

None: Using the device's configuration options, you can connect to virtually any cloud

Direl: Configures the device to connect to the Direl ADM cloud

To add other clouds to the list, you can submit a request to Seneca.

CLOUD SERVER ADDRESS

Selects the cloud address to be connected to

CLOUD SERVER PORT

Selects the server port

MQTT CLIENT ID/HTTP PATH

Defines the Client ID used in the MQTT's protocol or the publication path on HTTPs server

MQTT WEBSOCKET

Allows you to activate MQTTs communication via Websockets

MQTT KEEP ALIVE INTERVAL [s]

This parameter defines Keep alive which ensures that the connection between the broker and client is still open and that the broker and client are aware that they are connected. When the client establishes a connection to the broker, it tells the broker a time interval in seconds. This interval defines the maximum period of time during which the broker and client may not communicate with each other.

MQTT CLEAN SESSION

This parameter defines the "clean session". When the clean session flag is set to true, the client does not want a persistent session. If the client disconnects for any reason, all information and messages queued from a previous session are lost.

MQTT MESSAGE RETAIN

Usually if a publisher publishes a message on a topic to which no one is subscribed, the message is simply discarded by the broker. However, the publisher can tell the broker to keep the last message of that topic.

MQTT QUALITY OF SERVICE [QOS]

This parameter defines the QOS of the MQTT protocol.

Can be selected from

QOS 0 (once only, without ack)

QOS 1 (at least once, with ack)

QOS 2 (once only, with ack and resend)

CLOUD AUTHENTICATION

This parameter defines whether user/password authentication should be used to access the cloud

CLOUD AUTHENTICATION USER

Broker or server username

CLOUD AUTHENTICATION PASSWORD

Broker or server password

CLOUD SSL/TLS

Defines whether to enable the SSL/TLS 1.2 security protocol

CLOUD CLIENT CERTIFICATE REQUIRED

Defines whether to manage x.509 certificates for the SSL/TLS connection

CLOUD CLIENT CERTIFICATE VALIDITY CHECK

If activated, it verifies the certificates are valid

CLOUD LOG ON CHANGE

Updates values on broker mqtt or server http only upon change and no longer over time

CLOUD PUBLISH MULTIPLE TAGS

For MQTTs protocol, this parameter defines whether the publish contains multiple tags or whether the device should send a publish for each tag.

For HTTPs protocol, this parameter defines whether the post contains multiple tags or whether the device should send a post for each tag.

CLOUD PUBLISH TOPIC FOR LOGS

Select the format that must be used for the payload. It is also possible to use the placeholders from the following tables:

Legenda for Topic	
Format	Meaning
%c	Device Client ID
%m	Device MAC Address
%M	Device MAC Address without dot separator
%j[field]	Print [field] as a JSON string

For example:

If:

Device Client ID = Padova13

Publish Topic for Logs = seneca/%c/data

The data logs will be sent to the topic: Seneca/Padova13/data

CLOUD PUBLISH PAYLOAD FOR LOGS

Selects the format to be used for the payload. It is also possible to use the placeholders from the following tables:

Legenda for Payload single	
Format	Meaning
%c	Device Client ID
%m	Device MAC Address
%M	device MAC Address without dot separator
%d	date-time
%t	timestamp (number of seconds since the "epoch")
%u	timestamp (number of milliseconds since the "epoch")
%f	variable identifier
%n	Tag name
%y	tag type
%v	Tag value
%i	tag validity
%j[field]	print [field] as a JSON string

Note: the %f placeholder adds a unique ID to the variable to be published according to the TAG order (see Tag view page)

Legenda for Payload multiple	
<i>Format</i>	<i>Meaning</i>
<i>%c</i>	<i>device Client ID</i>
<i>%m</i>	<i>device MAC Address</i>
<i>%M</i>	<i>device MAC Address without dot separator</i>
<i>%d</i>	<i>date-time</i>
<i>%t</i>	<i>timestamp (number of seconds since the "epoch")</i>
<i>%u</i>	<i>timestamp (number of milliseconds since the "epoch")</i>
<i>%b</i>	<i>bulk (format specified in "Publish Bulk Format" parameter)</i>
<i>%j[field]</i>	<i>print [field] as a JSON string</i>
<i>;%tag_name\$</i>	<i>value of tag "tag_name"</i>

As already mentioned, it is possible to send one MQTT packet for each TAG (single payload) or a single MQTT packet containing all tags (multiple payload). This behavior is determined by the CLOUD PUBLISH MULTIPLE TAGS parameter.

Note that the payload format is represented in JSON (JavaScript Object Notation), a structured text format that is easily interpreted by both software systems and operators.

In JSON, information is organized as pairs:

key: value

where field names are enclosed in quotation marks.

Values can be numbers, strings, boolean values, arrays, or nested objects.

To ensure correct interpretation of the message, the JSON syntax must be strictly followed, including brackets, commas, and quotation marks.

Example of a single payload:

Suppose we want to send the logs of two TAGs: "tag1" and "tag2", with the following configuration:

Client ID = "Test"

Publish Topic for Logs = seneca/%c/data

Publish Payload for Logs = {"value": %v}

CLOUD PUBLISH MULTIPLE TAGS = No

The result will be on the topic:

"Seneca/Test/data/tag1"

the following payload::

{"value" 1234}

And on the topic

"Seneca/Test/data/tag2"

the following payload:

```
{"value" 5678}
```

CLOUD PUBLISH BULK FORMAT

Select the format for publishing multiple payloads; it is also possible to use the placeholders from the following table:

Legenda for Bulk Format	
<i>Format</i>	<i>Meaning</i>
%c	device Client ID
%m	device MAC Address
%M	device MAC Address without dot separator
%d	date-time
%t	timestamp (number of seconds since the "epoch")
%u	timestamp (number of milliseconds since the "epoch")
%f	variable identifier
%n	tag name
%y	tag type
%v	tag value
%i	tag validity
%j[field]	print [field] as a JSON string

Example of a multiple payload with bulk configuration:

Suppose we want to send the logs of two TAGs: tag1 and tag2, sent in a single payload with the following configuration:

Client ID = "Test"

Publish Topic for Logs = seneca/%c/data

Publish Payload for Logs = {[%b]}

Cloud Publish Bulk format = {"name": %jn, "value": %v}

Cloud Publish Multiple tags = Yes

The result will be on the topic::

"Seneca/Test/data"

il seguente Payload:

```
{{{"name": "tag1", "value": 1234}, {"name": "tag2", "value": 5678}}}
```

As can be seen, the tag values are inserted as arrays. The bulk configuration is automatically replicated for all configured tags.

CLOUD SUBSCRIBE TOPIC FOR COMMANDS

To write a tag via MQTT, the device must receive a PUBLISH message from the cloud itself in the format specified in this field; see the section "WRITES FROM THE CLOUD TO THE DEVICE".

**SITE
SPACE
MACHINERY**

These represent three text fields that can be used by the cloud to identify the device.

CLOUD TOPIC TO SEND MESSAGE

This is the topic under which the alert messages defined on the "Setup Text Messages" page will be posted. The logic for sending text messages (alerts) is defined in the logic rules.

10.6.1.1.CERTIFICATES

At the bottom of the "Cloud Setup" page, it is possible to upload certificates and the private key for connecting to the MQTT server. The supported format is .pem.

MQTT CA CERTIFICATE :

NOT PRESENT

Nessun file selezionato

MQTT CLIENT CERTIFICATE

NOT PRESENT

Nessun file selezionato

MQTT CLIENT CERTIFICATE PRIVATE KEY :

NOT PRESENT

Nessun file selezionato

10.6.2.DIREL ADM4.0

The parameters for the Direl cloud (<https://www.direl.it/>) are as follows:

Field	Meaning
Enable	Enables or disables the connection to the Direl ADM4.0 cloud
Username for Commands	This is the username for writing access from the cloud to the device
Password for Commands	It is the password for writing access from the cloud to the device

10.7. "FIRMWARE UPDATE" PAGE

Allows you to update the firmware of the device.

WARNING!
THE FIRMWARE UPDATE WILL DELETE THE DATA ACQUIRED BY THE DATALOGGER; SAVE THE DATA BEFORE PERFORMING THE UPDATE OPERATION

WARNING!

FOR NOT DAMAGING THE DEVICE DO NOT DISCONNECT POWER DURING THE FIRMWARE UPDATE OPERATION

WARNING!

IN SOME CASES THE FIRMWARE UPDATE MAY MAKE CONFIGURATIONS SAVED WITH PREVIOUS VERSIONS INCOMPATIBLE

10.8. "UTC TIME SETUP" PAGE

It allows you to set time and date.

WARNING!

EACH TIME THE DEVICE IS SWITCHED OFF, IT MUST BE ABLE TO RECOVER THE DATE/TIME SETTINGS FROM AN NTP SERVER. IF NOT, THE SETTINGS WILL BE RETRIEVED FROM THE LAST LOG ACQUIRED.

10.9. "CERTIFICATE/DATABASE UPDATE" PAGE

On this page you can upload X.509 certificates for the webserver to the device (if https mode is enabled) and update the Seneca device database.

10.10. "SERIAL TRAFFIC MONITOR" PAGE

The Serial Traffic Monitor page of the webserver shows the serial packets that the gateway is receiving and transmitting for line debugging:

START/STOP TRAFFIC MONITOR ENABLED

116	RECEIVE	01 03 00 00 00 01 84 0a
14	SEND	01 03 02 12 34 b5 33
114	RECEIVE	01 03 00 00 00 01 84 0a
16	SEND	01 03 02 12 34 b5 33
112	RECEIVE	01 03 00 00 00 01 84 0a
18	SEND	01 03 02 12 34 b5 33
109	RECEIVE	01 03 00 00 00 01 84 0a
11	SEND	01 03 02 12 34 b5 33
117	RECEIVE	01 03 00 00 00 01 84 0a
13	SEND	01 03 02 12 34 b5 33
115	RECEIVE	01 03 00 00 00 01 84 0a
15	SEND	01 03 02 12 34 b5 33
113	RECEIVE	01 03 00 00 00 01 84 0a
17	SEND	01 03 02 12 34 b5 33
110	RECEIVE	01 03 00 00 00 01 84 0a
20	SEND	01 03 02 12 34 b5 33
108	RECEIVE	01 03 00 00 00 01 84 0a
12	SEND	01 03 02 12 34 b5 33
116	RECEIVE	01 03 00 00 00 01 84 0a
14	SEND	01 03 02 12 34 b5 33
114	RECEIVE	01 03 00 00 00 01 84 0a
16	SEND	01 03 02 12 34 b5 33
111	RECEIVE	01 03 00 00 00 01 84 0a
19	SEND	01 03 02 12 34 b5 33
109	RECEIVE	01 03 00 00 00 01 84 0a

The first column is the delay in milliseconds from the last packet, the second column is the direction of the packet (received from or transmitted to), the last column is the contents of the packet in hexadecimal format. Only the serial ModBUS stream is displayed.

The Traffic Monitor shows all packets received from the serial line, for example if it is a serial slave with an incorrect Modbus response:

3870	SEND	01 03 00 00 00 0a c5 cd
130	RECEIVE	fe fe ff df bc cf bc 9e cf f0 3e 7c bc bc ce 3e cf ce 3c df 8e 8f cf ee ce ce bc ce c7 c7 87 be 9e bc bc 9f 3e 3c bc bc 3e bc 8e c7 3c cf 9f be ef bc 01 03 14 42 00 08 7c 00 0b 00 01 00 01 00 00 04 00 c3 48 00 00 44 22 b8 5d

The Traffic Monitor will also display defective packets in yellow (for example a serial master with wrong baud rate):

18	SEND	01 03 02 12 34 b5 33
988	RECEIVE	01 03 00 00 00 01 84 0a
12	SEND	01 03 02 12 34 b5 33
20990	INVALID RECEIVE	20 e0 20 e0 20 e0 20 e0
14994	INVALID RECEIVE	20 e0 20 e0 20 e0 20 e0
14100	INVALID RECEIVE	20 e0 20 e0 20 e0 20 e0
14897	INVALID RECEIVE	20 e0 20 e0 20 e0 20 e0

11. WRITING FROM CLOUD TO DEVICE

11.1. WRITE TAGS FROM THE CLOUD TO THE DEVICE VIA MQTT (GENERIC CLOUD)

Through the MQTT configuration, you can write tags in two basic modes:

In the first, the tag name does not appear in the payload, in the second, the tag name is made explicit in the payload.

11.1.1. WRITING A TAG FROM THE CLOUD WITHOUT EXPLICITLY SPECIFYING THE NAME IN THE PAYLOAD

To write a tag without making its name explicit in the payload, you must subscribe to the topic:

```
seneca/<ClientID>/info/#
```

where *<ClientID>* is the configured client ID

A publish with topic will then be received from the device:

```
seneca/<ClientID>/info/<nome tag>
```

and payload.

```
{"val": <valore tag>}
```

or

```
{"value": <valore tag>}
```

For example:

making the publish to the topic:

```
seneca/<ClientID>/info/Pippo
```

with payload:

```
{"val": 1234}
```

The decimal value 1234 is written to the tag named "Pippo" (pay attention to uppercase and lowercase letters).

11.1.2. WRITING A TAG FROM THE CLOUD BY EXPLICITLY SPECIFYING THE NAME IN THE PAYLOAD

To write a tag by explicitly specifying its name in the payload, you must subscribe to the topic defined in the CLOUD SUBSCRIBE TOPIC FOR COMMANDS parameter, to which "/info" must be added.

For example, if you set

CLOUD SUBSCRIBE TOPIC FOR COMMANDS = seneca/<ClientID>

the device, in case of a cloud write operation, will receive a publish with the topic:

seneca/<ClientID> /info

and payload:

```
{"tags": [{"<nome tag>": <valore tag>}]}
```

For example the payload:

```
{"tags": [{"Pippo_fp": 123.46}]}
```

Writes the floating point value 123.46 in the tag "Pippo_fp"

Alternatively, instead of defining the tag name, it is possible to use the ID, i.e. the number shown in the Vid column of the Tags (see the Tag setup configuration web page).

```
{"tags_id": [{"<(vid+1)>": <valore tag>}]}
```

For example:

```
{"tags_id": [{"25": 789}]}
```

Writes in the tag with vid = 24 the decimal integer value 789

11.1.3. WRITING MULTIPLE TAGS FROM THE CLOUD

It is also possible to write more than one tag at the same time with the syntaxes:

```
{"tags": [{"<nome tag1>": <valore tag1>}, {"<nome tag2>": <valore tag2>},.... ] }
```

Or:

```
{"tags_id": [{"<(vid tag1)+1>": <valore tag1>}, {"<(vid tag2)+1>": <valore tag2>},.... ] }
```

For example:

```
{"tags": [{"Pippo": 1234}, {"Pippo_fp": 123.46}]}
```

```
{"tags_id": [{"25": 1234}, {"26": 123.46}]}
```

Both tags "Pippo" and "Pippo_fp" are written simultaneously.

12. SENDING MESSAGES AND ALERTS TO THE MQTT CLOUD

The sending of messages and alarms is triggered by logic rules through the message-sending action.

Text messages can be sent to the MQTT cloud via the topic configured in the parameter:

CLOUD TOPIC TO SEND MESSAGE.

It is possible to define up to 8 different text messages; within the text message it is possible to include tag values, date/time, device MAC address, etc.

For example, if you want to send an alarm when a temperature threshold is exceeded, it is sufficient to define the text message (the "PIPP0" tag contains the temperature value):

APPLY

ADD CLONE DELETE MOVE UP MOVE DOWN

PRESS "CTRL" KEY TO SELECT MORE ROWS

NR	ID	TEXT (USE {TAG} NOTATION TO INSERT THE TAG VALUE)
1	1	ALERT MAX TEMP! TEMP = {PIPP0}

Format	Meaning
%c	device Client ID
%m	device MAC Address
%M	device MAC Address without dot separator
%d	date-time
%t	timestamp (number of seconds since the "epoch")
%u	timestamp (number of milliseconds since the "epoch")

And add a rule that when the temperature exceeds the value "30", it sends the defined text:

APPLY

ADD CLONE DELETE MOVE UP MOVE DOWN

PRESS "CTRL" OR "SHIFT" KEY TO SELECT MORE ROWS

NR	ID	ENABLE	DESCRIPTION	PERIOD [ms]	IF CONDITION 1	IF CONDITION 2	IF CONDITION 3	THEN ACTION 1	
1	1	ON	TEMP ALARM	10000	ANALOG TAG TAG: PIPPO OPERATOR: > TAG: CONST VALUE: 30	AND NONE	AND NONE	SEND MESSAGE MESSAGE: ALERT MAX TEMP! TEMP = {PIPP0}	NO

13. MODIFYING SAMPLING TIME FROM MQTT

It is possible to modify, via Cloud MQTT, the transmission time of the various sending groups using the following command in JSON format:

```
{"cmd_exec": [{"<group name>": <integer value>}]}
```

where "<group name>" can be:

"grp_none" : for the NONE group

"grp_input" : for the INPUT group

"grp_alarm" : for the ALARM group

"grp_status" : for the STATUS group

"grp_cmd" : for the COMMAND group

"grp_temp" : for the TEMPERATURE group

"grp_hr" : for the HUMIDITY group

"grp_weight" : for the WEIGHT group

"grp_v" : for the VOLTAGE group

"grp_i" : for the CURRENT group

"grp_other" : for the OTHER group

while <integer value> is a positive integer greater than or equal to 1 and less than 65536.

The JSON command must be written to the topic set in the configuration (CLOUD SUBSCRIBE TOPIC FOR COMMANDS), adding the string "/info".

The command is valid only if the CLOUD Generic type is selected.

14. **RESETTING THE DEVICE TO ITS FACTORY CONFIGURATION**

The factory configuration resets all parameters to default.

To reset the device to the factory configuration it is necessary to follow the procedure below:

Z-KEY-C / Z-KEY-2ETH-C:

- 1) Remove power from the device
- 2) Turn dip switches 1 and 2 to ON
- 3) Power up the device and wait at least 10 seconds
- 4) Remove power from the device
- 5) Turn dip switches 1 and 2 to OFF
- 6) At the next restart the device will have loaded the factory configuration

R-KEY-LT-C:

- 1) Remove power from the device
- 2) Set dip switches 1 and 2 of SW2 to ON
- 3) Power up the device and wait at least 10 seconds
- 4) Remove power from the device
- 5) Turn 2 SW2 dip switches to OFF.
- 6) At the next restart the device will have loaded the factory configuration

15. **CLOCK SYNCHRONISATION**

The device does not have a backup battery for the internal clock; if it is necessary to send tags and text alarms linked to the correct time, it is required to enable date/time synchronization from an NTP server.

If the device is unable to reach the remote NTP server, it will use the date and time it had at the moment of the previous shutdown.

WARNING!

AT EVERY POWER-OFF THE DEVICE MUST BE ABLE TO RECOVER THE DATE / TIME FROM AN NTP SERVER; OTHERWISE IT WILL BE TAKEN FROM THE LAST ACQUIRED LOG.

16. **CERTIFICATES**

Certificates can be uploaded, replaced, or removed via the webserver "Cloud Setup" page.

This webserver page allows you to upload, replace, or remove the certificates used by the gateway for secure connection to the MQTT broker via TLS.

It is also possible to upload the HTTPS webserver certificate.

Certificates must be in .pem format with a maximum size of 4 KB.

The page is divided into three sections:

- ▣ MQTT CA CERTIFICATE
- ▣ MQTT CLIENT CERTIFICATE
- ▣ MQTT CLIENT CERTIFICATE PRIVATE KEY

For each section, the following are available:

an indication of the status of the uploaded file

the "Choose file" button to select a file from the PC

the upload button to send the file to the gateway

the "CLEAR ..." button to delete the currently stored file

When the "NOT PRESENT" label appears, it means that no file has yet been uploaded in that section.

16.1. MQTT CA CERTIFICATE

The CA certificate is the certificate of the Certification Authority used by the gateway to verify the identity of the MQTT broker.

This file is required when the broker uses TLS and the gateway must check that the certificate presented by the server is trustworthy.

Upload a .pem file containing:

- the CA certificate that signed the MQTT broker certificate
- or, if required by the infrastructure, the necessary certification chain

The CA certificate is typically required when:

- the MQTT broker uses a secure TLS connection
- the broker certificate is not signed by a CA already known to the system
- server verification is enabled to increase connection security

16.2. MQTT CLIENT CERTIFICATE

The client certificate identifies the gateway to the MQTT broker.

This file is required when the broker requires mutual TLS (mTLS) authentication, meaning that not only does the client verify the server, but the server also verifies the client.

Upload a .pem file containing the gateway's client certificate.

The client certificate must be uploaded only if the MQTT broker requires authentication via client certificate.

If the broker uses only username/password authentication or requires only server certificate verification, this section can remain empty.

16.3. MQTT CLIENT CERTIFICATE PRIVATE KEY

The private key is the private key associated with the client certificate.

It is required when client authentication via certificate is used, as it allows the gateway to prove ownership of the certificate uploaded in the previous section.

Upload a .pem file containing the private key corresponding to the MQTT CLIENT CERTIFICATE.

WARNING!

THE PRIVATE KEY MUST EXACTLY MATCH THE UPLOADED CLIENT CERTIFICATE. IF THE CERTIFICATE AND PRIVATE KEY DO NOT BELONG TO THE SAME PAIR, THE SECURE MQTT CONNECTION CANNOT BE ESTABLISHED.

16.4. SECURITY RECOMMENDATIONS

- Store the private key securely.
- Do not share the private key with unauthorized parties.
- Use certificates issued by a trusted CA or by your corporate PKI.
- When replacing the client certificate, also replace the corresponding private key if necessary.
- Remove unused certificates from the gateway.

16.5. File format

Files must be in PEM format.

A PEM file is a text file containing Base64-encoded data, typically delimited by headers such as:

-----BEGIN CERTIFICATE-----

-----END CERTIFICATE-----


or, for the private key:

-----BEGIN PRIVATE KEY-----

-----END PRIVATE KEY-----

17. TEMPLATE EXCEL

A Microsoft Excel™ template is available to create a .bin file to import into the gateway or vice versa. The model can be freely downloaded from the Seneca website.

MODBUS TCP/IP			SERIAL MODBUS RTU					<input type="button" value="Export CGI file..."/>  <input type="button" value="Import CGI file..."/>	
TAG NR	GATEWAY TAG NAME	GATEWAY MODBUS TCP/IP REGISTER ADDRESS	TARGET MODBUS RTU REGISTER TYPE	TARGET MODBUS RTU DATA TYPE	TARGET CONNECTED TO SERIAL PORT NR	TARGET MODBUS RTU START REGISTER	TARGET MODBUS RTU SLAVE ADDRESS	SENECA Z-KEY TAGS TEMPLATE FOR GATEWAY MODE. E	
1	TAG1	1	HOLDING REGISTER	UINT16	#1	3	2		
2	TAG2	2	HOLDING REGISTER	UINT16	#1	4	2		
3	TAG3	3	HOLDING REGISTER	UINT16	#1	5	2		
4	TAG4	5	HOLDING REGISTER	UINT16	#1	6	2		
5	TAG5	7	HOLDING REGISTER	UINT16	#1	7	2		
6	TAG6	8	HOLDING REGISTER	UINT16	#1	8	2		
7	TAG7	9	HOLDING REGISTER	UINT16	#1	9	2		
8	TAG8	10	HOLDING REGISTER	UINT16	#1	10	2		
9	TAG9	1	COIL	BIT	#1	1	3		
10	TAG10	2	COIL	BIT	#1	2	3		
11	TAG11	3	COIL	BIT	#1	3	3		
12	TAG12	4	COIL	BIT	#1	4	3		
13	TAG13	5	COIL	BIT	#1	5	3		
14	TAG14	6	COIL	BIT	#1	6	3		
15	TAG15	7	COIL	BIT	#1	7	3		
16	TAG16	8	COIL	BIT	#1	8	3		
17	TAG17	14	HOLDING REGISTER	INT16	#1	13	4		
18	TAG18	15	HOLDING REGISTER	INT16	#1	14	4		
19	TAG19	16	HOLDING REGISTER	INT16	#1	15	4		
20	TAG20	17	HOLDING REGISTER	INT16	#1	16	4		
21	TAG21	1	DISCRETE INPUT	BIT	#1	1	5		
22	TAG22	2	DISCRETE INPUT	BIT	#1	2	5		
23	TAG23	3	DISCRETE INPUT	BIT	#1	3	5		

18. INSTALLING MULTIPLE DEVICES IN A NETWORK USING THE "DHCP FAIL ADDRESS".

When the Gateway is configured with DHCP enabled but does not receive the DHCP server configuration within 2 minutes then it assumes a fail address.

This fail address is 169.254.x.y where x.y are the last two values from the MAC address.

In this way, if you force all devices to DHCP, you can install on the network even if there is no active DHCP server.

When the fail address has been activated (the relative LED stops flashing), you can launch the "Seneca Discovery Device" software and force the preferred IP address to all devices.

19. THE DB9 RS232 CABLE

The DB9 CABLE RS232 CABLE can be obtained from Seneca (it can also be purchased from the e-commerce website www.seneca.it) for connection with a DB9 RS232 device.

20. SUPPORTED MODBUS COMMUNICATION PROTOCOLS

The Modbus communication protocols supported are:

- Modbus RTU/ASCII master/slave (from #1 and #2 serial ports)
- Modbus TCP-IP Client (from the Ethernet port), up to 10 remote TCP-IP Modbus Servers

For more information on these protocols, see the website:

<http://www.modbus.org/specs.php>.

20.1. SUPPORTED MODBUS FUNCTION CODES

The following Modbus functions are supported:

- Read Coils (function 1)
- Read Discrete Inputs (function 2)
- Read Holding Registers (function 3)
- Read Input Registers (function 4)
- Write Single Coil (function 5)
- Write Single Register (function 6)
- Write multiple Coils (function 15)
- Write Multiple Registers (function 16)

 **ATTENTION!**

All 32-bit variables are contained in 2 consecutive Modbus registers
All 64-bit variables are contained in 4 consecutive Modbus registers

21. INFORMATION ABOUT MODBUS REGISTERS

The following abbreviations are used in the following chapter:

MS	Most Significant
LS	Least Significant
MSBIT	Most Significant Bit
LSBIT	Least Significant Bit
MMSW	"Most" Most Significant Word (16bit)
MSW	Most Significant Word (16bit)
LSW	Least Significant Word (16bit)
LLSW	"Least" Least Significant Word (16bit)
RO	Read Only
UNSIGNED 16 BIT	Unsigned integer register that can assume values from 0 to 65535
SIGNED 16 BIT	Signed integer register that can take values from -32768 to +32767
UNSIGNED 32 BIT	Unsigned integer register that can assume values from 0 to 4294967296
SIGNED 32 BIT	Signed integer register that can take values from -2147483648 to 2147483647
UNSIGNED 64 BIT	Unsigned integer register that can assume values from 0 to 18446744073709551615
SIGNED 64 BIT	Signed integer register that can assume values from -2^{63} to $2^{63}-1$
FLOAT 32 BIT	32-bit, single-precision floating-point register (IEEE 754) https://en.wikipedia.org/wiki/IEEE_754
BIT	Boolean register, which can take the values 0 (false) or 1 (true)

21.1. NUMBERING OF "0-BASED" OR "1-BASED" MODBUS ADDRESSES

According to the Modbus standard the Holding Registers are addressable from 0 to 65535, there are 2 different conventions for numbering the addresses: "0-BASED" and "1-BASED".

For greater clarity, Seneca shows its register tables in both conventions.



ATTENTION!

CAREFULLY READ THE DOCUMENTATION OF THE MODBUS MASTER DEVICE IN ORDER TO UNDERSTAND WHICH OF THE TWO CONVENTIONS THE MANUFACTURER HAS DECIDED TO USE

SENECA USES THE "1 BASED" CONVENTION FOR ITS PRODUCTS

21.2. NUMBERING OF MODBUS ADDRESSES WITH "0-BASED" CONVENTION

The numbering is:

HOLDING REGISTER MODBUS ADDRESS (OFFSET)	MEANING
0	FIRST REGISTER
1	SECOND REGISTER
2	THIRD REGISTER
3	FOURTH REGISTER
4	FIFTH REGISTER

Therefore, the first register is at address 0.

In the following tables, this convention is indicated with "**ADDRESS OFFSET**".

21.3. NUMBERING OF MODBUS ADDRESSES WITH "1 BASED" CONVENTION (STANDARD)

The numbering is that established by the Modbus consortium and is of the type:

HOLDING REGISTER MODBUS ADDRESS 4x	MEANING
40001	FIRST REGISTER
40002	SECOND REGISTER
40003	THIRD REGISTER
40004	FOURTH REGISTER
40005	FIFTH REGISTER

This convention is indicated with "**ADDRESS 4x**" since a 40000 is added to the address so that the first Modbus register is 40001.

A further convention is also possible where the number 4 is omitted in front of the register address:

HOLDING MODBUS ADDRESS WITHOUT 4x	MEANING
1	FIRST REGISTER
2	SECOND REGISTER
3	THIRD REGISTER
4	FOURTH REGISTER
5	FIFTH REGISTER

21.4. BIT CONVENTION WITHIN A MODBUS HOLDING REGISTER

A Modbus Holding Register consists of 16 bits with the following convention:

BIT 15	BIT 14	BIT 13	BIT 12	BIT 11	BIT 10	BIT 9	BIT 8	BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
-----------	-----------	-----------	-----------	-----------	-----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------

For instance, if the value of the register in decimal is

12300

the value 12300 in hexadecimal is:

0x300C

the hexadecimal 0x300C in binary value is:

11 0000 0000 1100

So, using the above convention, we get:

BIT 15	BIT 14	BIT 13	BIT 12	BIT 11	BIT 10	BIT 9	BIT 8	BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
0	0	1	1	0	0	0	0	0	0	0	0	1	1	0	0

21.5. MSB AND LSB BYTE CONVENTION WITHIN A MODBUS HOLDING REGISTER

A Modbus Holding Register consists of 16 bits with the following convention:

BIT 15	BIT 14	BIT 13	BIT 12	BIT 11	BIT 10	BIT 9	BIT 8	BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
-----------	-----------	-----------	-----------	-----------	-----------	----------	----------	----------	----------	----------	----------	----------	----------	----------	----------

LSB Byte (Least Significant Byte) defines the 8 bits ranging from Bit 0 to Bit 7 included, we define MSB Byte (Most Significant Byte) the 8 bits ranging from Bit 8 to Bit 15 inclusive:

BIT 15	BIT 14	BIT 13	BIT 12	BIT 11	BIT 10	BIT 9	BIT 8	BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
BYTE MSB								BYTE LSB							

21.6. REPRESENTATION OF A 32-BIT VALUE IN TWO CONSECUTIVE MODBUS HOLDING REGISTERS

The representation of a 32-bit value in the Modbus Holding Registers is made using 2 consecutive Holding Registers (a Holding Register is a 16-bit register). To obtain the 32-bit value it is therefore necessary to read two consecutive registers:

For example, if register 40064 contains the 16 most significant bits (MSW) while register 40065 contains the least significant 16 bits (LSW), the 32-bit value is obtained by composing the 2 registers:

BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
40064 MOST SIGNIFICANT WORD															

BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT	BIT
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
40065 LEAST SIGNIFICANT WORD															

$$Value_{32bit} = Register_{LSW} + (Register_{MSW} * 65536)$$

In the reading registers it is possible to swap the most significant word with the least significant word, therefore it is possible to obtain 40064 as LSW and 40065 as MSW.

