



INSTALLATION MANUAL

Z-D-IN

PRELIMINARY WARNINGS

The word **WARNING** preceded by the symbol  indicates conditions or actions that put the user's safety at risk. The word **ATTENTION** preceded by the symbol  indicates conditions or actions that might damage the instrument or the connected equipment. The warranty shall become null and void in the event of improper use or tampering with the module or devices supplied by the manufacturer as necessary for its correct operation, and if the instructions contained in this manual are not followed.



WARNING: The full content of this manual must be read before any operation. The module must only be used by qualified electricians. Specific documentation is available via QR-CODE shown on page 1.



The module must be repaired and damaged parts replaced by the Manufacturer. The product is sensitive to electrostatic discharges. Take appropriate measures during any operation.



Electrical and electronic waste disposal (applicable in the European Union and other countries with recycling). The symbol on the product or its packaging shows the product must be surrendered to a collection centre authorized to recycle electrical and electronic waste.



DOCUMENTATION
Z-D-IN




SENECA s.r.l.; Via Austria, 26 – 35127 – PADOVA – ITALY; Tel. +39.049.8705359 - Fax +39.049.8706287

CONTACT INFORMATION

| | | | |
|-------------------|--|---------------------|--|
| Technical support | support@seneca.it | Product information | sales@seneca.it |
|-------------------|--|---------------------|--|

This document is the property of SENECA srl. Copies and reproduction are prohibited unless authorised.
The content of this document corresponds to the described products and technologies.
Stated data may be modified or supplemented for technical and/or sales purposes.

MODULE LAYOUT

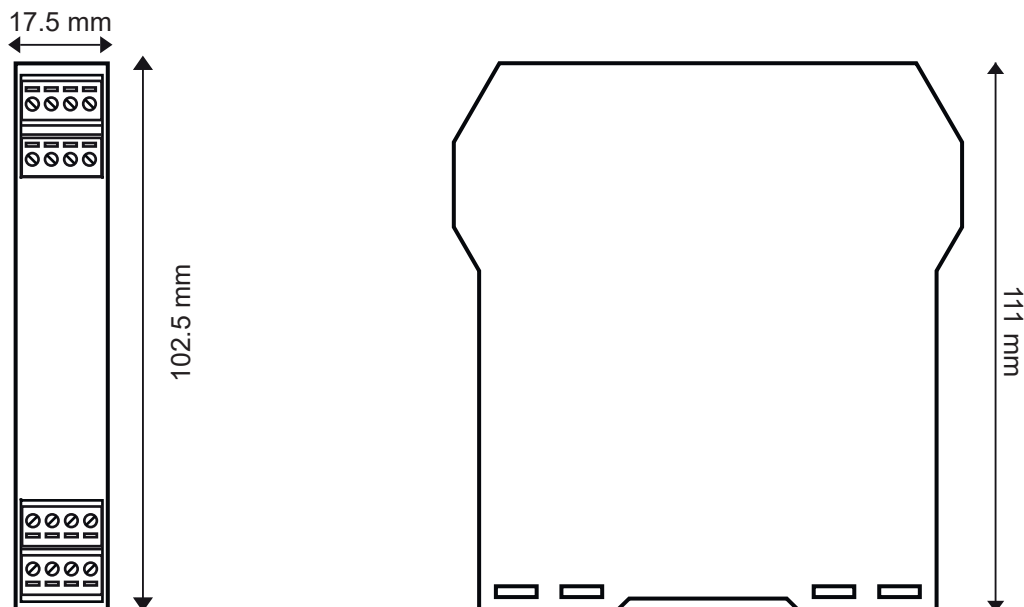




Dimensions LxHxD 17.5 x 102.5 x 111 mm; **Weight:** 110 g; **Enclosure:** PA6, black

SIGNALS VIA LED ON FRONT PANEL


| LED | STATUS | LED meaning |
|-------------|----------|----------------------------------|
| PWR Green | ON | The device is powered correctly |
| FAIL yellow | ON | Anomaly or fault |
| FAIL yellow | Flashing | Wrong setup |
| RX Red | ON | Connection check |
| RX Red | Flashing | Receipt of packet completed |
| TX Red | Flashing | Transmission of packet completed |

TECHNICAL SPECIFICATIONS
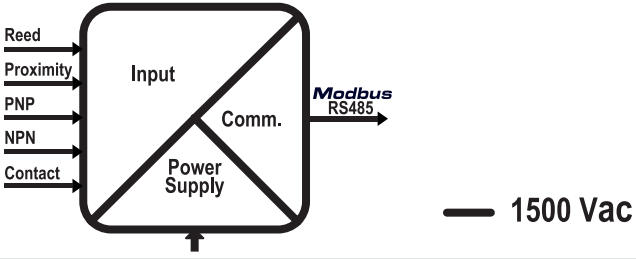
| | |
|--------------------------|---|
| CERTIFICATIONS |   https://www.seneca.it/products/z-d-in/doc/CE_declaration |
| INSULATION |  |
| POWER SUPPLY | Voltage: 10 ÷ 40Vdc; 19 ÷ 28Vac; 50 ÷ 60Hz Absorption: Typical: 1.5W @ 24Vdc, Max: 2.5W |
| USE | Use in environments with pollution degree 2. The power supply unit must be class 2. |
| ENVIRONMENTAL CONDITIONS | <i>Temperature:</i> -10 ÷ + 65°C <i>Humidity:</i> 30% ÷ 90% at 40°C non condensing. <i>Altitude:</i> Up to 2,000 m above sea level <i>Storage temperature:</i> -20 ÷ + 85°C <i>Degree of protection:</i> IP20. |
| ASSEMBLY | IEC EN60715, 35mm DIN rail in vertical position. |
| CONNECTIONS | 3-way removable screw terminals, 5mm pitch, 2.5mm ² section Rear connector IDC10 for DIN bar 46277 |

| INPUTS | |
|-----------------------------|--|
| Type of supported inputs: | Reed, Contatto, proximity PNP, NPN (with external resistance) |
| Number of channels: | 5 (4+ 1) self-powered at 16Vdc |
| Totalizer maximum frequency | 100 Hz for channels from 1 to 5 10 kHz only for input 5 (after setting) |
| U_L (status OFF) | 0 ÷ 10 Vdc, $I < 2\text{mA}$ |
| U_H (status ON) | 12 ÷ 30 Vdc; $I > 3\text{mA}$ |
| Absorbed current | 3mA (for each active input) |
| Protection | By means of transient TVS suppressors of 600 W/ms. |


CONFIGURATION OF FACTORY SETTINGS

| | |
|--|---|
| All DIP-switches in | OFF  |
| Communication parameters of ModBUS protocol: | 38400 8, N, 1 Address 1 |
| Input status inversion: | DISABLED |
| Digital filter | 3ms |
| Totalizers | Counting to increment |
| Channel 5 at 10 KHz | Disabled |
| ModBUS latency time | 5ms |

ModBUS CONNECTION RULES

- 1) Install the modules in the DIN rail (120 max)
- 2) Connect the remote modules using cables of an appropriate length. The following table shows cable length data:
 - Bus length: maximum length of the Modbus network according to the Baud Rate. This is the length of the cables that connect the two farthest modules (see Diagram 1).
 - Derivation length: maximum length of a derivation 2 m (see Diagram 1).


Diagram 1

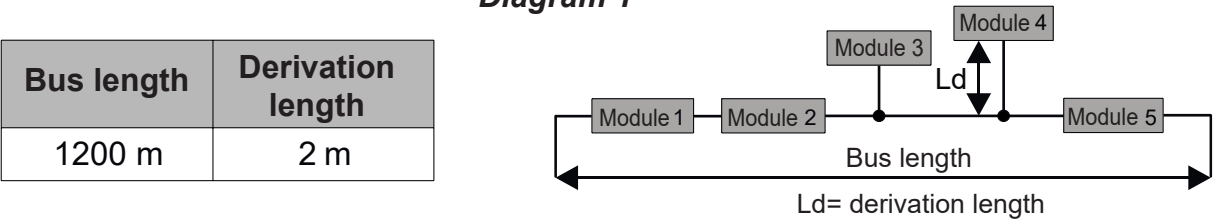

For maximum performance, it is recommended to use special shielded cables, such as BELDEN 9841.

IDC10 CONNECTOR

Power supply and Modbus interface are available using the Seneca DIN rail bus, via the IDC10 rear connector, or the Z-PC-DINAL2-17.5 accessory.

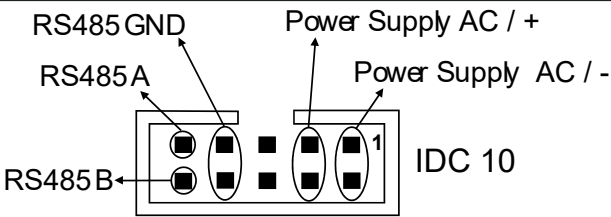

Rear Connector (IDC 10)
The meaning of the various pins on the IDC10 connector is shown in the figure if you wish to supply signals directly via it.

SETTING THE DIP-SWITCHES

The position of the DIP-switches defines the Modbus communication parameters of the module: Address and Baud Rate
The following table shows the values of the Baud Rate and the Address according to the setting of the DIP-switches:

| DIP-Switch status | | | | | |
|-------------------|-------------|--------------|-------------|----------|------------|
| SW1 POSITION | BAUD RATE | SW1 POSITION | ADDRESS | POSITION | TERMINATOR |
| 1 2 3 4 5 6 7 8 | | 3 4 5 6 7 8 | | 10 | |
| - - - - - | 9600 | | #1 | | Disabled |
| - - - - - | 19200 | | #2 | | Enabled |
| - - - - - | 38400 | ... | #... | | |
| - - - - - | 57600 | | #63 | | |
| - - | From EEPROM | | From EEPROM | | |


Note: When DIP switches 3 to 8 are OFF, the communication settings are taken from programming (EEPROM).

Note 2: The RS485 line must be terminated only at the ends of the communication line.

The settings of the dip-switches must be compatible with the settings on the registers.

The description of the registers is available in the USER MANUAL.


ELECTRICAL CONNECTIONS

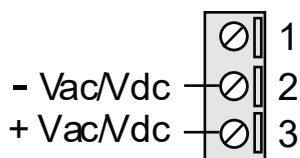

Power supply:

The upper limits must not be exceeded in order to avoid serious damage to the module.

If the power supply source is not protected against overload, a safety fuse must be installed in the power supply line with a value suitable to what the situation requires.

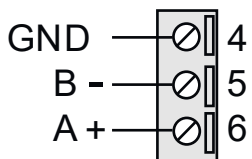


ModBus RS485

Connection for RS485 communication using the MODBUS master system as an alternative to the Z-PC-DINx bus.

N.B.: The indication of the RS485 connection polarity is not standardised and in some devices may be inverted.

INPUTS

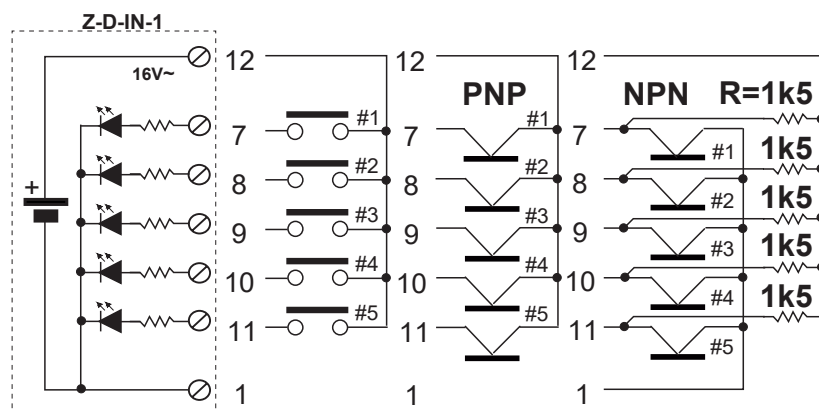

INPUT SETTINGS:

Default settings:

Input #1: 0 – 100 Hz (16BIT)

Input #2: 0 – 100 Hz (16BIT)

Input #3: 0 – 100 Hz (16BIT)

Input #4: 0 – 100 Hz (16BIT)

Input #5: 0 – 100 Hz (16BIT)

Input #5 can be set as totalizer:

Input #5: 0 – 10 kHz (32BIT)

! ATTENTION

The upper power supply limits must not be exceeded, as this might cause serious damage to the module. Switch the module off before connecting inputs and outputs.

To meet the electromagnetic immunity requirements:

- use shielded signal cables;
- connect the shield to a preferential instrumentation earth system;
- a fuse with a MAX. rating of 0,5 A must be installed near the module.
- separate shielded cables from other cables used for power installations (inverters, motors, induction ovens, etc...).
- make sure that the module is not supplied with a supply voltage higher than that indicated in the technical specifications in order not to damage it.