

INSTALLATION MANUAL

MyALARM2-3

Advanced GSM/GPRS device for telecontrol

EN



CE



 **SENECA**

CERTIFICATE N. 316-RENE - REGISTRATORIO KUBERLIT-427


adotta un sistema di gestione per la qualità certificato
ISO 9001:2008

SENECA s.r.l.

Headquarters: Via Austria, 26 – 35127 – PADOVA – ITALY
Phone +39.049.8705355 - 8705359 - Fax +39.049.8706287
Manuals and configuration software are available at website: www.seneca.it

This document is property of SENECA Srl. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. This informations may be modified or integrated for technical and / or commercial requirements.

MODULE LAYOUT

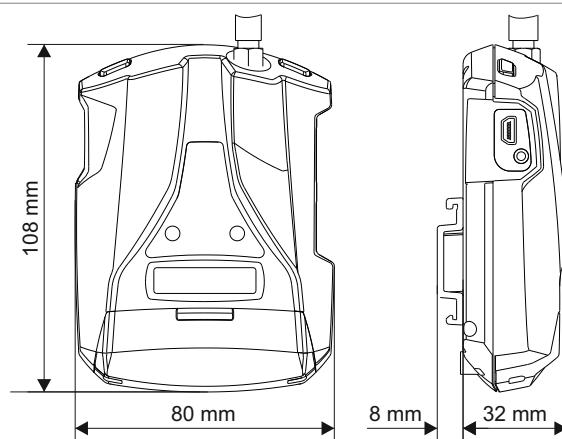

Weight	150 g.	Case	Polycarbonate / ABS material.
---------------	--------	-------------	-------------------------------

LED SIGNALLING ON FRONT PANEL

LED	Status	LED's meaning
GSM (Yellow)	Slow Blinking 0.8s ON ■ 0.8s OFF □	■■■■□□□■■■■□□□ MyAlarm2-3 is Connected to GSM Network
	Fast Blinking 0.1s ON ■ 0.1s OFF □	■□□□■□■□■□■□■□ GSM Network Searching or Missing Signal
PWR (Green)	ON ■	MyAlarm2-3 Powered ON
	OFF □	MyAlarm2-3 Turned OFF
	Fast Blinking 0.2s ON ■ 0.2s OFF □	■□■□■□■□■□■□■□ Micro SD card Access
	Medium Blinking 2.8s ON ■ 0.4s OFF □	■■■■■■■■■■■■■■■■■■□□ Active Datalogger Function

GENERAL CHARACTERISTICS

- GSM/GPRS module for civil and industrial applications, for domotics, for safety: alarm management system and datalogger
- Display LCD 128 x 32 Dots
- Lithium-ion rechargeable battery, autonomy up to: 8 h
- Nr.4 digital inputs (available on internal terminals)
- Nr.2 analog inputs V / mA (available on internal terminals)
- Nr.1 temperature sensor input (NTC)
- Nr.1 GSM replaceable antenna on SMA connector
- Power ON / OFF button and display scrolling button
- Power Supply / Device Status LED and GSM status LED
- SIM card slot (SIM dimensions: 15 x 25 mm)
- Micro SD card slot
- Micro USB plug in for internal battery charging and module configuration
- Nr.2 relay digital outputs (optional board)

MOTHER BOARD SPECIFICATIONS

DIGITAL INPUTS	4 inputs
<i>Type</i>	Reed, contact, PNP, Pulscap
<i>Max. Frequency</i>	30 Hz
<i>Threshold OFF</i>	0 – 3 V _{DC} , I < 1mA
<i>Threshold ON</i>	6 – 24 V _{DC} , I > 3mA
ANALOG INPUTS	2 inputs
<i>Type</i>	Voltage 0 – 30 V _{DC} / Current 0 – 20 mA
<i>Accuracy</i>	0.1% of full-scale
VOLTAGE OUTPUT	+12 V _{DC} , 50 mA (Max. current)
TEMPERATURE SENSOR	Termistor NTC
USB PORT	1 micro USB socket for battery charging and device configuration
DISPLAY	LCD 128 x 32 dots, visible area 39 mm x 8.6 mm
Micro SD slot <i>Type / Memory</i>	Push-Push for SD card and SD HC card / max 32GB
SIM slot <i>Type</i>	Push-Push for mini SIM (15 x 25 mm)
GSM	Quad band (850 / 900 / 1800 / 1900 MHz)

RELAYS (OPTIONAL) BOARD SPECIFICATIONS

DIGITAL OUTPUTS	2 outputs
<i>Type</i>	Relay 3 A max (on common terminal) - 250V SPST (with common terminal)


TECHNICAL SPECIFICATIONS

POWER SUPPLY	
<i>Voltage</i>	6 – 15 V _{DC} , 500 mA Max.
<i>Consumption</i>	3.5 W Max.
<i>Internal battery</i>	Lithium ions 3.7 V - 1000 mAh, rechargeable not replaceable. Dimensions: 53 mm x 34 mm x 6 mm
ENVIRONMENTAL CONDITIONS	Seneca recommends use from 0 to 45 ° C for proper operation.
<i>Temperature</i>	With external power supply: -20 – +55°C. With battery power supply (in discharge): -20 – +45°C. Possible recharging range: 0 – +45°C.
<i>Humidity</i>	30% – 90% non condensing.
<i>Storage Temperature</i>	from -20 °C to +20 °C < 1 year from -20 °C to +45 °C < 3 months from -20 °C to +60 °C < 1 month
<i>Protection degree</i>	IP20

TECHNICAL SPECIFICATIONS

STANDARDS	ETSI EN 301 489-7 EN301 511 EN301 489-1 IEC / EN 60950
CONNECTIONS	Push-wire terminals, pitch 3,5 mm, Micro USB socket SMA connector for GSM Antenna.
INCLUDED ACCESSORIES	12 V $\overline{\text{=}}$ power supply (with crimp terminals), DIN rail IEC EN 60715 support, Nr. 2 screws, Nr. 2 expansion plugs for wall fixing, GSM antenna, installation manual and USB cable.
CPU	ARM 100 MHz 32bit
INTERNAL MEMORIES	FLASH 2M Byte (log)

CASE SYMBOLS

	ON/OFF button (PWR)	 SIM	SIM card slot
	GSM antenna		micro SD card slot
	Display scroll button (SCR)		micro USB socket

INSTALLATION RULES

The device can be installed on a wall or on a DIN rail EN 60715, in vertical position.
Never place this device inside metal cabinets or near heat sources.


INSTALLATION ON IEC EN 60715 DIN RAIL AND WALL FIXING

Insertion on DIN rail:

- 1) Insert the three hooks of support for DIN rail into the three holes in the rear side of the MyALARM2-3 and fix the device to the support.
- 2) Hook support and device to the CEI EN 60715 DIN rail.

Wall mounting:

- 1) The two holes on the support for DIN rail allows to fix it to the wall with included plugs and screws.
- 2) Fix the device on the support to the wall by the three holes in the rear side of the case.

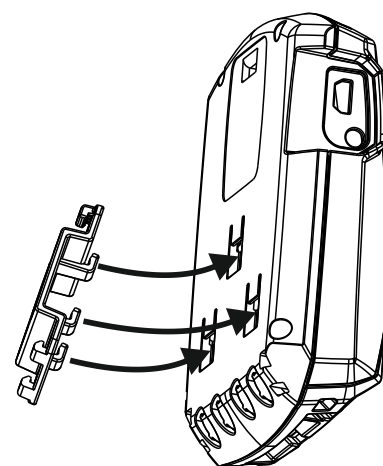

PRELIMINARY WARNINGS



Disposal of electrical & electronic equipment (applicable throughout the EU and other countries with separate collection programs). The symbol found on this product or on its packaging, indicates that this product it must be handed over to an authorised collection point for **the recycling of electrical and electronic equipments**.



Before performing any operation it is mandatory to read the full contents of this manual. The module may only be used by qualified and skilled technicians in the field of electric installation. Specific documentation is available for download at website: www.seneca.it.



Only the Manufacturer is authorized to repair the module or to replace damaged parts. The product is susceptible to electrostatic discharge, take appropriate countermeasures during any operation.



The warranty is null and void in case of improper use or tampering of the module or devices supplied by the Manufacturer, necessary for its correct operation and if the instructions in this manual have not been complied with.

SWITCHING THE DEVICE ON FOR THE FIRST TIME

The MyALARM2-3 is delivered in “*shipping mode*”.

This mode avoid unnecessary discharge of the battery during storage and shipping.

When you switch ON the device, for the first time, please supply power by Usb port or by the included power supply. This procedure allows the exit from “*shipping mode*”.

WARNING: When the device is turned ON for the first time, it must be supplied, without any interruptions, for at least 4 hours in order to charge the internal batteries.

• POWER ON BUTTON AND SCROLL BUTTON


The device has the PWR button, placed in the upper left side (front view).

By pressing this button the module can be switched on.

Hold down the PWR button for a few seconds to turn off the module.

The device has the SCR button, placed in the upper right side (front view).

By pressing of this button you can scroll the display parameters.

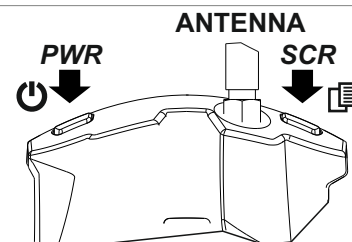


• USB PORT AND POWER SUPPLY

The device has a micro USB socket placed on the left side of case, which can be used to configure the device, to update the firmware and to recharge the internal battery.

You can recharge the internal battery with:

- The included 12 V power supply connected to the terminals + and - (GND).
- A PC through the USB socket.
- An USB power supply (accessory) through the USB socket.

Power supply the device from USB socket is not suitable for fixed installations, or configurations where relays or digital inputs are used.

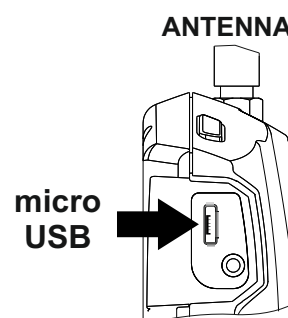


• AUTO POWER-OFF

If the display indicates "**LOW BAT**" then the internal battery is almost empty and the device switches off automatically after 60 seconds.


To recharge the battery to an appropriate value: power supply the device with one of the above recommended ways.

SAFETY INFORMATIONS

The MyALARM2-3 has 15 push-wire terminals inside of the case
 For access to the terminals: unscrew the screw in the center of the black top cover placed in the lower part of the case, lift and remove the cover.
 In the figure on side, the top cover has been removed.

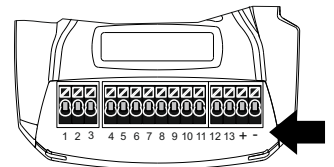


CAUTION: If the relay board is present, then the mobile wiring of the cables connected to the terminals is not allowed. To conveying the cables outwards from the terminals in order and in safety conditions, use the **four detachable passages** located at the rear of the enclosure. When the wiring is finished, fix the black cover on the device, with the screw, to prevent any accidental contact.

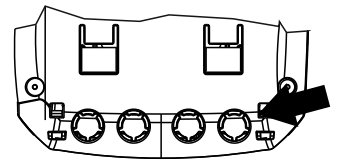


ELECTRICAL CONNECTIONS

• INSERTION AND REMOVAL FROM THE TERMINALS WITH PUSH-WIRE CONNECTION


Insertion of a solid cable

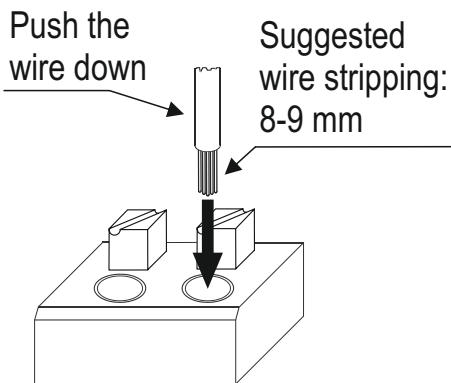

Insertion of a flexible cable

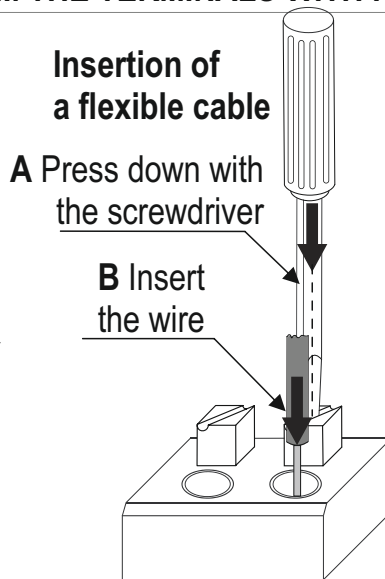




Extraction of a cable

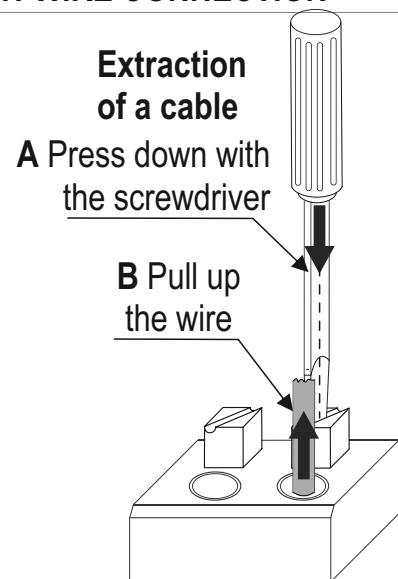


• PUSH-WIRE TERMINALS

(*) Available only with relay board (optional)

Digital output 1 - relay N.O. (*)
 Relays common (*)
 Digital output 2 - relay N.O. (*)

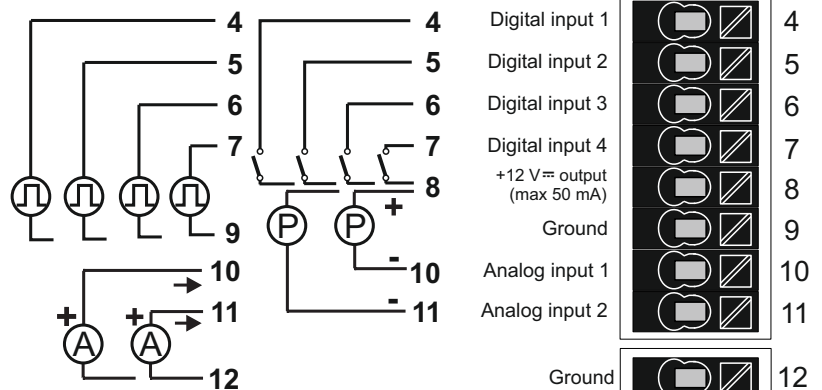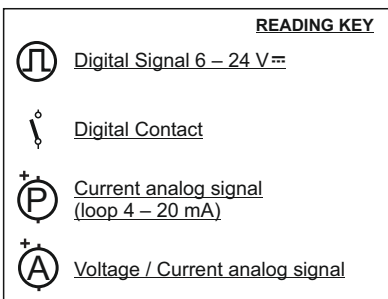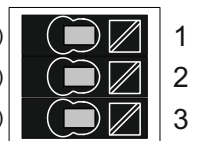

(**) Recommended: connect a protection fuse by 1 A

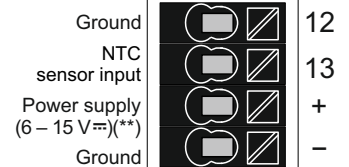


SIM-CARD AND SD-CARD INSERTION

• SIM CARD INSERTION


MyALARM2-3 has a SIM slot, placed in the right side of the case.
Before inserting the SIM card into the slot, make sure that the SIM card's contacts are facing to the left (as shown in the figure).

• MICRO SD CARD INSERTION

MyALARM2-3 has a SD card slot, placed in the right side of the case.
The SD card can be used for data logging and for MyALARM3 firmware update.
Before inserting the SD card into the slot, make sure that the SD card's contacts are facing to the left (as shown in the figure).

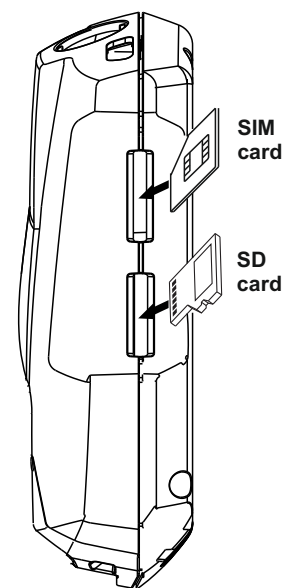

OPTIONS

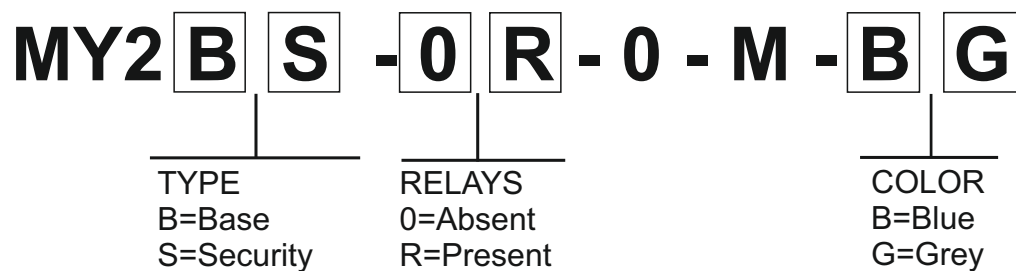

EXAMPLE:

«MY2B-R-0-M-G» MyALARM2-3 Base with two relay outputs, push-wire terminals and grey case.

ORDER CODES

Code	Description

CONTACTS

Technical support	support@seneca.it
Product Informations	sales@seneca.it